

PV Grid-Connected Inverter Quick Installation Guide

SG36CX-US/SG60CX-US





- Contents may be periodically updated or revised due to product development. The information in this guide is subject to change without notice. In no case shall this guide substitute for the user manual or related notes on the device.
- . Make sure to read over, fully understand and strictly follow the detailed instructions of the user manual and other related regulations. Visit http://support.sungrowpower.com/, choose "PV Inverters" and search for the device model on the "Products" tab page to view or obtain the user manual.
- All operations can be performed only by qualified personnel, that must be trained in the installation and commissioning of the electrical system, as well as the dealing with hazards, have knowledge of the manual and of the local regulations and directives
- Before installation, check that the package contents are intact and complete against the packing list. Contact SUNGROW or the distributor in case of any damaged or missing components.
- The cable must be intact and well insulated. Operation personnel must wear proper personal protective equipment (PPE) all
- Any violation could result in personal death or injury or device damage, and will void the warranty.

Safety

Please follow the safety instructions related to the PV strings and the utility grid. Otherwise, SUNGROW shall not be held liable for any damage caused.



↑ DANGER

Lethal voltage!

- PV strings will produce electrical power when exposed to sunlight and can cause a lethal voltage and an electric shock.
- Only qualified personnel can perform the wiring of the PV panels.
- All electrical connections must be in accordance with local and national standards.
- Only with the permission of the utility grid, the inverter can be connected to the utility grid.
- Do not open the enclosure at any time. Unauthorized opening will void guarantee and warranty claims and in most cases terminate the operating license.
- When the enclosure lid is removed, live components can be touched which can result in death or serious injury due to electric shock

All the warning labels and nameplate on the inverter body must be clearly visible and not be removed, covered or pasted.



Risk of burns due to hot components!

Do not touch any hot parts (such as heat sinks) during operation. Only the DC and AC switch can safely be touched at any



∧ NOTICE

Only qualified personnel can perform the country setting.

Unauthorized alteration of the country setting may cause a breach of the type-certificate marking.

Security Declaration

· For details on the product's network security vulnerability response process and vulnerability disclosure, please scan the QR code on the right or visit the following website:

https://en.sungrowpower.com/security-vulnerability-management


· For more information on network security, please refer to the user manual of the communication module or the Data Logger that comes with the product.




The warning label on the inverter body are as follows.




Scope of Delivery

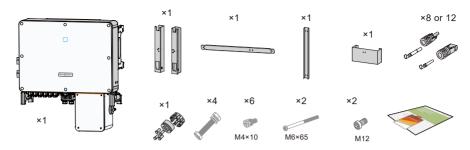


Mounting location

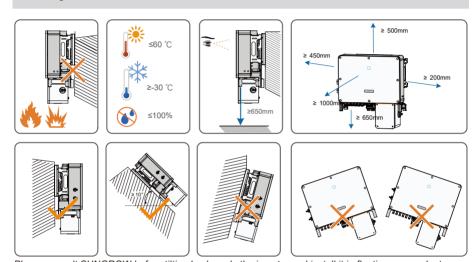


Please consult SUNGROW before tilting backwards the inverter and install it in floating power plants.

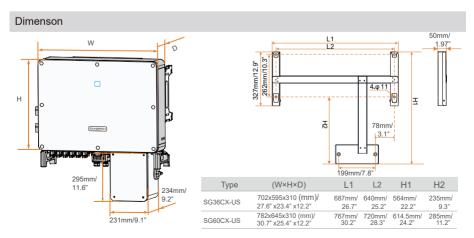


Mounting

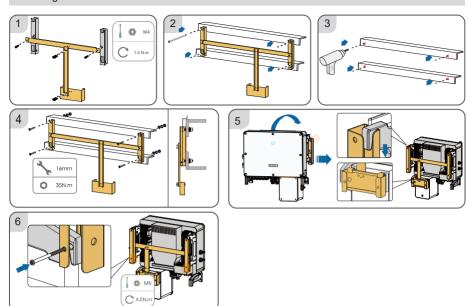


PE Connection

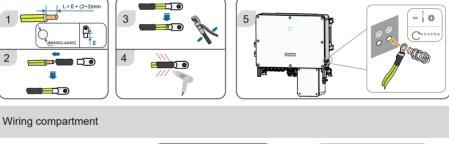


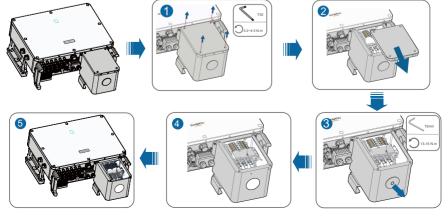



AC Connection

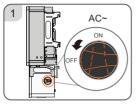





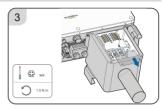

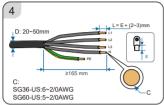


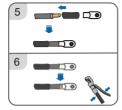

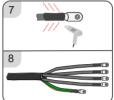


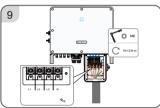





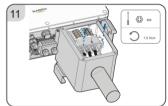


DC Connection

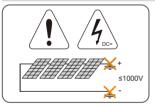


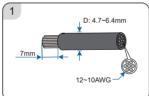


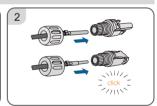




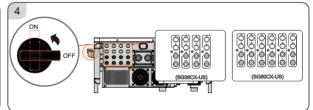

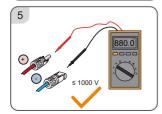


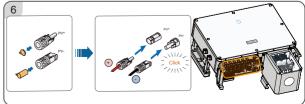


RS485 Communication Connection

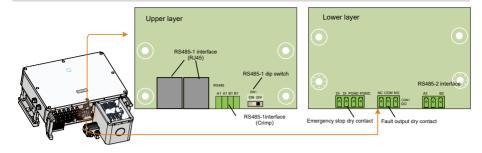



Crimp

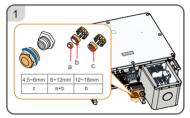



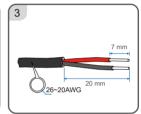


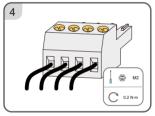

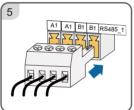





RJ45

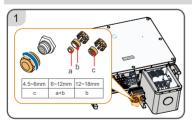




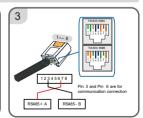


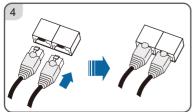




Power on

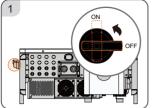

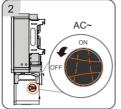

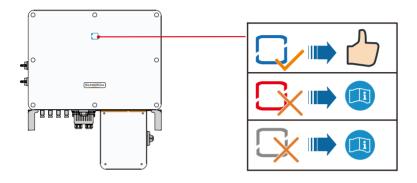



More information in the QR code or at http://support.sungrowpower.com/

