

# **User Manual**

# 1-Phase PV Grid-Connected Inverter

SG5.0RS-ADA / SG8.0RS / SG9.0RS / SG10RS

SUNGROW

# **All Rights Reserved**

#### **All Rights Reserved**

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

#### **Trademarks**

**SUNGROW** and other SUNGROW trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

#### **Software Licenses**

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

# **About This Manual**

The manual mainly contains the product information, as well as guidelines for installation, operation, and maintenance. The manual does not include complete information about the photovoltaic (PV) system. Readers can get additional information at **www.sungrowpower. com** or on the webpage of the respective component manufacturer.

#### Validity

This manual is valid for the following model of low-power grid-connected PV string inverters:

- SG5.0RS-ADA
- SG8.0RS
- SG9.0RS
- SG10RS

It will be referred to as "inverter" hereinafter unless otherwise specified.

#### **Target Group**

This manual is intended for professional technicians who are responsible for installation, operation, and maintenance of inverters, and users who need to check inverter parameters.

The inverter must only be installed by professional technicians. The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

#### **How to Use This Manual**

Please read this manual carefully before using the product and keep it properly at a place for easy access.

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from **support.sungrowpower.com** or sales channels.

#### **Security Declaration**

For details on the product's network security vulnerability response process and vulnerability disclosure, please visit the following website: https://en.sungrowpower.com/security-vulnerability-management.

For more information on network security, please refer to the user manual of the communication module or the Data Logger that comes with the product.

#### **Symbols**

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance in an efficient way.

Please carefully understand the meaning of these warning symbols to better use the manual.

#### **▲** DANGER

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

#### WARNING

Indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

#### **A** CAUTION

Indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

#### NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.



"NOTE" indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

# Contents

Αl	ll Rights Reserved	
Αl	bout This Manual	II
1	Safety Instructions	1
	1.1 Unpacking and Inspection	2
	1.2 Installation Safety	3
	1.3 Electrical Connection Safety	3
	1.4 Operation Safety	5
	1.5 Maintenance Safety	5
	1.6 Disposal Safety	7
2	Product Description	8
	2.1 System Introduction	8
	2.2 Product Introduction	10
	2.3 Symbols on Product	12
	2.4 LED Panel	13
	2.5 Circuit Diagram	14
	2.6 Function Description	15
3	Unpacking and Storage	20
	3.1 Unpacking and Inspection	20
	3.2 Inverter Storage	20
4	Mechanical Mounting	22
	4.1 Safety During Mounting	22
	4.2 Location Requirements	23
	4.2.1 Installation Environment Requirements	24
	4.2.2 Carrier Requirements	26
	4.2.3 Angle Requirements	26
	4.2.4 Clearance Requirements	27
	4.3 Installation Tools	27
	4.4 Moving the Inverter	29
	4.5 Installing Mounting-bracket	29
	4.6 Installing the Inverter	30
	4.7 Installing Optimizer(Optional)	32

	4.8 Installing WiMeter-S(for SG5.0RS-ADA)	33
5	Electrical Connection	34
	5.1 Safety Instructions	34
	5.2 Terminal Description	36
	5.3 Electrical Connection Overview	37
	5.4 External Protective Grounding Connection	39
	5.4.1 External Protective Grounding Requirements	40
	5.4.2 Connection Procedure	40
	5.5 AC Cable Connection	42
	5.5.1 AC Side Requirements	42
	5.5.2 Connecting the AC Cable	43
	5.6 DC Cable Connection	45
	5.6.1 PV Input Configuration	47
	5.6.2 Assembling the PV Connectors	48
	5.6.3 Installing the PV Connectors	49
	5.7 WiNet-S / WiNet-S2 Connection	53
	5.7.1 Ethernet Communication	54
	5.7.2 WLAN Communication	56
	5.8 Smart Meter Connection	57
	5.8.1 Single-phase Wireless Meter Connection(for SG5.0RS-ADA)	60
	5.9 DRM Connection	60
6	Commissioning	65
	6.1 Inspection Before Commissioning	65
	6.2 Powering on the System	65
	6.3 App Preparation	66
	6.4 Creating a Plant	66
	6.5 Initializing the Device	74
	6.6 Configuring the Plant	78
	6.7 Optimizer Physical Layout (Optional)	81
	6.8 Single-phase Wireless Meter Networking Procedure (for SG5.0RS-	
	ADA)	82
7	iSolarCloud App	83
	7.1 About iSolarCloud	
	7.2 Install iSolarCloud	
	7.3 User Identity	
	7 4 Device Commissioning	85

8	System Decommissioning	86
	8.1 Disconnecting the Inverter	86
	8.2 Dismantling the Inverter	86
	8.3 Disposal of Inverter	87
9	Troubleshooting and Maintenance	88
	9.1 Troubleshooting	88
	9.2 Maintenance	97
	9.2.1 Maintenance Notices	97
	9.2.2 Quick Shutdown	98
	9.2.3 Routine Maintenance	99
10	) Appendix	100
	10.1 Technical Data	
	10.2 Quality Assurance	105
	10.3 Contact Information	106

# 1 Safety Instructions

When installing, commissioning, operating, and maintaining the product, strictly observe the labels on the product and the safety requirements in the manual. Incorrect operation or work may cause:

- Injury or death to the operator or a third party.
- · Damage to the product and other properties.

#### **⚠** WARNING

- Do not perform any operation on the product (including but not limited to, handling, installing, powering on, or maintaining the product, performing electrical connection, and working at heights) in harsh weather conditions, such as thunder and lightning, rain, snow, and Level 6 or stronger winds. SUNGROW shall not be held liable for any damage to the device due to force majeure, such as earthquakes, floods, volcanic eruptions, mudslides, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weathers.
- In case of fire, evacuate from the building or product area and call the fire alarm.
   Re-entry into the burning area is strictly prohibited under any circumstances.

#### NOTICE

- Tighten the screws with the specified torque using tools when fastening the product and terminals. Otherwise, the product may be damaged. And the damage caused is not covered by the warranty.
- Learn how to use tools correctly before using them to avoid hurting people or damaging the device.
- Maintain the device with sufficient knowledge of this manual and use proper tools.

1 Safety Instructions User Manual

 The safety instructions in this manual are only supplements and cannot cover all the precautions that should be followed. Perform operations considering actual onsite conditions.

- SUNGROW shall not be held liable for any damage caused by violation of general safety operation requirements, general safety standards, or any safety instruction in this manual.
- When installing, operating, and maintaining the product, comply with local laws and regulations. The safety precautions in this manual are only supplements to local laws and regulations.
- During the product transport, installation, wiring, maintenance, etc., the materials and tools prepared by users must meet the requirements of applicable local laws and regulations, safety standards, and other specifications. SUNGROW shall not be held liable for any damage to the product caused by the adoption of materials and tools that fail to meet the above-mentioned requirements.
- Operations on the product, including but not limited to, handling, installing, wiring, powering on, maintenance, and use of the product, must not be performed by unqualified personnel. SUNGROW shall not be held liable for any damage to the product resulting from operations done by unqualified personnel.
- Where the transport of the product is arranged by users, SUNGROW shall not be held liable for any damage to the product that is caused by users themselves or the third-party transport service providers designated by the users.
- SUNGROW shall not be held liable for any damage to the product caused by the negligence, intent, fault, improper operation, and other behaviors of users or third-party organizations.
- SUNGROW shall not be held liable for any damage to the product arising from reasons unrelated to SUNGROW.

# 1.1 Unpacking and Inspection

#### **▲** WARNING

- · Check all safety signs, warning labels and nameplates on devices.
- The safety signs, warning labels and nameplates must be clearly visible and cannot be removed or covered before the device is decommissioned.

#### NOTICE

After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems with the above inspection items, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.





User Manual 1 Safety Instructions

### 1.2 Installation Safety

#### **A** DANGER

Make sure there is no electrical connection before installation.

· Before drilling, avoid the water and electricity wiring in the wall.

#### **A** CAUTION

Improper installation may cause personal injury!

- If the product supports hoisting transport and is hoisted by hoisting tools, no one is allowed to stay under the product.
- When moving the product, be aware of the product weight and keep the balance to prevent it from tilting or falling.

#### NOTICE

Before operating the product, must check and ensure that tools to be used have been maintained regularly.

## 1.3 Electrical Connection Safety

#### **A** DANGER

- Before electrical connections, please make sure that the inverter is not damaged, otherwise it may cause danger!
- Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!

#### **▲** DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.
- The inverter must not be connected to a PV string that requires positive or negative grounding.

1 Safety Instructions User Manual

#### **▲** DANGER

Danger to life due to a high voltage inside the inverter!

- Be sure to use special insulation tools during cable connections.
- Note and observe the warning labels on the product, and perform operations strictly following the safety instructions.
- Respect all safety instructions listed in this manual and other pertinent documents.

#### **MARNING**

Damage to the product caused by incorrect wiring is not covered by the warranty.

- · Electrical connection must be performed by professionals.
- All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned.

#### **M** WARNING

- Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.
- During the installation and operation of the inverter, please ensure that the positive or negative poles of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.
- Do not connect any load between the inverter and the AC circuit breaker directly connected to it, so as to prevent the switch from tripping by mistake.
- Determine the specifications of AC circuit breakers strictly in compliance with the applicable local laws and regulations and safety standards or the recommendation by SUNGROW. Otherwise, the switch may not open in time in the event of something abnormal, which may then lead to safety incidents.

#### NOTICE

Comply with the safety instructions related to PV strings and the regulations related to the local grid.

User Manual 1 Safety Instructions

### 1.4 Operation Safety

#### **▲** DANGER

When routing cables, ensure a distance of at least 30 mm between the cables and heat-generating components or areas to protect the insulation layer of cables from aging and damage.

When the product is working:

- Do not touch the product enclosure.
- · It is strictly forbidden to plug and unplug any connector on the inverter.
- Do not touch any wiring terminal of the inverter. Otherwise, electric shock may occur.
- Do not disassemble any parts of the inverter. Otherwise, electric shock may occur.
- It is strictly forbidden to touch any hot parts of the inverter (such as the heat sink). Otherwise, it may cause burns.
- Do not connect or remove any battery. Otherwise, electric shock may occur.
- Do not connect or remove any PV string or any PV module in a string. Otherwise, electric shock may occur.
- If the inverter is equipped with a DC switch, do not operate it. Otherwise, it may cause device damage or personal injury.

Do not take other actions, such as setting parameters or cutting off power, during the process of inverter firmware update, to avoid update failure.

# 1.5 Maintenance Safety

#### **▲** DANGER

Risk of inverter damage or personal injury due to incorrect service!

- Before maintenance, disconnect the AC circuit breaker on the grid side and then the DC switch. If a fault that may cause personal injury or device damage is found before maintenance, disconnect the AC circuit breaker and wait until the night before operating the DC switch. Otherwise, a fire inside the product or an explosion may occur, causing personal injuries.
- After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter.
- Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

1 Safety Instructions User Manual

#### **▲** DANGER

Touching the power grid or the contact points and terminals on the inverter connected to the power grid may lead to electric shock!

 The power grid side may generate voltage. Always use a standard voltmeter to ensure that there is no voltage before touching.

#### **A** CAUTION

To prevent misuse or accidents caused by unrelated personnel, post prominent warning signs or demarcate safety warning areas around the product.

#### NOTICE

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

#### NOTICE

- If the paint on the inverter enclosure falls or rusts, repair it in time. Otherwise, the inverter performance may be affected.
- Do not use cleaning agents to clean the inverter. Otherwise, the inverter may be damaged, and the loss caused is not covered by the warranty.
- As the inverter contains no parts that can be maintained, never open the enclosure of the inverter or replace any internal components without authorization.
   Otherwise, the loss caused is not covered by the warranty.
- Do not open the maintenance door in rainy or snowy weather. If it is inevitable, take proper protective measures to avoid the ingress of rainwater and snow into the maintenance compartment; otherwise, the product's operation may be affected.
- Before closing the maintenance door, check whether there is any object left inside the maintenance compartment, such as screws, tools, etc.
- It is recommended for users to use cable sheathing to protect the AC cable. If the cable sheathing is used, make sure it is positioned inside the maintenance compartment.

User Manual 1 Safety Instructions

# 1.6 Disposal Safety

# **MARNING**

Please scrap the product in accordance with relevant local regulations and standards to avoid property losses or casualties.



# 2 Product Description

# 2.1 System Introduction

The inverter is a transformerless 1-phase PV grid-connected inverter. As an integral component in the PV power system, the inverter is designed to convert the direct current power generated from the PV modules into grid-compatible AC current and feeds the AC current to the utility grid.

#### **⚠** WARNING

- The inverter must only be operated with PV strings with class II protection in accordance with IEC 61730, application class A. It is not allowed for the positive pole or the negative pole of the PV strings to be grounded. This can cause damage to the inverter.
- · Do not connect any local load between the inverter and the AC circuit breaker.

#### NOTICE

The inverter applies only to the scenarios described in this manual.

The PV modules in the system must comply with the IEC 61730-1 (2016) class II standard. The intended usage of the inverter is illustrated in the following figure.

User Manual 2 Product Description

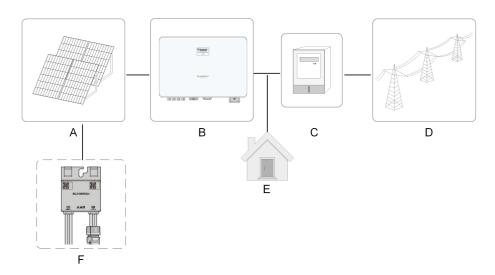


figure 2-1 Inverter Application in PV Power System

Item	Description	Note
	DV strings	Compatible with monocrystalline silicon, polycrystalline silicon,
Α	PV strings	and thin-film modules without grounding.
В	Inverter	SG5.0RS-ADA, SG8.0RS, SG9.0RS, SG10RS.
		Meter cupboard with power distribution system.
С	Metering device	SG5.0RS-ADA matching single-phase wireless meter WiMe-
		ter-S.
D	Utility grid	TT , TN-C , TN-S, TN-C-S.
Е	Loads	House loads that consume electricity.
F	Optimizer	1

Please refer to the optimizer user manual for details.






Please contact your local sales staff to confirm that the optimizer is available for sale in your territory. SP600S optimizer is not compatible with third-party products.

Please refer to the WiMeter-S manual for details.


2 Product Description User Manual



The following figure shows the common grid configurations.

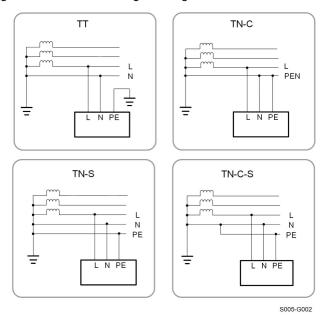

To meet the demand of users in different regions, connection to a split-phase grid system is supported for this inverter, as in the following way. Grounding detection function will not be available when the inverter is used in the split-phase grid system.

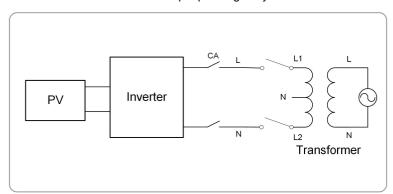


# 2.2 Product Introduction

#### **Model Description**


The model description is as follows (take SG8.0RS as an example):

 User Manual 2 Product Description



#### **Appearance**

The following figure shows the appearance of the inverter. The image shown here is for reference only. The actual product received may differ.

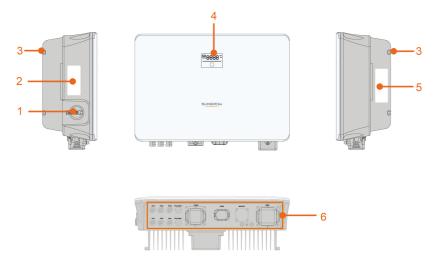

S006-G004

figure 2-2 Inverter Appearance

No.	Name	Description
1	DC switch	To safely disconnect the DC circuit whenever necessary.
2	Communication	Information about COM2 pin definition, supported DRM
	label	modes, etc.
2	Hangor	Complement to the included wall mounting bracket for hang-
3 Hanger		ing the inverter.
4 LCD namel	LCD panel	The LCD screen indicates the running information and the
4	LCD panel	LED indicator indicates the working state of the inverter.
		To clearly identify the product, including device model, S/N,
5	Nameplate	important specifications, marks of certification institutions,
		etc.
6	Electrical connec-	DC terminals, AC terminal, external grounding terminal and
	tion area	communication terminals.

#### **Dimensions**

The following figure shows the dimensions of the inverter.

2 Product Description User Manual

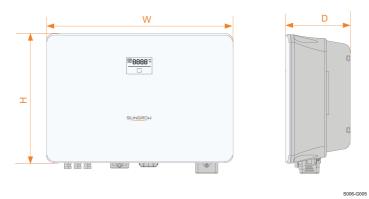


figure 2-3 Dimensions of the Inverter

Inverter Model	W (mm)	H (mm)	D (mm)
SG5.0RS-ADA, SG8.0RS, SG9.0RS,	490	340	170
SG10RS	490	340	170

# 2.3 Symbols on Product

Symbol	Explanation
DC	Parameters on the DC side.
AC-Grid	Parameters on the AC on-grid side.
	Regulatory compliance mark.
TUV	TÜV mark of conformity.
	RoHS labeling
(NoHS)	The product complies with the requirements of the applicable
	EU directives.
C€	CE mark of conformity.
	EU/EEA Importer.
UK CA	UKCA mark of conformity.
Ø	CMIM mark of conformity.
X	Do not dispose of the inverter together with household waste.

User Manual 2 Product Description

Symbol	Explanation
X	The inverter does not have a transformer.
$\triangle$	Disconnect the inverter from all the external power sources before maintenance!
i	Read the user manual before maintenance!
	Burn danger due to the hot surface that may exceed 60°C.
	Danger to life due to high voltages!
7	Only qualified personnel can open and maintain the inverter.
A >.	Danger to life due to high voltages!
<b>/</b> 4\(\rangle\)	Do not touch live parts for 10 minutes after disconnection from
10min	the power sources.
	External protective grounding terminal.

<sup>\*</sup> The table shown here is for reference only. The actual product received may differ.

### 2.4 LED Panel

The LED panel with a display screen and an indicator is on the front of the inverter.



figure 2-4 LED Panel

(a) Normal state (b) Error state

No.	Name	Description
1	E-day	Today's energy yield.
2	Pac	Current AC power.

<sup>\*</sup> Users may also attach other warning signs as per the requirements of the local standards or installation specifications.

2 Product Description User Manual

No.	Name	Description		
3	LED indicator	To indicate the working state of the inverter.		
		Touch it to switch the information in normal state or view multiple er-		
		ror codes in error state.		
4	Error code	The error code in the figure is just an example.		

- In normal state, the E-day and Pac information will be displayed alternately. Also you can touch the LED indicator to switch the information.
- In error state, touch the LED indicator to view error codes.
- If there is no operation for 5 minutes, the display screen will be off. Touch the LED indicator to activate it.

table 2-1 State description of the LED indicator

LED color	State	Definition
	On	The inverter is operating normally.
Blue	Flashing	The inverter is at standby or startup state (not feeding power into the grid).
	On	A system fault has occured.
Red		
	Off	Both the AC and DC sides are powered down.
Gray		

## **WARNING**

Voltage may still be present in AC side circuits after the indicator is off. Pay attention to the electricity safety during operating.

# 2.5 Circuit Diagram

The following figure shows the main circuit of the inverter.

User Manual 2 Product Description

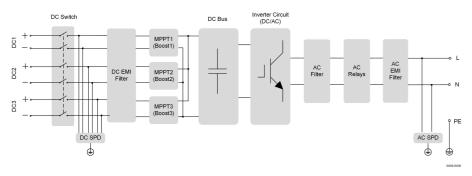


figure 2-5 Circuit Diagram (SG10RS for example)

- DC Switches can safely disconnect the PV input when necessary to ensure the safe operation of the inverter and the safety of personnel.
- The DC SPD provides a discharge circuit for the DC side overvoltage to prevent it from damaging the internal circuits of the inverter.
- EMI filters can filter out the electromagnetic interference inside the inverter to ensure that the inverter meets the requirements of electromagnetic compatibility standards.
- The MPPT is used to ensure a maximum power from PV arrays at different PV input conditions.
- The Inverter Circuit converts the DC power into grid-compliant AC power and feeds it into the grid.
- The AC filter filters the output AC component of high frequency to ensure that the output current meets the grid requirements.
- The AC relay isolates the AC output of the inverter from the grid, making the inverter safe from the grid in case of inverter failure or grid failure.
- The AC SPD provides a discharge circuit for the AC side overvoltage to prevent it from damaging the internal circuits of the inverter.

#### **▲** DANGER

If the lightning level exceeds the protection level of the product, surge protection and overvoltage protection may fail, resulting in electric shock and fatal injury!

### 2.6 Function Description

#### **Basic Function**

Conversion function

The inverter converts the DC power from the PV array to the AC power, in conformity with the grid requirements.

· Data storage

The inverter logs running information, error records, etc.

2 Product Description User Manual

#### · Parameter configuration

The inverter provides various parameter configurations for optimal operation. Parameters can be set via the iSolarCloud App or the cloud server.

#### · Communication interface

The inverter is equipped with two communication interfaces. The communication device can be connected to the inverter via both interfaces.

After communication connection is established, users can view inverter information, operational data and can set inverter parameters through the iSolarCloud.



It is recommended to use the communication module from SUNGROW. Using a device from other companies may lead to communication failure or other unexpected damage.

#### · Protection Function

Several protective functions are integrated in the inverter, including short circuit protection, grounding insulation resistance monitoring, residual current protection, grid monitoring, DC overvoltage/overcurrent protection, etc.

#### DRM ("AU"/"NZ")

The DRM function is only applicable to a single inverter.

The inverter provides terminals for connecting to a Demand Response Enabling Device (DRED). After the connection, the DRED asserts demand response modes (DRMs). The inverter detects and initiates a response to all supported demand response modes listed in the following table.

table 2-2 Demand Response Mode Explanation

Mode	Explanation
DRM0	The inverter is in the state of shutdown.

#### Feed-in Limitation

Set the feed-in limitation value via iSolarCloud App. When the smart energy meter detects that the export power is greater than the limit value, the inverter will reduce the output power within the specified range.

#### PID Zero

The PID Zero function is applicable for both PV and DC-coupled PV plus storage systems. It can suppress PID during the day and intelligently repair PV panels damage caused by PID at night, by relieving or alleviating PV array voltage bias to PV-.

The traditional inverter needs boost circuit to extend the efficient generation time during the day, and break the symmetry of the PV array to the ground voltage, making it closer to the negative electrode. In addition, if the traditional inverter runs at night, the PV array to ground

User Manual 2 Product Description

voltage is always limited to the lowest voltage point of the system, which increases the risk of PID.

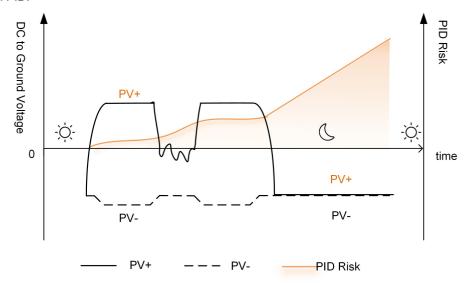


figure 2-6 PID Risk of Traditional Inverters

The following figure is the PID risk of the inverter equipped with PID Zero, it prevents the PV array voltage from approaching PV-, reduces the risk of PID during daily operation and repairs PV panels caused by PID at night. Details can be found in the *PID Zero White Paper*, which can be obtained on www.sungrowpower.com or from your distributor.

2 Product Description User Manual

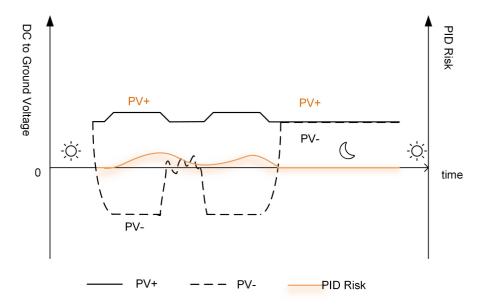


figure 2-7 PID Risk of Inverters Equipped with PID Zero

#### **A** DANGER

Keep the DC switch "ON" in the PID Zero process. During the process, there is voltage hazard between inverter / PV panels live conductors and ground. Do not touch any of them.



• When the PID Zero function is enabled, there will be a power consumption of less than 30 W in the PID Zero process.

#### AFCI Function(Optional)

AFCI activation

This function can be enabled to detect whether arc occurs in the DC circuit of the inverter.

AFCI self-test

This function is intended to detect whether the AFCI function of the inverter is normal.



The arc detection function meets the standard requirements, please test under the working conditions as required by the standard.

#### **Earth Fault Alarm**

The device gives an alarm if there is a grounding fault. If the AC side is poorly grounded or not grounded, the buzzer rings, and the LED indicator turns red.

#### **Optimizer Functions**

Module-level MPPT

User Manual 2 Product Description

Increase the power generation of the PV system by continuously tracking the maximum power point of the PV module.

• Module-level shutdown

Quickly reduce module voltage.

Module-level monitoring

The optimizer can monitor the performance of modules.

Module-level IV curve diagnosis

The optimizer can scan the module IV curve and judge whether a module fault occurs.



# 3 Unpacking and Storage

### 3.1 Unpacking and Inspection

The product is thoroughly tested and strictly inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection after receiving the product.

- · Check the packing case for any visible damage.
- · Check the scope of delivery for completeness according to the packing list.
- · Check the inner contents for damage after unpacking.

Contact SUNGROW or the transport company in case of any damage or incompleteness, and provide photos to facilitate services.

Do not dispose of the original packing case. It is recommended to store the device in the original packing case when the product is decommissioned.

#### **NOTICE**

- After receiving the product, check whether the appearance and structural parts
  of the device are damaged, and check whether the packing list is consistent
  with the actual ordered product. If there are problems with the above inspection
  items, do not install the device and contact your distributor first. If the problem
  persists, contact SUNGROW in time.
- If any tool is used for unpacking, be careful not to damage the product.

## 3.2 Inverter Storage

Proper storage is required if the inverter is not installed immediately.

- · Store the inverter in the original packing case with the desiccant inside.
- The storage temperature must be always between -30°C and +70°C, and the storage relative humidity must be always between 0 and 95 %, non-condensing.
- In case of stacking storage, the number of stacking layers should never exceed the limit marked on the outer side of the packing case.
- · The packing case should be upright.
- If the inverter needs to be transported again, pack it strictly before loading and transporting it.
- Do not store the inverter in places susceptible to direct sunlight, rain, and strong electric field.

User Manual 3 Unpacking and Storage

• Do not place the inverter in places with items that may affect or damage the inverter.

- Store the inverter in a clean and dry place to prevent dust and water vapor from eroding.
- Do not store the inverter in places with corrosive substances or susceptible to rodents and insects.
- Carry out periodic inspections. Inspection shall be conducted at least once every six months. If any insect or rodent bites are found, replace the packaging materials in time.
- If the inverter has been stored for more than a year, inspection and testing by professionals are required before it can be put into operation.

#### NOTICE

Please store the inverter according to the storage requirements. Product damage caused by failure to meet the storage requirements is not covered by the warranty.



# 4 Mechanical Mounting

#### **MARNING**

Respect all local standards and requirements during mechanical installation.

### 4.1 Safety During Mounting

#### **A** DANGER

Make sure there is no electrical connection before installation.

Before drilling, avoid the water and electricity wiring in the wall.

#### **MARNING**

For specific requirements for the installation environment, see "4.2.1 Installation Environment Requirements". In case the environment where the product is installed does not meet the requirements, SUNGROW shall not be held liable for any property damage arising therefrom.

#### **A** CAUTION

Improper handling may cause personal injury!

- When moving the product, be aware of its weight and keep the balance to prevent it from tilting or falling.
- · Wear proper protective equipment before performing operations on the product.
- The bottom terminals and interfaces of the product cannot directly contact the ground or other supports. The product cannot be directly placed on the ground.

#### NOTICE

During installation, ensure that no device in the system causes it hard for the DC switch and the AC circuit breaker to act or hinders maintenance personnel from operating.

If drilling is required during installation:

- · Wear goggles and protective gloves when drilling holes.
- Make sure to avoid the water and electricity wiring in the wall before drilling.
- Protect the product from shavings and dust.


User Manual 4 Mechanical Mounting

# 4.2 Location Requirements

To a large extent, a proper installation location ensures safe operation, service life, and performance of the inverter.

- The inverter with protection rating IP65 can be installed both indoors and outdoors.
- The inverter should be installed at a height that allows easy viewing of the LED indicator panel, as well as easy electrical connection, operation and maintenance.




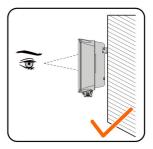

S006-I001

4 Mechanical Mounting User Manual

#### 4.2.1 Installation Environment Requirements

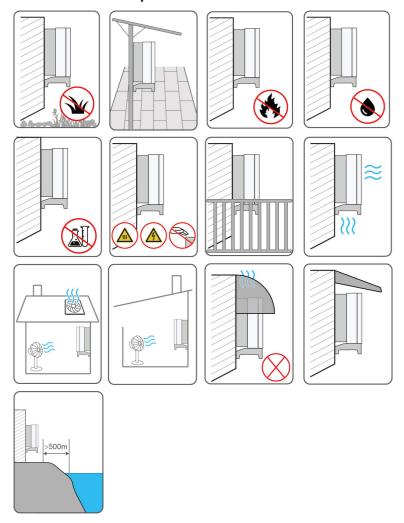


- If the inverter is installed in a place with lush vegetation, weed on a regular basis. In addition, the ground beneath the inverter needs to undergo certain treatment, such as laying cement or gravel, etc. (an area of 3m×2.5m is recommended).
- Do not install the inverter in an environment with flammables, explosives, or smoke.
- Do not install the inverter in places prone to water leak, e.g., under the air-conditioner vent, the air vent, or the cable outlet window of the machine room, so as to prevent device damage or short circuit caused by intrusion of water.
- Do no install the inverter in a place with corrosives such as corrosive gas and organic solvent, etc.
- When the inverter is running, its surface may carry high voltages or get very hot. Do not touch it; otherwise, it may lead to burns or electric shocks.
- Do not install the inverter in a place that is easy to reach for people.


User Manual 4 Mechanical Mounting

The installation site must have solid ground, free of rubber-like soils (which cannot be effectively compacted) or weak soils, and should not be prone to subsidence. Also, avoid low-lying areas where water or snow may easily accumulate. Ensure the site is located above the highest recorded water level in the area.

- Do not install the inverter in a position that could be flooded.
- To prevent vegetation or water on the ground from impacting inverter operation, if the space above meets the designated requirements, elevate the inverter to an appropriate height.
- Install the inverter in a place with shelter, so as to prevent it from getting impacted by direct sunlight and severe weather (e.g. snow, rain, and lightning). The inverter will derate in high temperatures for self-protection. If installed in a place directly exposed to sunlight, as the temperature rises, the inverter may witness power reduction.
- Good heat dissipation is very important to the inverter. Please install the inverter in a ventilated environment.
- If the inverter needs to be installed in a closed or semi-closed environment, please install
  additional heat dissipation or ventilation devices. Furthermore, while the inverter is operating, ensure the indoor ambient temperature does not exceed the outdoor ambient temperature. A semi-closed environment refers to a special space where natural ventilation
  is limited and gas or heat may easily accumulate, although it is not fully enclosed on all
  six sides.
- Please consult SUNGROW before installing inverters outdoors in areas prone to salt damage, which mainly are coastal areas within 500 meters of the coast. The sedimentation amount of salt spray is correlated to the characteristics of the seawater, sea winds, precipitation, air humidity, topography, and forest coverage in the adjacent sea areas, and there are substantial differences between different coastal areas.
- Do not install the inverter in an environment contaminated with chemicals such as halogen and sulfide.
- Do not install the inverter in an environment with vibration and strong electromagnetic field. Strong-magnetic-field environments refer to places where magnetic field strength measures over 30 A/m.
- In dusty environments such as places full of dust, smoke, or floc, particles may cling to
  the device's air outlet or heat sink, thus impacting its heat dissipation performance or
  even getting it damaged. Therefore, do not install the inverter in dusty environments. If
  the inverter has to be installed in such environments, please clean its fans and heat sink
  on a regular basis to ensure a good heat dissipation performance.
- To avoid disturbing residents in living areas with noise generated during the operation of the device, do not install the inverter in noise-sensitive areas such as bedrooms. It is preferable to choose an open location that is far away from the living and resting areas.
- The average temperature approximately 1 m around the inverter should be taken as its ambient operating temperature. The temperature and humidity should meet the requirements below:

  4 Mechanical Mounting User Manual







#### 4.2.2 Carrier Requirements

The mounting structure where the inverter is installed must comply with local/national standards and guidelines. Ensure that the installation surface is solid enough to bear four times the weight of the inverter and is suitable for the dimensions of the inverter (e.g. cement walls, plasterboard walls, etc.).

Do not install the inverter on a carrier that may vibrate in resonance, so as to avoid making bigger noise.

Installation on combustible building materials is strictly prohibited. Suitable mounting surfaces include:


Non-combustible wall surfaces: Concrete, fire-resistant gypsum board, brick wall, etc. Non-combustible roof structures: Color-Coated corrugated steel roofing sheets, precast concrete slabs, fiber-reinforced cement boards, etc.



#### 4.2.3 Angle Requirements


Install the inverter vertically. Never install the inverter horizontally, or at forward/backward tilted, side tilted, or upside down.

User Manual 4 Mechanical Mounting

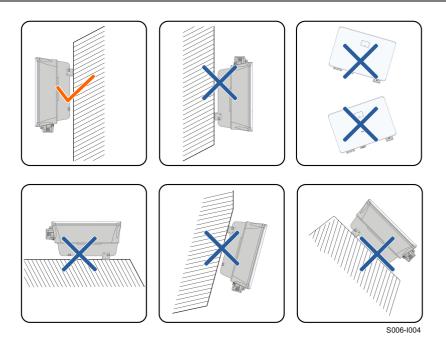

## 4.2.4 Clearance Requirements

Reserve enough clearance around the inverter to ensure sufficient space for heat dissipation.

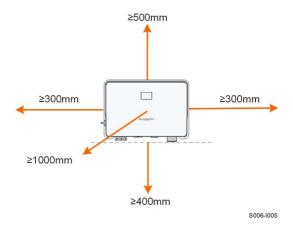

Install the inverter at an appropriate height for ease of viewing the screen and LED indicator and operating switch(es).

## 4.3 Installation Tools

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site.

4 Mechanical Mounting User Manual

table 4-1 Tool specification



User Manual 4 Mechanical Mounting

Heat gun



Rubber mallet

Open-end wrench (33 mm, 35 mm)



Hammer drill (φ10)

Connector wrench



Allen wrench (T27)

Multimeter (≥ 600 Vdc)

## 4.4 Moving the Inverter

Before installation, remove the inverter from the packing case and move it to the installation site. Follow the instructions below as you move the inverter:

- · Always be aware of the weight of the inverter.
- Lift the inverter using the handles positioned on both sides of the inverter.
- Move the inverter by one or two people or by using a proper transport tool.
- Do not release the equipment unless it has been firmly secured.

## **CAUTION**

Improper handling may cause personal injury!

- Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.
- Attention must be paid to the center of gravity of the inverter to avoid tilting during handling.
- Placing the inverter directly on a hard ground may cause damage to its metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.
- Move the inverter by holding the handles on it. Do not move the inverter by holding the terminals.

# 4.5 Installing Mounting-bracket

The inverter can be installed on a bracket, a wall, and a pole by means of mounting-bracket. Dimensions of the assembled mounting-bracket are as follows.

4 Mechanical Mounting User Manual


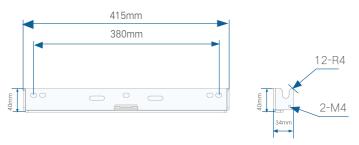


figure 4-1 Dimensions of Mounting-bracket


Reserve enough space when installing the mounting-bracket to meet the installation space requirements of the inverter.

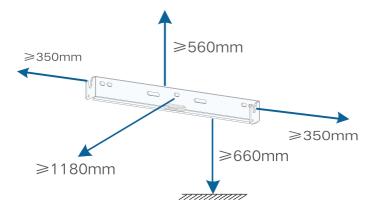

# 4.6 Installing the Inverter

Inverter is installed on the wall by means of wall-mounting bracket and the expansion plug sets.

The expansion plug set shown below is recommended for the installation.

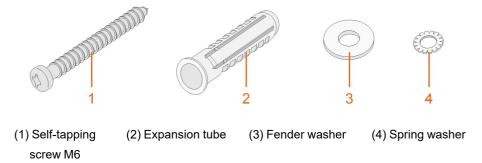


User Manual 4 Mechanical Mounting

**Step 1** Place the wall-mounting bracket to a proper position on the wall. Mark the positions and drill the holes.

#### NOTICE


Observe the level on the bracket and adjust until the bubble is in the middle position.

The depth of the holes should be about 70 mm.

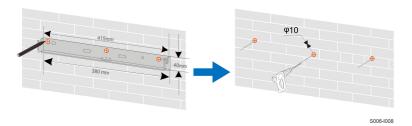


\* The image shown here is for reference only. The actual product received may differ.

**Step 2** Place the expansion tubes into the holes. Then secure the wall-mounting bracket to the wall firmly with the expansion bolt sets.

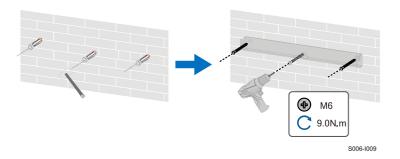

**Step 3** Lift the inverter and slide it down along the wall-mounting bracket to make sure they match perfectly. Use two screw sets to lock both left and right sides.

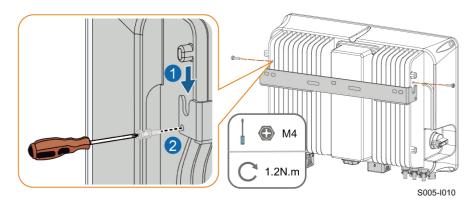


- - End

4 Mechanical Mounting User Manual


## 4.7 Installing Optimizer(Optional)

**Step 1** As shown in the figure below, clamp the optimizer parallel to the back of the PV module by clips.

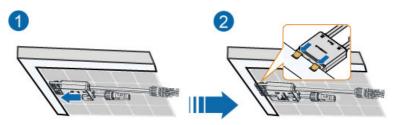


## **NOTICE**


- Optimizer is only sold in certain countries and regions. For details, please consult your local company's sales.
- Please ensure that the optimizer is installed facing the back of the module. Otherwise, the clip may get damaged.

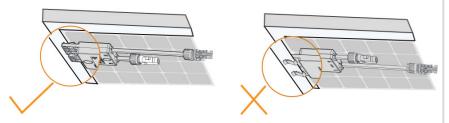

  Do not forcibly bend the clips when installing the optimizer by clips. Otherwise, the clip may be damaged.



 Do not clamp the optimizer into holes in the module frame during installation.
 Otherwise, the optimizer cannot be removed or the clips may be damaged.



- It is recommended to install optimizers on the same side of modules.
- Do not clamp and remove the optimizer multiple times. Otherwise, the clip may become loose, affecting normal use.

User Manual 4 Mechanical Mounting


- - End

# 4.8 Installing WiMeter-S(for SG5.0RS-ADA)


Step 1 Mount the WiMeter-S to a 35 mm DIN rail.



Step 2 Connect the antenna to the antenna interface on the WiMeter-S.

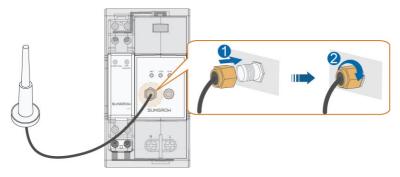

Step 3 Fix the antenna to an object outside the power distribution cabinet.

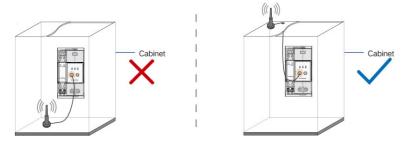

# 5 Electrical Connection

## 5.1 Safety Instructions

#### **A** DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.

## **A** DANGER

- Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!
- Ensure that the inverter is undamaged and all cables are voltage free before performing electrical work.
- Do not close the AC circuit breaker until the electrical connection is completed.

## **⚠** WARNING

Do not damage the ground conductor. Do not operate the product in the absence of a properly installed ground conductor. Otherwise, it may cause personal injury or product damage.

Please use measuring devices with an appropriate range. Overvoltage can damage the measuring device and cause personal injury.

Damage to the product caused by incorrect wiring is not covered by the warranty.

- Electrical connection must be performed by professionals.
- Operators must wear proper personal protective equipment during electrical connections.
- All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned. Cables used shall comply with the requirements of local laws and regulations.
- The factors that affect cable selection include rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.

#### NOTICE

All electrical connections must comply with local and national/regional electrical standards

- Cables used by the user shall comply with the requirements of local laws and regulations.
- Only with the permission of the national/regional grid department, the inverter can be connected to the grid.

#### NOTICE

- Install the external protective grounding cable first when performing electrical connection and remove the external protective grounding cable last when removing the inverter.
- Keep the AC output cable and the DC input cable close to each other during electrical connection.
- Comply with the safety instructions related to PV strings and the regulations related to the utility grid.

#### NOTICE

- After being crimped, the OT terminal must wrap the wires completely, and the wires must contact the OT terminal closely.
- When using a heat gun, protect the device from being scorched.
- Keep the PV+ cable and PV- cable close to each other when connecting DC input cables.
- Before connecting a power cable (such as the AC cable, the DC cable, etc.), confirm that the label and identifier on the power cable are correct.
- When laying out communication cables, separate them from power cables and keep them away from strong interference sources to prevent communication interruption.
- All vacant terminals must be covered with waterproof covers to prevent affecting the protection performance.
- Ensure that AC output cables are firmly connected. Failing to do so may cause inverter malfunction or damage to its AC connectors.
- When the wiring is completed, seal the gap at the cable inlet and outlet holes with fireproof/waterproof materials such as fireproof mud to prevent foreign matter or moisture from entering and affecting the long-term normal operation of the inverter.



The cable colors in figures in this manual are for reference only. Please select cables according to local cable standards.

# 5.2 Terminal Description

All electrical terminals are located at the bottom side of the inverter.

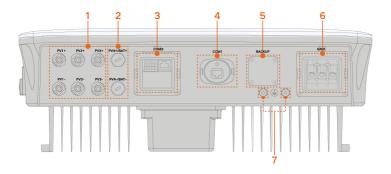


figure 5-1 Terminals

table 5-1 Terminal Description

			Decisive Volt-
No.	Name	Description	age
			Classification
	PV1+, PV1-, PV2+,	MC4 terminals for PV input.	
1	PV2-, PV3+, PV3-	The terminal number depends on in-	DVC-C
		verter model.	
2	PV4+/BAT+, PV4-/	Reserved	Not applicable
2	BAT-	Reserved.	посаррпсавіе
2	COMO	Communication connection for RSD,	D) (O A
3	COM2	DRM and smart energy meter.	DVC-A
		Communication accessory port to be	_
4	COM1	connected to WiNet-S/WiNet-S2	DVC-A
		communication module.	
5	BACKUP	Reserved.	Not applicable
6	GRID	AC terminal to connect to the grid.	DVC-C
7		External grounding terminal.	Not applicable

The pin definition of COM2 terminal is shown in the following label.

<sup>\*</sup> The image shown here is for reference only. The actual product received may differ.

 



figure 5-2 Label of COM2 Terminal

table 5-2 Label Description of COM2 Terminal

Label		Description	
Meter	A2, B2	For the smart energy meter	
RS485-1	A1, B1	Reserved	
RSD	RSD-1,	Reserved	
	RSD-2		
	R, C, D4/8,	For external Demand Response Enabling Device ("AU"/	
DRM	D3/7, D2/6,	"NZ")	
	D1/5		

## 5.3 Electrical Connection Overview

The electrical connection should be realized as follows:

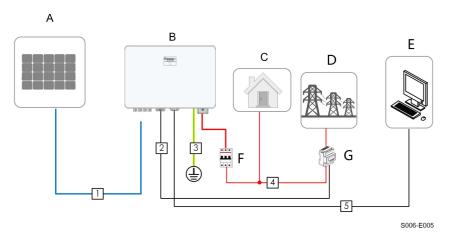

- (A) PV string
- (B) Inverter


(C) Loads

(D) Grid

- (E) External device
- (F) AC circuit breaker

(G) Smart energy meter

The electrical connection should be realized as follows(Includes optimizer):

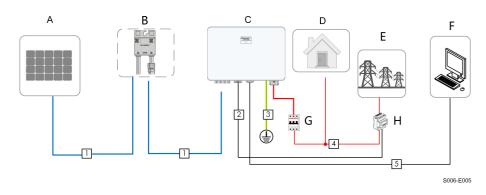

(A) PV string

(B) Optimizer

(C) Inverter

(D) Loads

(E) Grid

(F) External device

(G) AC circuit breaker

(H) Smart energy meter

table 5-3 Cable Requirements

No.	Cable	Туре	Cable Diameter	Cross-section
1	DC cable	Outdoor multi-core copper wire cable complying with 600 V and 20 A standard	6 mm ~ 9 mm	4 mm²~ 6 mm²
2	Meter RS485 cable	Shielded twisted pair	4.8 mm ~ 6 mm	2 * (0.5 ~ 1.0) mm <sup>2</sup>
3	External Grounding cable	Outdoor single-core copper wire cable	4 mm ~ 10 mm	6 mm <sup>2</sup> ~ 10mm <sup>2</sup>
			SG5.0RS-ADA: 13 mm ~ 19 mm	SG5.0RS-ADA: 6 mm <sup>2</sup> ~ 8 mm <sup>2</sup>
4	AC cable (2)	Outdoor 3-core copper wire cable	SG8.0RS: 16 mm ~ 22 mm	SG8.0RS: 8 mm <sup>2</sup> ~ 10 mm <sup>2</sup>
			SG9.0/10RS: 18 mm ~ 25.8 mm	SG9.0/10RS: 10 mm <sup>2</sup> ~
5	Ethernet ca- ble <sup>(4)</sup>	CAT 5E outdoor shielded network cable	4.8 mm ~ 6 mm	8 * (0.08 ~ 0.2) mm <sup>2</sup>

- (1) The cable requirements for **COM2** terminal connection are the same.
- (2) All the AC wires should be equipped with correctly colored cables for distinguishing. Please refer to related standards about the wiring color.
- (3) Select appropriate OT terminals based on the diameter of the AC cable.
- (4) To meet shielding and anti-interference requirements:

 Shielded Ethernet cables are mandatory. It is recommended to use CAT 5E or CAT 6 shielded cables.

 Use Ethernet cables with magnet cores at both ends, and in some cases, add magnet cores in the middle.

The factors that affect cable selection include rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.



It is recommended to use heavy duty conduits when run cables through Cavity walls, or lay out cables with corresponding conduits. (For "AU" and "NZ")

## **5.4 External Protective Grounding Connection**

#### **A** DANGER

- There are large currents during the inverter's operation. If the inverter is powered on and put into operation without being grounded, it may lead to electric shock hazards or failures of major protective functions such as surge protection. Therefore, before powering on the inverter, make sure it has been reliably grounded; otherwise, damages caused therefrom will not be covered by warranty.
- When performing electrical connections of the inverter, give the highest priority to grounding. Be sure to carry out the grounding connection first.

## **▲** WARNING

- Since the inverter is not equipped with a transformer, neither the negative electrode nor the positive electrode of the PV string can be grounded. Otherwise, the inverter will not operate normally.
- Connect the grounding terminal to the external protective grounding point before AC cable connection, PV string connection, and communication cable connection.
- The external protective grounding point provides a reliable ground connection.
   Do not use an improper grounding conductor for grounding, Otherwise, it may cause product damage or personal injury.
- Depending on Local Rules, please also ground the PV panel subconstruction to the same common grounding point (PE Bar) in addition to local lightning protection rules.

#### **▲** WARNING

The external protective grounding terminal must meet at least one of the following requirements.

The cross-sectional area of the grounding cable is not less than 10 mm<sup>2</sup> for copper wire or 16 mm<sup>2</sup> for aluminum wire. It is recommended that both the external protective grounding terminal and the AC side grounding terminal be reliably grounded.

 If the cross-sectional area of the grounding cable is less than 10 mm² for copper wire or 16 mm² for aluminum wire, ensure that both the external protective grounding terminal and the AC side grounding terminal are reliably grounded.

The grounding connection can be made by other means if they are in accordance with the local standards and regulations, and SUNGROW shall not be held liable for the possible consequences.

## 5.4.1 External Protective Grounding Requirements

All non-current carrying metal parts and device enclosures in the PV power system should be grounded, for example, brackets of PV modules and inverter enclosure.


When there is only one inverter in the PV system, connect the external protective grounding cable to a nearby grounding point.

When there are multiple inverters in the PV system, connect the external protective grounding terminals of all inverters and the grounding points of the PV module brackets to ensure equipotential connections to ground cables (according to the onsite conditions).

#### 5.4.2 Connection Procedure

External grounding cable and OT/DT terminal are prepared by customers.

Step 1 Prepare the cable and OT/DT terminal.

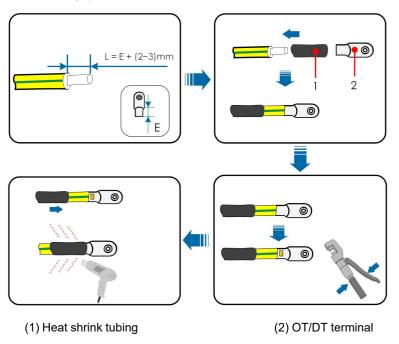




After being crimped, the OT terminal must wrap the wires completely, and the wires must contact the OT terminal closely.

When using a heat gun, protect the device from being scorched.

**Step 2** Remove the screw on the grounding terminal and fasten the cable with a screwdriver.

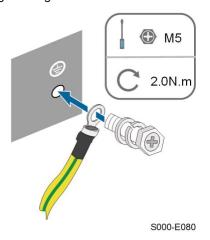

**Step 3** Apply paint to the grounding terminal to ensure corrosion resistance.

- - End

## 5.5 AC Cable Connection

## 5.5.1 AC Side Requirements



Only with the permission of the local grid department, the inverter can be connected to the grid.

Before connecting the inverter to the grid, ensure the grid voltage and frequency comply with requirements, for which, refer to **"Technical Data"**. Otherwise, contact the electric power company for help.

#### **AC Circuit Breaker**

An independent two-pole circuit breaker must be installed on the output side of the inverter to ensure safe disconnection from the grid. The recommended specifications are as follows.

#### NOTICE

In Australia, single-pole circuit breakers should be used.

Inverter Model	Recommended Specification
SG5.0RS-ADA	32 A
SG8.0RS/SG9.0RS	50A
SG10RS	63 A

#### **NOTICE**

Testing to AS/NNZS 4777.2:2020 Section for multiple phase combinations has not been conducted.

#### **A** WARNING

AC circuit breakers should be installed on the output side of the inverter and the grid side to ensure safe disconnection from the grid.

- Determine whether an AC circuit breaker with greater overcurrent capacity is required based on actual conditions.
- Do not connect any local load between the inverter and the AC circuit breaker.
- Multiple inverters cannot share one AC circuit breaker.

#### **Residual Current Monitoring Device**

With an integrated universal current-sensitive residual current monitoring unit included, the inverter will disconnect immediately from the mains power once a fault current with a value exceeding the limit is detected.

However if an external residual current device (RCD) (type A is recommended) is mandatory, the switch must be triggered at a residual current of 300 mA (recommended). RCD of other specifications can also be used according to local standard.

In Australia, a RCD is not required according to the local standard AS3000-2018 when either of the following installation methods is adopted if the PV array capacitance to ground is large (such as a tin roof):


- Use heavy duty conduits (such as metal bushing) when run PV and AC cables through Cavity walls.
- Route the PV and AC cables through pipes (PVC or metal tubing), lay the cables and install them.

## 5.5.2 Connecting the AC Cable


- **Step 1** Disconnect the AC circuit breaker and secure it against reconnection.
- **Step 2** Take out the AC waterproof cover, unscrew the swivel nut and take out the sealing ring. Thread the AC cable through the swivel nut, appropriate sealing and waterproof cover in sequence.



**Step 3** Strip the cable jacket and the wire insulation as shown in the following figure.

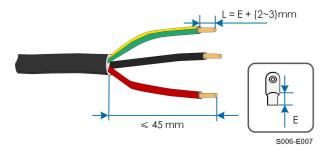


Step 4 Crimp the OT/DT terminal.

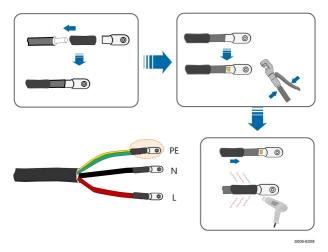


**Step 5** Fix all the wires to the terminals according to the assignment and tighten to a torque of 2.0 N•m with a screwdriver.

#### NOTICE

Observe the terminal assignment. Do not connect any phase line to the "PE" terminal or PE wire to "N" terminal. Otherwise, unrecoverable damage to the inverter may follow.

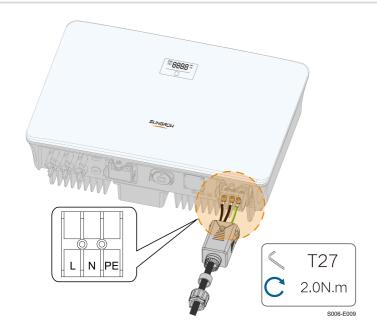

**Step 6** Secure the AC waterproof cover to the inverter with a torque of 1.0 N•m and tighten the swivel nut to a torque of 5 N•m–6 N•m.

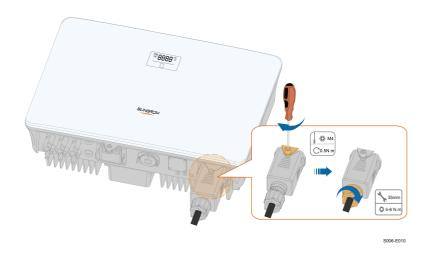

**Step 7** Connect the PE wire to ground and the phase lines and the "N" line to AC circuit breaker. Then connect the AC circuit breaker to electric board.

Step 8 Make sure all wires are firmly installed via the right torque tool or dragging the cables slightly.

--End

## **5.6** DC Cable Connection

## **▲** DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

· Respect all safety instructions listed in relevant documents about PV strings.

#### **▲** WARNING

 Make sure the PV array is well insulated to ground before connecting it to the inverter.

- Make sure the maximum DC voltage and the maximum short circuit current of any string never exceed inverter permitted values specified in "Technical Data".
- Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.
- During the installation and operation of the inverter, please ensure that the positive or negative electrodes of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.
- Electric arc or contactor over-temperature may occur if the DC connectors are not firmly in place, and the loss caused is not covered by the warranty.
- If the DC input cables are reversely connected or the positive and negative terminals of different MPPT are shorted to ground at the same time, while the DC switch is in the "ON" position, do not operate immediately. Otherwise, the inverter may be damaged. Please turn the DC switch to "OFF" and remove the DC connector to adjust the polarity of the strings when the string current is lower than 0.5 A.
- Use the DC connectors supplied with the product for DC cable connection. Using incompatible DC connectors may result in serious consequences, and the device damage is not covered under warranty.
- Inverters do not support full parallel connection of strings (Full parallel connection refers to a connection method in that strings are connected in parallel and then connected to the inverter separately).
- Do not connect one PV string to multiple inverters. Otherwise, the inverters may be damaged.

#### NOTICE

The following requirements about PV string connection must be met. Otherwise, it may cause irreversible damage to the inverter, which is not covered by the warranty.

- Mixed use of PV modules of different brands or models in one MPPT circuit, or PV modules of different orientation or inclination in a string may not damage inverter, but will cause system bad performance!
- The inverter enters standby state when the input voltage ranges between 560 V and 600 V. The inverter returns to running state once the voltage returns to the MPPT operating voltage range, namely, 40 V to 560 V.

## **NOTICE**

Note the following items when laying cables on site:

 The axial tension on PV connectors must not exceed 80 N. Avoid axial cable stress on the connector for a long time during field wiring.

- Radial stress or torque must not be generated on PV connectors. It may cause the connector waterproof failure and reduce connector reliability.
- Leave at least 50 mm of slack to avoid the external force generated by the cable bending affecting the waterproof performance.
- Refer to the specifications provided by the cable manufacturer for the minimum cable bending radius. If the required bending radius is less than 50 mm, reserve a bending radius of 50 mm. If the required bending radius is greater than 50 mm, reserve the required minimum bending radius during wiring.

## **5.6.1 PV Input Configuration**

- The inverters SG5.0RS-ADA/SG8.0RS/SG9.0RS/SG10RS have three PV inputs, each with independent MPP tracker. Each DC input area can operate independently.
- The PV strings to each DC input may differ from each other, including PV module type, number of PV modules in each string, angle of tilt, and installation orientation.

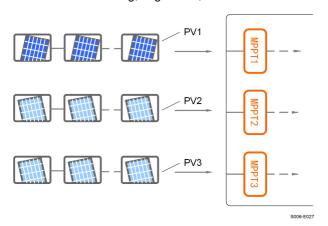


figure 5-3 PV Input Configuration

Prior to connecting the inverter to PV inputs, the specifications in the following table should be met:

Inverter Model	Open-circuit Voltage Limit	Max. current for input connector
All models	600 V	20 A

## 5.6.2 Assembling the PV Connectors

## **DANGER**

 
High voltage may be present in the inverter!

- Ensure all cables are voltage-free before performing electrical operations.
- Do not connect the DC switch and AC circuit breaker before finishing electrical connection.




To ensure IP65 protection, use only the supplied connector.

Step 1 Strip the insulation from each DC cable by 7 mm-8 mm.




Step 2 Assemble the cable ends with the crimping pliers.

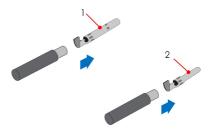

1: Positive crimp contact

2: Negative crimp contact

**Step 3** Lead the cable through cable gland, and insert the crimp contact into the insulator until it snaps into place. Gently pull the cable backward to ensure firm connection. Tighten the cable gland and the insulator (torque 2.5 N.m to 3 N.m).

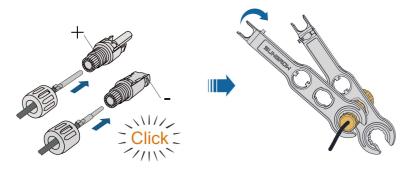

Step 4 Check for polarity correctness.


## NOTICE

If the PV polarity is reversed, the inverter will be in a fault or alarm state and will not operate normally.

--End


## 5.6.3 Installing the PV Connectors

Step 1 Rotate the DC switch to "OFF" position.

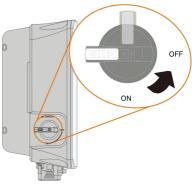


S006-E032


**Step 2** Check the cable connection of the PV string for polarity correctness and ensure that the open circuit voltage in any case does not exceed the inverter input limit of 600 V.

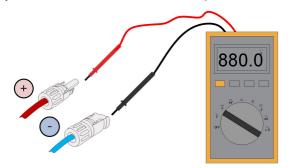

Step 3 Connect the PV connectors to corresponding terminals until there is an audible click.

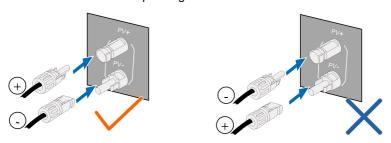

 
- Step 4 Seal the unused PV terminals with the terminal caps.
- **Step 5** Connect the PV+ and PV- of the optimizer to the positive and negative terminals in the junction box of the PV module respectively.



## NOTICE

Do not connect the PV module to the OUT+ and OUT- of the optimizer. Otherwise, the optimizer or PV module will be damaged, and the loss is not covered by the warranty.


**Step 6** Connect the positive probe of a multimeter to OUT+ of the optimizer, and the negative probe of the multimeter to OUT— of the optimizer to check whether the optimizer is faulty. If typical value of output voltage is 1V, no fault occurs to the optimizer.

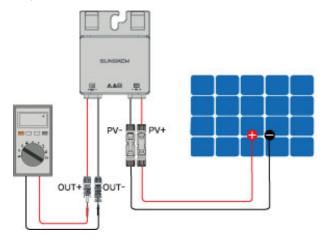

#### NOTICE

- 1. Use a multimeter to measure the output voltage of each optimizer after wiring.
- 2. Considering the effect of the accuracy of the multimeter on the actual measurement on site, the optimizer can function normally as long as the output voltage falls in the range of 0.9V 1.1V.
- 3. If the output voltage is less than 0.9 V, check the following items:
- Check whether the sunlight is sufficient.
- Check whether the input side of the optimizer is connected to the PV module.
- If the fault is not caused by foregoing reasons and still persists, please replace the optimizer.
- 4. If the output voltage is greater than 1.1 V, the optimizer fails. Please replace the optimizer.
- 5. If no voltage is detected, replace the optimizer or component.


**Step 7** When connecting multiple optimizers, connect OUT- of the first optimizer to OUT + of the second optimizer, and so on. Use a multimeter to measure the optimizer voltage. If typical value of output voltage is 1V\*N (N is the number of optimizers), no fault occurs to the system.

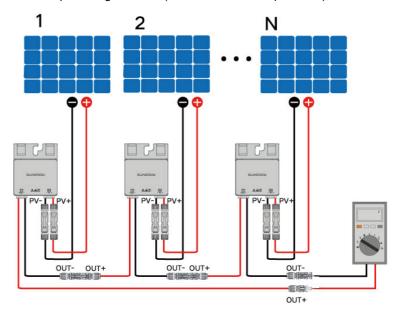

## **NOTICE**

Whether connecting OUT+ of the first optimizer to OUT- of the second optimizer or connecting OUT- of the first optimizer to OUT+ of the second optimizer is dependent on the polarity of the extension cable that is connected to the inverter on site.

**Step 8** Connect OUT+ of the first optimizer and OUT- of the last optimizer to the PV input terminals of the inverter.

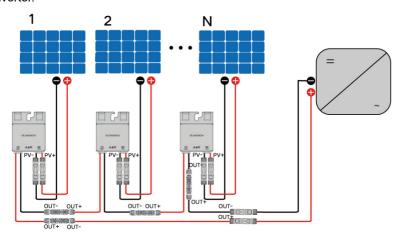

## **M** WARNING

If each PV module is equipped with an optimizer, the total power of PV modules in a PV input shall not exceed the maximum input power of a single PV input of the inverter.

#### NOTICE

- Branch-connector connection on the input side of the inverter is not supported by the optimizer.
- · Please refer to the optimizer user manual for details.



- - End

## 5.7 WiNet-S / WiNet-S2 Connection

The WiNet-S/WiNet-S2 module supports Ethernet communication and WLAN communication. It is not recommended to use both communication methods at the same time.

SG5.0RS—ADA uses WiNet-S2 module, SG8.0–10RS uses WiNet-S module.

For details, see the quick guide for the WiNet-S module. Scan the following QR code for the quick guide.




For more information about WiNet-S2, please scan the following QR code to view the quick guide.



## 5.7.1 Ethernet Communication


**Step 1 (Optional)** Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding signal cables out. Insert the stripped communication cable into the RJ45 plug in the correct order, and crimp it with a crimper.

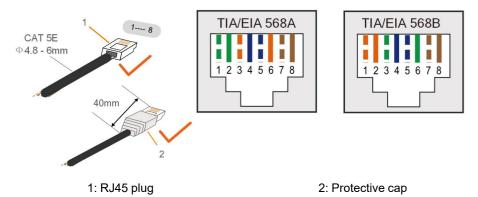


0

Skip this step if a standard network cable with RJ45 plug is prepared.


Step 2 Unscrew the swivel nut from the communication module and take out the inner sealing ring.

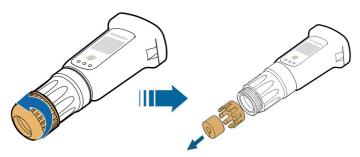


Step 3 Unscrew the housing from the communication module.

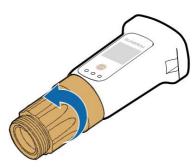


**Step 4** Thread the network cable through the swivel nut and gasket. Afterwards, route the cable into the opening of the sealing. Finally, insert the cable through the housing.

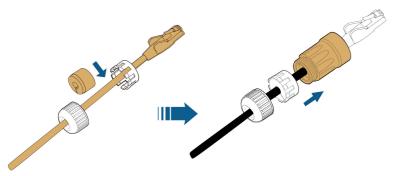

**Step 5** Insert the RJ45 plug into the front plug connector until there is an audible click and tighten the housing. Install the gasket and fasten the swivel nut.

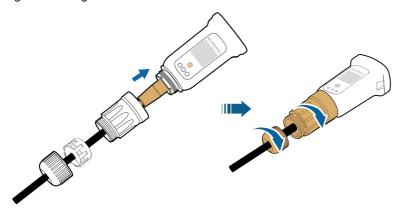

**Step 6** Remove the waterproof lid from the **COM1** terminal and install WiNet-S/WiNet-S2.

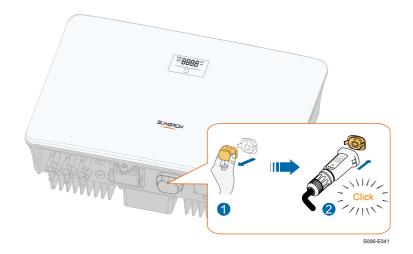


Step 7 Slightly shake it by hand to determine whether it is installed firmly.

- - End

## 5.7.2 WLAN Communication

**Step 1** Remove the waterproof lid from the **COM1** terminal.

**Step 2** Install the module. Slightly shake it by hand to determine whether it is installed firmly, as shown below.

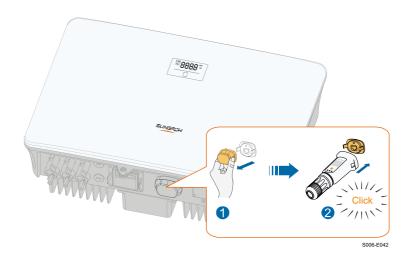

**Step 3** Refer to the guide delivered with the module for the set-up.


--End

## 5.8 Smart Meter Connection

The inverter can provide export control but will require the use of a external smart meter. The export control functionality has not been tested to AS/NZS 4777.2:2020.


The energy meter is mainly used to detect the direction and magnitude of the current. And the energy meter data may not be used for billing purposes.

Step 1 Unscrew the swivel nut from the connector.

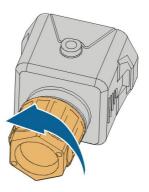


S006-E011


Step 2 Remove the seal and route the cable into the opening of the sealing.

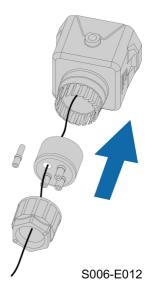


Step 3 Remove the cable jacket and strip the wire insulation.

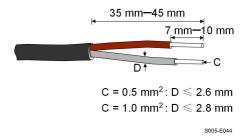


**Step 4** (Optional) When using a multi-core multi-strand wire cable, connect the wire head to the cord end terminal. In case of single-strand copper wire, skip this step.

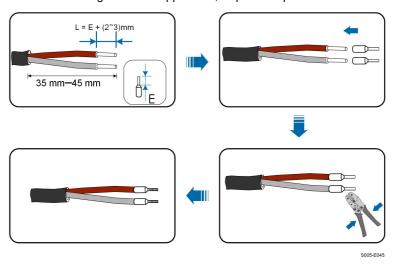


**Step 5** Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

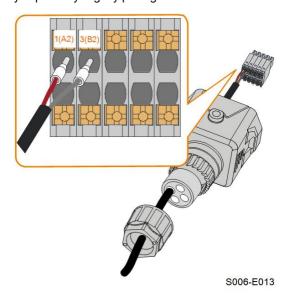


**Step 6** Insert the terminal plug into the **COM2** terminal at the bottom side of the inverter and then install the housing.

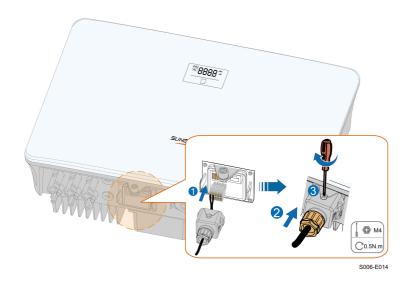

Step 7 Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

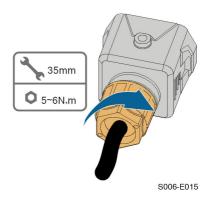

**Step 8** The other end of the communication cable is connected to the RS485A and RS485B ports of the smart meter.

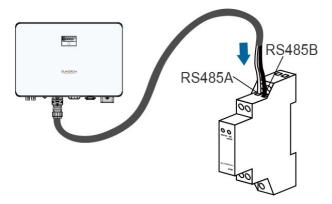


#### --End

## 5.8.1 Single-phase Wireless Meter Connection(for SG5.0RS-ADA)

Step 1 Disconnect the WiMeter-S from the voltage source and secure that it will not be connected.

Step 2 Ensure that the conductors to be connected are free of voltage. Tighten the power wires to terminal L and terminal N. Place the CT single-phase sensor around the phase wire (L).

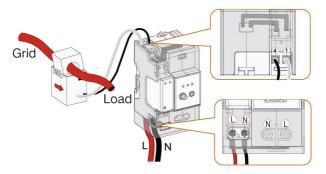

## **NOTICE**

The arrow on the CT should always point to the load side.

Step 3 Cover the WiMeter-S with the insulating cover or contact protection of the power distribution cabinet. Connect the power distribution cabinet to the power supply.

## 5.9 DRM Connection

In Australia and New Zealand, the inverter supports the demand response modes as specified in the standard AS/NZS 4777.

The following figure shows the wiring between the inverter and the external DRED.


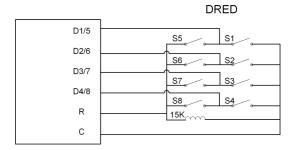


table 5-4 Method of Asserting DRM

Mode	Asserted by Shorting Terminals on Inverter	Switch Operation on External DRED
DRM0	R&C	Close S1 and S5

The inverter is equipped with a RJ45 terminal for connecting the external DRED. As shown in the following figure, pin 5 and pin 6 are used for asserting the DRM0 mode.

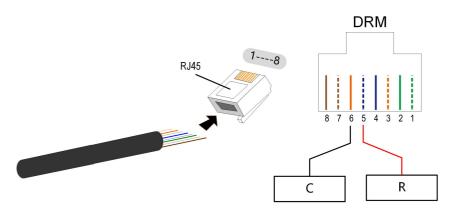

S006-E017

**Step 1 (Optional)** Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding signal cables out. Insert the stripped communication cable into the RJ45 plug in the correct order, and crimp it with a crimper.




1: RJ45 plug

2 : Protective cap




Skip this step if a standard network cable with RJ45 plug is prepared.

Step 2 Unscrew the swivel nut from the connector.

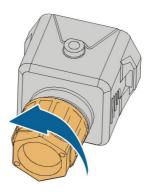


S006-E011

Step 3 Remove the seal.

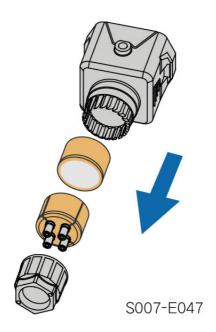


User Manual 5 Electrical Connection

**Step 4** Lead the cable through the cable gland.

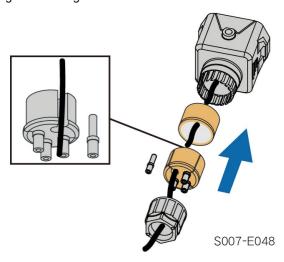


**Step 5** Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

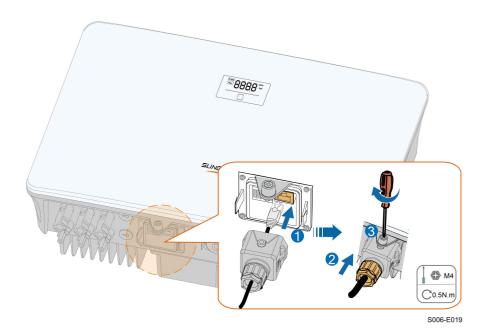

5 Electrical Connection User Manual

**Step 6** Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

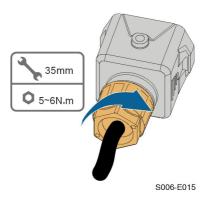

--End

## 6 Commissioning

## 6.1 Inspection Before Commissioning

Check the following items before starting the inverter:

- · All equipment has been reliably installed.
- DC switch(es) and AC circuit breaker are in the "OFF" position.
- The ground cable is properly and reliably connected.
- The AC cable is properly and reliably connected.
- The DC cable is properly and reliably connected.
- The communication cable is properly and reliably connected.
- · The unused terminals are sealed.
- No foreign items, such as tools, are left on the top of the machine or in the junction box (if there is).
- The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- All warning signs & labels are intact and legible.

## 6.2 Powering on the System

If all of the items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

Strictly follow the preceding sequence. Otherwise, the product may be damaged, and the loss caused is not covered by the warranty.

**Step 1** Turn on the AC circuit breaker between the inverter and the grid.



Before closing the AC circuit breaker between the inverter and the power grid, use a multimeter that is set to the AC gear to ensure that the AC voltage is within the specified range. Otherwise, the inverter may be damaged.

- Step 2 Rotate the DC switch of the inverter to "ON" position.
- Step 3 Turn on the external DC switch (if applicable) between the inverter and the PV string.
- **Step 4** If the irradiation and grid conditions meet requirements, the inverter will operate normally. Observe the LED indicator to ensure that the inverter operates normally. Refer to "2.4 LED Panel" for LED screen introduction and LED indicator definition.
- **Step 5** Refer to the guick guide for WiNet-S/WiNet-S2. for its indicator definition.



--End

## 6.3 App Preparation

- Step 1 Install the iSolarCloud App with latest version. Refer to "7.2 Install iSolarCloud".
- **Step 2** Register an account. Refer to "7.4 Device Commissioning". If you have got the account and password from the distributor/installer or SUNGROW, skip this step.
- **Step 3** Download the firmware package to the mobile device in advance. Refer to "7.4 Device Commissioning". This is to avoid download failure due to poor on-site network signal.
  - --End

## 6.4 Creating a Plant

### Prerequisites:

- The account and password for logging in to iSolarCloud App have been obtained from the distributor/installer or SUNGROW.
- · The communication device is normally connected to the inverter.
- System positioning is enabled and iSolarCloud App is allowed to access location information.



Step 1 Open the App, tap in the upper right corner of the interface, and select the correct access address.

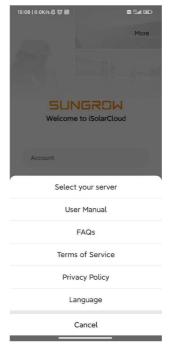


figure 6-1 Select Access Address

Step 2 Enter the account and password on the login interface, and tap LOGIN to log in.

Step 3 Tap in the upper right corner to enter the plant creation interface.



**Step 4** Fill in the content according to actual needs, and the parameters containing \* are required. Tap **Next** to enter the next interface.



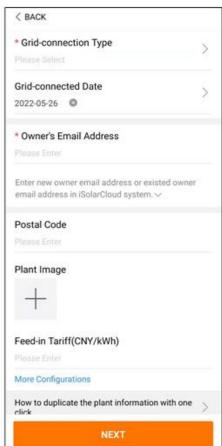


figure 6-2 Plant Creation Settings


Parameter Name	Description
Plant name	The name of the plant.
Plant type	The type of the plant, which should be set corresponding to the actual plant type.
Installed power	The installed power of the plant.
Country/Region	The country/region where the plant is located.
Time zone	The time zone where the plant is located, which can be filled through automatic positioning and manual input.

Parameter Name	Description	
	The location of the plant, which can be filled in two ways:	
Plant address	Manually: Manually enter the plant location in the input box.	
Flant address	Automatically: Tap	
Grid-connec-	The way the plant is connected to the grid, including 100% Feed-in,	
tion type	Self-Consumption, Zero Export, and Off-grid.	
Grid-connected date	The time when the plant is connected to the grid.	
Owner's email	Fill in the owner information of the plant, and both registered and un-	
address	registered email addresses are supported.	
Postal code	The postal code of the place where the plant is located.	
Plant image	Take photos of the plant and upload them.	
	The feed-in tariff can be set in two ways:	
	Enter the feed-in tariff directly in the input box.	
Feed-in tariff	<ul> <li>Tap More Configurations, select the tariff unit, enter the feed-in tariff, and tap Confirm. Enable Time-of-Use Tariff if needed. Tap Add Time-of-Use Tariff, add time intervals and price, and tap Confirm. Please note that if Time-of-use Tariff is enabled, the time periods shall cover 24 hours a day, and can not overlap.</li> </ul>	
	Set the consumption tariff as follows:	
Consumption tariff	Tap More Configurations, select the tariff unit, enter the consumption tariff, and tap Confirm. Enable Time-of-Use Tariff if needed, and refer to the setting methods of the feed-in tariff.	


**Step 5** Bind a device through scanning the QR code on the device, manually inputting the device S/ N, or uploading a QR code picture. Tap **Confirm** after the QR code is identified or the S/N is verified.



Step 6 After a device is bound, tap Device and Commissioning to go to corresponding interface.

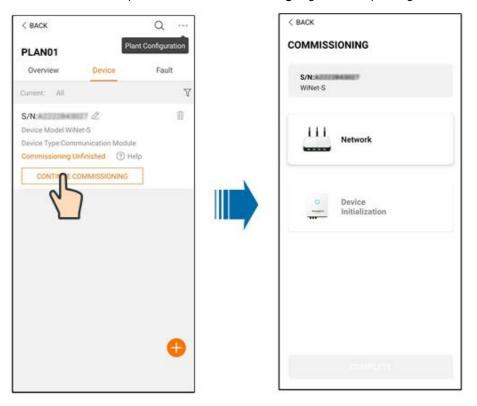

**Step 7** Tap **Network Configuration** to go to the **WLAN connection** interface. Tap the home network in the WLAN list, enter the password, and then tap **Confirm**.

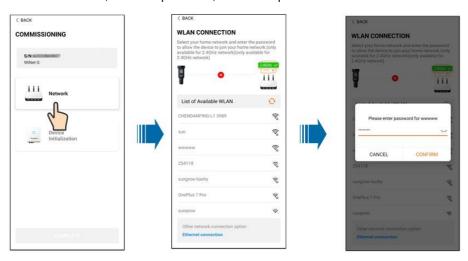


Step 8 Enter the Activate EasyConnect interface, and press the multi-function button on the WiNet-S/WiNet-S2 to enable the Easyconnect mode according to the prompt on the screen. The App automatically enters a waiting processing interface if this mode is enabled, and automatically returns to the commissioning interface after the processing is completed.



### NOTICE

Only the 2.4 GHz working band is supported under the networking mode. If the Easyconnect fails, please refer to other methods in the WiNet-S/WiNet-S2 manual to establish the connection.

**Step 9** Tap **Device Initialization** to go to the **Device initialization** interface. Set the initialization protection parameters as needed and tap **Settings** to return to the commissioning interface.

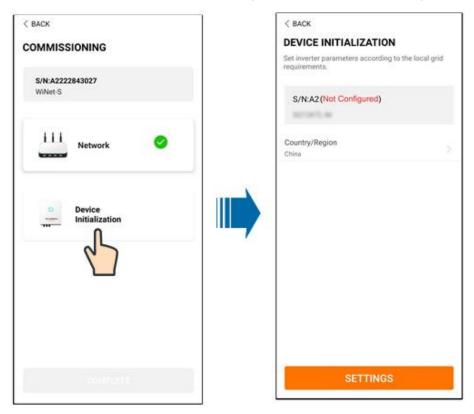

When the country is set to Australia, additionally set the applicable network service provider and then the grid type.



The image shown here is for reference only. Refer to the actual interface for the supported network service providers.

table 6-1 Description of Network Service Provider and Grid Type

Network Service Provider	Grid Type	
AS/NZS 4777.2:2015	1	
AS/NZS 4777.2:2020		
Australia A		
AS/NZS 4777.2:2020	1	
Australia B		
AS/NZS 4777.2:2020	1	
Australia C		
ENERGEX & Ergon Energy	STNW1170: single-phase < 10 kVA & three-phase < 30 kVA	
	• STNW1174: 30 kVA < P <sub>n</sub> ≤ 1500 kVA	
Jemena	• ≤ 10 kVA per phase (or 30 kVA per three phase)	
	• ELE GU 0014: 30 kVA-200 kVA	
Endeavour Energy	MDI 0043	
Ausgrid	NS194	
CitiPower & Powercor	• ≤ 5 kVA for single-phase & 30 kVA for three-phase	
	<ul> <li>&gt; 30 kVA three-phase</li> </ul>	
United Energy	UE-ST-2008.1: ≤ 10 kVA for single- phase & 30 kVA for three-phase	
	• UE-ST-2008.2: > 30 kVA three-phase	
PowerWater	Embedded Generation Notice Photovoltaic Systems:2020	
	TS129-2019: < 10 kW for single-phase     & 30 kW for three-phase	
SA Power Networks	• TS130-2017: > 30 kW & ≤ 200 kW	
	• TS131-2018: > 200 kW	
Horizon Power	HPC-9DJ-13-0001-2019: ≤ 10kVA for single-phase & 30 kVA for three-phase	
	• HPC-9DJ-13-0002-2019: > 30kVA & ≤1MVA	
westernpower	EDM#33612889-2019	
AusNet Services	Basic Micro Embedded Generation: 2020	

\* For compliance with AS/NZS 4777.2:2020, please select from Australia A/B/C. Please contact your electricity grid operator for which region to use.



Please check the country supported by this product at http:// support.sungrow-power.com/.

Set **Country/Region** to the country/region where the inverter is installed. Otherwise, the inverter may report a fault.

**Step 10** After a plant is successfully created, return to the App home page to view the plant information.

- - End

## 6.5 Initializing the Device

The inverter is successfully connected to the router.

If there is no latest equipment upgrade package, skip steps 1 and 2.

The actual initializing procedure may differ due to different countries. Please follow the actual App guidance.

**Step 1** If a latest equipment upgrade package is available, the following prompt window pops up. Tap **UPDATE NOW** to download the latest update package.



figure 6-3 Upgrade Reminder

**Step 2** After download, it would take around 15 minutes to update. After successful upgrade, the screen will show the version numbers before and after the upgrade as well as the upgrade time. Tap **NEXT**.





figure 6-4 Upgrading Inverter

#### NOTICE

If the communication equipment is upgraded, after successful upgrade, check and confirm that the phone is connected to the inverter WLAN.

**Step 3** Tap **Country/Region** and select the country where the inverter is installed at. The supported countries and corresponding settings are as follows.

Country/Region	Setting
Australia ("AU")	Australia
New Zealand ("NZ")	New Zealand
Chile	Chile
Brazil ("BR")	Brazil

### **NOTICE**

The parameter Country/Region must be set to the country (region) where the inverter is installed at. Otherwise, the inverter may report errors.

**Step 4** When the country is set to Australia, additionally set the applicable network service provider and then the grid type.



The image shown here is for reference only. Refer to the actual interface for the supported network service providers.

table 6-2 Description of Network Service Provider and Grid Type

Network Service Provider	Grid Type
AS/NZS 4777.2:2015	1
AS/NZS 4777.2:2020	
Australia A	1
AS/NZS 4777.2:2020	
Australia B	1
AS/NZS 4777.2:2020	
Australia C	1
ENERGEX & Ergon Energy	• STNW1170: single-phase < 10 kVA & three-phase < 30 kVA
	• STNW1174: 30 kVA < P <sub>n</sub> ≤ 1500 kVA
Jemena	• ≤ 10 kVA per phase (or 30 kVA per three phase)
	• ELE GU 0014: 30 kVA-200 kVA
Endeavour Energy MDI 0043	
Ausgrid	NS194

Network Service Provider	Grid Type	
CitiPower & Powercor	<ul> <li>≤ 5 kVA for single-phase &amp; 30 kVA for three-phase</li> <li>&gt; 30 kVA three-phase</li> </ul>	
United Energy	<ul> <li>UE-ST-2008.1: ≤ 10 kVA for single-phase &amp; 30 kVA for three-phase</li> <li>UE-ST-2008.2: &gt; 30 kVA three-phase</li> </ul>	
PowerWater	Embedded Generation Notice Photovoltaic Systems:2020	
SA Power Networks	<ul> <li>TS129-2019: &lt; 10 kW for single-phase &amp; 30 kW for three-phase</li> <li>TS130-2017: &gt; 30 kW &amp; ≤ 200 kW</li> <li>TS131-2018: &gt; 200 kW</li> </ul>	
Horizon Power	<ul> <li>HPC-9DJ-13-0001-2019: ≤ 10kVA for single-phase &amp; 30 kVA for three-phase</li> <li>HPC-9DJ-13-0002-2019: &gt; 30kVA &amp; ≤1MVA</li> </ul>	
westernpower	EDM # 33612889-2019	
AusNet Services	Basic Micro Embedded Generation: 2020	

<sup>\*</sup> For compliance with AS/NZS 4777.2:2020, please select from Australia A/B/C. Please contact your electricity grid operator for which region to use.

**Step 5** Initialize parameters according to local grid requirements, including grid type, reactive power regulation mode, etc. The screen displays that the inverter is successfully configured.

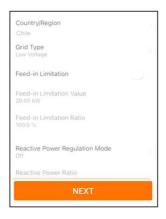


figure 6-5 Initializing Parameters

- - End

## 6.6 Configuring the Plant

The inverter is successfully added to the plant and initialized. Refer to the guidance in previous sections.

The distributor/installer who creates a plant for the end user needs to get the end user's e-mail address. In configuring a plant, the e-mail address is required, and each e-mail address can be registered only once.



Step 1 The App screen will display the added inverter. Tap **NEXT** to configure the plant.

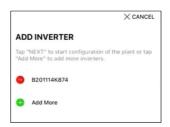


figure 6-6 Display the Added Inverter

Step 2 Fill in the plant information. The fields marked with \* must be filled in.

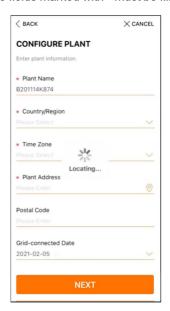


figure 6-7 Entering Plant Information

**Step 3 (Optional)** Fill in the tariff information. The electricity price can be set to a specific value or Time-of-Use tariff.



figure 6-8 Entering Tariff Information

**Step 4** Fill in the end user's e-mail address. The first time you fill in the end user's e-mail address, the system will create an account for the end user and send an email to the end user. The end user can activate the account via the email.



The Distributor/installer creates plants for the end user and can manage the plants by default.



figure 6-9 Entering Owner's e-mail

Step 5 Tap NEXT to wait for the inverter to connect to the iSolarCloud.

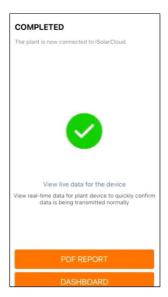


figure 6-10 Configuration Completed

Step 6 (Optional) Tab View live data for the device, tick Inverter or Total Plant Devices and tab ALL PLANTS OPEN. The clock symble indicates that the live data view function is successfully enabled. Tab the inverter to view the live data about voltage, current, power or curve.



Contact Sungrow service to enable live data function of devices. Once enabled, live data function is available for 3 hours per day by default. To make it available for 24 hours, contact SUNGROW.

- **Step 7** Tab **BACK** to the **COMPLETED** screen. Tab **PDF REPORT** to export the plant configuration report.
- **Step 8** Tab **BACK** to the **COMPLETED** screen. Tab **DASHBOARD** to return and manually refresh the page until the newly created plant is displayed with status commissioned.
  - - End

## 6.7 Optimizer Physical Layout (Optional)

- If PV modules are installed and optimizers are configured, check to ensure that all devices are reliably installed.
- Remove QR code labels from the optimizers and attach them to corresponding square cells on the physical layout.
- Please refer to the optimizer user manual for details of the optimizer physical layout.




# 6.8 Single-phase Wireless Meter Networking Procedure (for SG5.0RS-ADA)

Step 1 Press and hold the function button on **WiNet-S2** for 5 - 10 s, and release it after the RUN indicator turns to fast blinking in green. The WiNet-S2 is in networking mode.

Step 2 Press and hold the function button on **WiMeter-S** for 5 — 10 s, and release it after the RUN indicator turns to fast blinking in green. The WiMeter-S is in networking mode. Step 3 Check whether the WiMeter is online.

Log in to iSolarCloud App, select the corresponding plant, and check whether the S/N of "Networking Devices" displayed on the "Device" page is consistent with the S/N of the Wi-Meter that is manually networked. If it is the same, the WiMeter-S is successfully online.

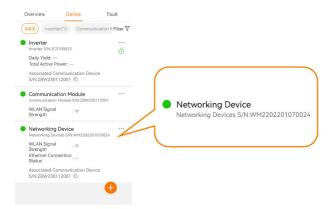

Step 4 If the WiMeter goes online in step 3, the networking is successful. If the WiMeter does not come online within 5 minutes, repeat step 1 and 2.

## 7 iSolarCloud App

## 7.1 About iSolarCloud


The iSolarCloud App is a mobile application used for power plant management. The App provides plant operation analysis service and enables intelligent mobile O&M. It is designed with functions such as plant operation data display, rapid plant access, remote parameter setting, quick fault location and notification, and power yield and revenue analysis. With iSolarCloud, convenient and efficient end-to-end plant O&M is allowed.

#### **Connection Methods**

Users can log in to the App via remote connection or local access for plant monitoring.

## Login by Establishing a Direct Connection (Local)

Establish communication between the mobile phone and the WiFi wireless communication module or the inverter's built-in Bluetooth module to enable mobile maintenance of the inverter. Users can check the information about and set parameters for the inverter.

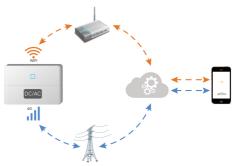

Login Via Account and Password (Remote)



Login via Bluetooth connection is applicable only for SUNGROW inverters with built-in Bluetooth modules. Please consult your retailer/installer about whether the inverter is equipped with a Bluetooth module.

#### Login with an Account (Remote)

Establish communication between the communication module and the home router or base station to enable data exchange between the inverter and the cloud server. Users can check the inverter data or send commands to control the inverter on the App.

7 iSolarCloud App User Manual



Direct Login (Near end)

## 7.2 Install iSolarCloud

This section introduces how to download and install the iSolarCloud App.

## **Procedure**

**Step 1** Search for **iSolarCloud** in App Store, Google Play or other App stores, or scan the QR code below with a mobile phone and download the App by following the onscreen instructions.



**Step 2** Tap the downloaded installation package and follow the onscreen instructions to complete the installation. The icon of iSolarCloud will then appear on the screen.



--End

User Manual 7 iSolarCloud App

## 7.3 User Identity

There are two types of user accounts: Owner and Retailer/Installer.

The **Owner** can view the plant information, create a plant, set common parameters, and share a plant, etc.

The **Retailer/Installer** can assist the Owner in creating/managing a plant, manage users and organizations, and set grid-related parameters and advanced parameters, etc.

The default account and password are as shown in the table below. Please change the password as soon as possible to keep your account secure.

table 7-1 Default account and password

Role	Account Name	Password
User	user	pw1111
Retailer/Installer	admin	pw8888



To learn how to change passwords, please consult theiSolarCloud App user manual .Navigate to: "Device Commissioning (V2.1.6.20250218 or Later)→Device Connection→Device Connection via WLAN →Identity Verification".

## 7.4 Device Commissioning

For device commissioning operations, please refer to the **Device Commissioning** in the **iSolarCloud App User Manual**. Alternatively, you can scan the QR code below to access the **Device Commissioning** section of the manual.



## 8 System Decommissioning

## 8.1 Disconnecting the Inverter

## **A** CAUTION

#### Danger of burns!

Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

For maintenance or other service work, the inverter must be switched off. Proceed as follows to disconnect the inverter. Lethal voltages or damage to the inverter will follow if otherwise.

- Step 1 Disconnect the external AC circuit breaker and prevent it from inadvertent reconnection.
- Step 2 Rotate the DC switch to the "OFF" position for disconnecting all of the PV string inputs.
- **Step 3** Wait about 10 minutes until the capacitors inside the inverter completely discharge.
- Step 4 Ensure that the DC cable is current-free with a current clamp.
  - --End

## 8.2 Dismantling the Inverter

### **A** CAUTION

Risk of burn injuries and electric shock!


After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter.

 Before dismantling the inverter, disconnect the inverter from both AC and DC power sources.



- If there are more than two layers of inverter DC terminals, dismantle the outer DC connectors before dismantling the inner ones.
- If the original packing materials are available, put the inverter inside them and then seal them using adhesive tape. If the original packing materials are not available, put the inverter inside a cardboard box suitable for the weight and size of this inverter and seal it properly.

**Step 1** Refer to "5 Electrical Connection", for the inverter disconnection of all cables in reverse steps. In particular, when removing the DC connector, use an MC4 wrench to loosen the locking parts and install waterproof plugs.

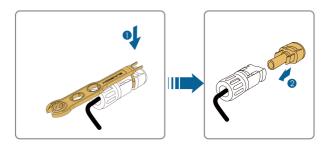

- Step 2 Refer to "4 Mechanical Mounting", to dismantle the inverter in reverse steps.
- Step 3 If necessary, remove the wall-mounting bracket from the wall.
- **Step 4** If the inverter will be used again in the future, please refer to "3.2 Inverter Storage" for a proper conservation.
  - - End

## 8.3 Disposal of Inverter

Users take the responsibility for the disposal of the inverter.

## **⚠** WARNING

Please scrap the inverter in accordance with relevant local regulations and standards to avoid property losses or casualties.

#### NOTICE

Some parts of the inverter may cause environmental pollution. Please dispose of them in accordance with the disposal regulations for electronic waste applicable at the installation site.

## 9 Troubleshooting and Maintenance

## 9.1 Troubleshooting

Once the inverter fails, the fault information is displayed on the App interface. If the inverter is equipped with an LCD screen, the fault information can be viewed on it.

The fault codes and troubleshooting methods of all PV inverters are detailed in the table below, and only some of the faults may occur to the model you purchased. When a fault occurs, you can check the fault information according to the fault code on the mobile app.

Fault Code	Fault Name	Corrective Measures
2, 3, 14, 15	Grid Overvoltage	Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:
		Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is higher than the set value.
		<ol> <li>Check whether the protection parameters are appropriately set via the App or the LCD. Modify the overvoltage protection values with the consent of the local electric power operator.</li> <li>Contact Sungrow Customer Service if the preceding causes are ruled out and the fault persists.</li> </ol>
4, 5	Grid Undervoltage	Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:  1. Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is lower than the set value.  2. Check whether the protection parameters are appropriately set via the App or the LCD.  3. Check whether the AC cable is firmly in place.  4. Contact Sungrow Customer Service if the preceding causes are ruled out and the fault persists.

Fault Code	Fault Name	Corrective Measures
r aunt Coue	Grid	Generally, the inverter will be reconnected to the
8	Overfrequency	grid after the grid returns to normal. If the fault oc-
	- Cromoquency	curs repeatedly:
9	Grid Underfrequency	1. Measure the actual grid frequency, and contact the local electric power company for solutions if the grid frequency is beyond the set range.  2. Check whether the protection parameters are
	Ondomoquoney	appropriately set via the App or the LCD.
		3. Contact Sungrow Customer Service if the preceding causes are ruled out and the fault persists.
		Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:
		1. Check whether the grid supplies power reliably.
		2. Check whether the AC cable is firmly in place.
	Grid Power	3. Check whether the AC cable is connected to
10	Outage	the correct terminal (whether the live wire and
		the N wire are correctly in place).
		Check whether the AC circuit breaker is connected.
		5. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
	Excess Leakage	The fault can be caused by poor sunlight or damp environment, and generally the inverter will be reconnected to the grid after the environment is improved.
12	Current	2. If the environment is normal, check whether
		the AC and DC cables are well insulated.
		<ol><li>Contact Sungrow Customer Service if the pre- ceding causes are ruled out and the fault persists.</li></ol>
13		Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:
	Grid Abnormal	Measure the actual grid, and contact the local electric power company for solutions if the grid parameter exceeds the set range.
		2. Contact Sungrow Customer Service if the preceding causes are ruled out and the fault persists.



Fault Code	Fault Name	Corrective Measures
Fault Code	rault Name	Generally, the inverter will be reconnected to the
		grid after the grid returns to normal. If the fault oc-
		curs repeatedly:
		Measure the actual grid voltage. If grid phase
		voltages differ greatly, contact the electric power
	Grid Voltage	company for solutions.
17	Imbalance	2. If the voltage difference between phases is
		within the permissible range of the local power
		company, modify the grid voltage imbalance pa-
		rameter through the App or the LCD.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		Check whether the corresponding string is of
		reverse polarity. If so, disconnect the DC switch
		and adjust the polarity when the string current
		drops below 0.5 A.
28, 29, 208,	PV Reserve Con-	2. Contact Sungrow Customer Service if the pre-
212, 448-479	nection Fault	ceding causes are ruled out and the fault persists.
		*The code 28 to code 29 are corresponding to
		PV1 to PV2 respectively.
		*The code 448 to code 479 are corresponding to
		string 1 to string 32 respectively.
		1. Check whether the corresponding string is of
		reverse polarity. If so, disconnect the DC switch
532-547, 564- 579		and adjust the polarity when the string current
		drops below 0.5 A.
	PV Reverse Con-	2. Contact Sungrow Customer Service if the pre-
	nection Alarm	ceding causes are ruled out and the alarm
		persists.
		*The code 532 to code 547 are corresponding to
		string 1 to string 16 respectively.
		*The code 564 to code 579 are corresponding to
		string 17 to string 32 respectively.



Fault Code	Fault Name	Corrective Measures
		Check whether the voltage and current of the inverter is abnormal to determine the cause of the alarm.
		Check whether the corresponding module is sheltered. If so, remove the shelter and ensure module cleanness.
E40 E62 E00		2. Check whether the battery board wiring is loose, if so, make it reliably connected.
548-563, 580- 595	PV Abnormal Alarm	3. Check if the DC fuse is damaged. If so, replace the fuse.
		Contact Sungrow Customer Service if the preceding causes are ruled out and the alarm persists.
		*The code 548 to code 563 are corresponding to string 1 to string 16 respectively.
		*The code 580 to code 595 are corresponding to string 17 to string 32 respectively.
	Excessively High Ambient Temperature	Generally, the inverter will resume operation when the internal or module temperature returns to normal. If the fault persists:
		Check whether the ambient temperature of the inverter is too high;
		Check whether the inverter is in a well-ventilated place;
37		3. Check whether the inverter is exposed to direct sunlight. Shield it if so;
		4. Check whether the fan is running properly. Replace the fan if not;
		<ol><li>Contact Sungrow Power Customer Service if the fault is due to other causes and the fault persists.</li></ol>
40	Excessively Low	Stop and disconnect the inverter. Restart the in-
43	Ambient Temperature	verter when the ambient temperature rises within the operation temperature range.



Fault Code	Fault Name	Corrective Measures
		Wait for the inverter to return to normal. If the
		fault occurs repeatedly:
		Check whether the ISO resistance protection value is excessively high via the app or the LCD, and ensure that it complies with the local
		regulations.
	Low System Insu-	<ol><li>Check the resistance to ground of the string and DC cable. Take corrective measures in case of short circuit or damaged insulation layer.</li></ol>
39	lation Resistance	3. If the cable is normal and the fault occurs on
	(Earth Fault)	rainy days, check it again when the weather turns fine.
		4. If there are batteries, check whether battery
		cables are damaged and whether terminals are
		loose or in poor contact. If so, replace the dam-
		aged cable and secure terminals to ensure a reli-
		able connection.
		5. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		1. Check whether the AC cable is correctly
		connected.
106	Grounding Cable	2. Check whether the insulation between the
100	Fault	ground cable and the live wire is normal.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		Disconnect the DC power supply, and check
		whether any DC cable is damaged, the connec-
	Electric Arc Fault	tion terminal or fuse is loose or there is a weak
88		contact. If so, replace the damaged cable, fasten the terminal or fuse, and replace the burnt
		component.
		After performing step 1, reconnect the DC
		power supply, and clear the electric arc fault via
		the App or the LCD, after that the inverter will return to normal.
		Contact Sungrow Customer Service if the fault     persists
		persists.



Fault Code	Fault Name	Corrective Measures	
		1. Check if the meter is wrongly connected.	
	Reverse Connec-	2. Check if the input and output wiring of the me-	
84	tion Alarm of the	ter is reversed.	
	Meter/CT	3. If the existing system is enabled, please check	
		if the rated power setting of the existing inverter	
		is correct.	
		1. Check whether the communication cable and	
		the terminals are abnormal. If so, correct them to ensure reliable connection.	
	Meter Communi-		
514	cation Abnormal	Reconnect the communication cable of the meter.	
	Alarm		
		Contact Sungrow Customer Service if the preceding causes are ruled out and the alarm	
		persists.	
		Check whether the output port is connected to	
		actual grid. Disconnect it from the grid if so.	
323	Grid Confrontation	2. Contact Sungrow Customer Service if the pre-	
		ceding causes are ruled out and the fault persists.	
		Check whether the communication cable and	
		the terminals are abnormal. If so, correct them to	
	Inverter Parallel	ensure reliable connection.	
75	Communication Alarm	2. Reconnect the communication cable of the	
		meter.	
	, udilli	3. Contact Sungrow Customer Service if the pre-	
		ceding causes are ruled out and the alarm	
		persists.	



Fault Code	Fault Name	Corrective Measures
7, 11, 16, 19–		
25, 30–34, 36,		
38, 40–42, 44–		
50, 52–58, 60–		
69, 85, 87, 92,		Wait for the inverter to return to normal.
93, 100–105,		2. Disconnect the AC and DC switches, and dis-
107–114, 116–		connect the battery side switches if there are bat-
124, 200–211,	System Fault	teries. Close the AC and DC switches in turn 15
248–255, 300–	Cystem radit	minutes later and restart the system.
322, 324–328,		•
401–412, 600–		3. Contact Sungrow Customer Service if the pre-
603, 605, 608,		ceding causes are ruled out and the fault persists.
612, 616, 620,		
622–624, 800,		
802, 804, 807,		
1096–1118		
59, 70–74, 76–		1. The inverter can continue running.
83, 89, 216–		2. Check whether the related wiring and terminal
218, 220–233,		are abnormal, check whether there are any for-
432–434, 500–	System Alarm	eign materials or other environmental abnormal-
513, 515–518,	Cyclem / Ham	ities, and take corresponding corrective
635–638, 900,		measures when necessary.
901, 910, 911,		3. If the fault persists, please contact Sungrow
996		Power Customer Service.
		1. Check whether the corresponding string is of
		reverse polarity. If so, disconnect the DC switch
		and adjust the polarity when the string current
264 202	MPPT Reverse	drops below 0.5 A.
264-283	Connection	2. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		*The code 264 to code 279 are corresponding to
		string 1 to string 20 respectively.



Fault Code	Fault Name	Corrective Measures	
		The inverter can continue running.	
		2. Check whether the related wiring and termi-	
		nals are abnormal, check whether there are any	
332-363	<b>Boost Capacitor</b>	foreign materials or other environmental abnor-	
332-303	Overvoltage Alarm	malities, and take corresponding corrective	
		measures when necessary.	
		If the fault persists, please contact Sungrow	
		Power Customer Service.	
		1. Disconnect the AC and DC switches, and dis-	
		connect the battery side switches if there are bat-	
364-395	<b>Boost Capacitor</b>	teries. Close the AC and DC switches in turn 15	
304-393	Overvoltage Fault	minutes later and restart the system.	
		2. If the fault persists, please contact Sungrow	
		Power Customer Service.	
		1. Check whether the number of PV modules of	
		the corresponding string is less than other strings.	
		If so, disconnect the DC switch and adjust the PV	
		module configuration when the string current	
		drops below 0.5 A.	
1548-1579	String Current	2. Check whether the PV module is shaded;	
1546-1579	Reflux	3. Disconnect the DC switch to check whether	
		the open circuit voltage is normal when the string	
		current drops below 0.5 A. If so, check the wiring	
		and configuration of the PV module,	
		4. Check whether the orientation of the PV mod-	
		ule is abnormal.	



Fault Code	Fault Name	Corrective Measures
1600 - 1615, 1632 - 1655	PV Grounding Fault	<ol> <li>When the fault occurs, it is forbidden to directly disconnect the DC switch and unplug PV terminals when the direct current is greater than 0.5 A;</li> <li>Wait until the direct current of the inverter falls below 0.5 A, then disconnect the DC switch and unplug the faulty strings;</li> <li>Do not reinsert the faulty strings before the grounding fault is cleared;</li> <li>If the fault is not caused by the foregoing reasons and still exists, contact Sungrow Customer Service.</li> </ol>
1616	System Hardware Fault	<ol> <li>It is prohibited to disconnect the DC switch when the DC current is greater than 0.5 A when the fault occurs.</li> <li>Disconnect the DC switch only when the inverter DC side current drops below 0.5 A.</li> <li>It is prohibited to power up the inverter again. Please contact Sungrow Customer Service.</li> </ol>

Once a fault occurs to the optimizer or RSD, the fault information is displayed on the App.

Fault	Fault	Possible	Corrective Method
Code	Name	Cause	Corrective Metriod
		The PV	
4	Input overvolt- age	voltage is higher than the set pro- tection	Check whether the open-circuit voltage of the PV module connected to the optimizer exceeds the maximum input voltage allowed by the optimizer.
		value	
512	Hardware fault	A hardware fault occurs to the optimizer	Please contact Sungrow Customer Service.
1024	Update failed	The opti- mizer soft- ware fails to upgrade	<ol> <li>Check the light condition, and update the optimizer again if the light is normal.</li> <li>If the fault persists, please contact Sungrow Customer Service.</li> </ol>





- If there is a string current backfeed fault, first check whether the optimizer is
  offline.
- Contact the dealer if the measures listed in the "Troubleshooting Method" column have been taken but the problem persists. Contact SUNGROW if the dealer fails to solve the problem.

### 9.2 Maintenance

#### 9.2.1 Maintenance Notices

The DC switch can be secured with a lock in the OFF position or a certain angle beyond the OFF position.(For countries "AU" and "NZ")

#### **▲** DANGER

Risk of inverter damage or personal injury due to incorrect service!

- Be sure to use special insulation tools when perform high-voltage operations.
- Before any service work, first disconnect the grid-side AC circuit breaker and check the inverter status. If the inverter indicator is off, please wait until night to disconnect the DC switch. If the inverter indicator is on, directly disconnect the DC switch.
- After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter
- Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.
- When maintaining the product, it is strictly prohibited to open the product if
  there is an odor or smoke or if the product appearance is abnormal. If there is
  no odor, smoke, or obvious abnormal appearance, repair or restart the inverter
  according to the alarm corrective measures. Avoid standing directly in front of
  the inverter during maintenance.

#### **A** CAUTION

To prevent misuse or accidents caused by unrelated personnel: Post prominent warning signs or demarcate safety warning areas around the inverter to prevent accidents caused by misuse.



#### NOTICE

Restart the inverter only after removing the fault that impairs safety performance. As the inverter contains no component parts that can be maintained, never open the enclosure, or replace any internal components.

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

#### NOTICE

Touching the PCB or other static sensitive components may cause damage to the device.

- · Do not touch the circuit board unnecessarily.
- Observe the regulations to protect against electrostatic and wear an anti-static wrist strap.

#### 9.2.2 Quick Shutdown

The PV system can perform a quick shutdown, reducing the output voltage of strings to below 30 V within 20 s.

Triggering methods of quick shutdown:

- Method 1: Turn off the AC circuit breaker between the inverter and the grid.
- Method 2: Connect RSD-1 and RSD-2 in COM2 port to trigger quick shutdown. Disconnect RSD-1 and RSD-2 to exit the quick shutdown mode.

#### NOTICE

- The quick shutdown is not supported if optimizers are configured for some PV modules.
- · Please check regularly whether the quick shutdown function is normal.

## 9.2.3 Routine Maintenance

Item	Method	Period
	Check the temperature and dust of the	Six months to a year
Device clean	device. Clean the device enclosure if	(depending on the dust con-
	necessary.	tents in air)
	Check whether all cable are firmly con-	
Electrical	nected in place.	6 months after commissioning
connection	Check whether there is damage to the	6 months after commissioning and then once or twice a year
Connection	cables, especially the surface in con-	
	tact with metal.	
	Visual check for any damage or deformation of the microinverter.	
General status of the system	Check any abnormal noise during the operation.	Every 6 months
	Check each operation parameter.	
	Be sure that nothing covers the heat sink of the device.	



# 10 Appendix

## 10.1 Technical Data

Parameter	SG5.0RS-ADA	SG8.0RS	
Input (DC)			
Recommended max. PV input power	7.5 kWp	12 kWp	
Max. PV input voltage(1)	60	0 V	
Min. operating PV voltage / Start-up input voltage	40 V / 50 V		
Rated PV input voltage	36	0 V	
MPPT operating voltage range <sup>(2)</sup>	40 V -	- 560 V	
MPP voltage range for rated power	160 V – 480 V	250 V – 480 V	
No. of independent MPP inputs	3		
No. of PV strings per MPPT	1		
Max. PV input current	48 A ( 16 A / 16 A / 16 A)		
Max. DC Short-circuit current	60 A ( 20 A / 20 A / 20 A)		
Max. current for DC connector	30A		
Output (AC)			
Rated AC output power	4999 W for "AU", 5000 W for others	8000 W	
Max. AC Output power	4999 VA for "AU", 5000 VA for others	8000 VA	
Rated AC output apparent power	4999 VA for "AU", 5000 VA for others	8000 VA	
Rated AC output current (at 230 V)	21.7 A for "AU", 21.8 A for others	34.8 A	

User Manual 10 Appendix

Parameter	SG5.0RS-ADA	SG8.0RS
Max. AC output current	21.7 A for "AU", 22.8 A for	r 36.4 A
	others	
Rated AC voltage	220 V /	230 V / 240 V
AC voltage range	154	V - 276 V
Rated grid frequency	50 H	Hz / 60 Hz
Grid frequency range	45 – 55 h	Hz / 55 – 65 Hz
Harmonic (THD)	< 3 % (a	t rated power)
Power factor at rated power / Ajustable power factor	> 0.99 / 0.8 le	eading - 0.8 lagging
Feed-in phases / Connection phases		1/1
Efficiency		
Max. efficiency / European efficiency	97.8 % / 96.9 %	97.8 % / 97.3 %
Protection		
Grid monitoring	Yes	
DC reverse polarity protection	Yes	
AC short-circuit protection		Yes
Leakage current protection	Yes	
Surge protection	DC Type II, AC Type II	
Ground fault monitoring	Yes	
DC switch	Yes	
PV string current monitoring	Yes	
Arc fault circuit interrupter (AFCI)	Optional	
PID Zero function	Yes	
DC terminal protective	Yes	
Protective Class	<u>.</u>	
Protective Class Overvoltage Category	DC III/AC III	
- Vol Vollage Galegoly	DC II/AC III	

10 Appendix User Manual

Parameter	SG5.0RS-ADA	SG8.0RS
Active Anti-Islanding Method	Frequency Shift	
General Data		
Dimensions (W x H x D)	490 mn	n x 340 mm x 170 mm
Weight		19 kg
Mounting method	Wall	l-mounting bracket
Topology	Т	ransformerless
Degree of protection		IP65
Corrosion(AU)		C5
Operating ambient temperature range	-25°C to +60°C	
Allowable relative humidity range (non-condensing)	0–100 %	
Cooling method	Natural cooling	
Max. operating altitude	4000 m	
Display	LED digital display & LED indicator	
Communication	Ethernet / WLAN / RS485 / DI (Ripple control & DRM)	
DC connection type	MC4 (Max. 6 mm²)	
AC connection type	Plug and play connector (Max. 16 mm²)	
Grid compliance EN61000-6-2/3, AS/NZS 4777.2, ABNT NBR 161 NBR 16150, G99		ZS 4777.2, ABNT NBR 16149, ABNT
Grid Support	Active & reactive power control and power ramp rate control	
Country of manufacture		China

- (1) Input voltage exceeding the MPPT operating voltage range triggers inverter protection.
- (2) Please refer to the user manual for the full load MPPT voltage range.

<sup>\*</sup> Country code needs to be set before grid connection.

Parameter	SG9.0RS	SG10RS
Input (DC)		
Recommended max. PV input power	13.5 kWp	15 kWp

User Manual 10 Appendix

Parameter	SG9.0RS	SG10RS	
Max. PV input voltage(1)	600 V		
Min. operating PV voltage / Start-up input voltage	40 V / 50 V		
Rated PV input voltage		360 V	
MPPT operating voltage range <sup>(2)</sup>	40	40 V – 560 V	
MPP voltage range for rated power	280 V – 480 V	310 V – 480 V	
No. of independent MPP inputs		3	
No. of PV strings per MPPT		1	
Max. PV input current	48 A(16	6 A / 16 A / 16 A)	
Max.DC Short-circuit current	60 A ( 20 A / 20 A / 20 A)		
Max. current for DC connector	1	30A	
Output (AC)			
Rated AC output power	9000 W	9999 W for Australia, 10000 W for ohers	
Max. AC output apparent power	9000 VA	9999VA for Australia, 10000 VA for ohers	
Rated AC output apparent power	1	9999VA for Australia, 10000 VA for ohers	
Rated AC output current (at 230 V)	39.2 A	43.5 A	
Max. AC output current	41 A	45.5 A	
Rated AC voltage	220 V / 230 V / 240 V		
AC voltage range	154 V - 276 V		
Rated frequency range	45 Hz – 55 Hz / 55 Hz – 65 Hz		
Grid frequency range	45 – 55 Hz / 55 – 65 Hz		
Harmonic (THD)	< 3 % (at rated power)		
Power factor at rated power / Adjustable power factor	> 0.99 / 0.8 leading - 0.8 lagging		

10 Appendix User Manual

Parameter	SG9.0RS	SG10RS
Feed-in phases / Connection phases	1/1	
Efficiency		
Max. efficiency / European efficiency	97.8 % / 97.4 %	97.8 % / 97.4 %
Protection		
Grid monitoring		Yes
DC reverse polarity protection		Yes
AC short-circuit protection		Yes
Leakage current protection		Yes
Surge protection	DC Type II, AC Type II	
DC switch	Yes	
PV string current monitoring	Yes	
PID Zero	Yes	
Arc fault circuit interrupter (AFCI)	Optional	
Protective Class	I	
Overvoltage Category	DC	II/AC III
Active Anti-Islanding Method	Frequ	ency Shift
General Data		
Dimensions (W x H x D)	490 mm x 340 mm x 170 mm	
Weight	19 kg	
Mounting method	Wall-mounting bracket	
Topology	Transformerless	
Degree of protection	IP65	
Corrosion(AU)	C5	
Operating ambient temperature range	-25°C to +60°C	

User Manual 10 Appendix

Parameter	SG9.0RS	SG10RS
Allowable relative humidity range (non-condensing)		0–100 %
Cooling method	Natural cooling	
Max. operating altitude	4000 m	
Display	LED o	ligital display & LED indicator
Communication	Ethernet / WLA	N / RS485 / DI (Ripple control & DRM)
DC connection type	MC4 (Max. 6 mm²)	
AC connection type	Plug and	d play connector (Max. 16 mm²)
Grid compliance		/2, IEC / EN62116, IEC / EN61727, IEC / .S/NZS 4777.2, ABNT NBR 16149, ABNT NBR 16150, G99
Grid Support	Active & reactive power control and power ramp rate control	
Country of manufacture		China

<sup>(1)</sup> Input voltage exceeding the MPPT operating voltage range triggers inverter protection.

## 10.2 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

#### **Evidence**

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

#### **Conditions**

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

## **Exclusion of Liability**

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- · The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.

<sup>(2)</sup> Please refer to the user manual for the full load MPPT voltage range.

<sup>\*</sup> Country code needs to be set before grid connection.

10 Appendix User Manual

- The device operates in harsh conditions beyond those described in this manual.
- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- · The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.



Product data such as product dimensions are subject to change without prior notice. The latest documentation from SUNGROW should take precedence in case of any deviation.

### 10.3 Contact Information

In case of questions about this product, please contact us. We need the following information to provide you the best assistance:

- Model of the device
- · Serial number of the device
- · Fault code/name
- · Brief description of the problem

For detailed contact information, please visit: https://en.SUNGROWpower.com/contactUS

