

Quick Installation Guide

PV Grid-Connected Inverter

SG200HX-US



- Contents may be periodically updated or revised due to product development. The information in this guide is subject to change without notice. In no case shall this guide substitute for the user manual or related notes on the device.
- Make sure to read over, fully understand and strictly follow the detailed instructions of the user manual and other related regulations. Visit <http://www.sungrowpower.com/>, choose "PV Inverters" and search for the device model on the "Products" tab page to view or obtain the user manual.
- All operations can be performed only by qualified personnel, that must be trained in the installation and commissioning of the electrical system, as well as the dealing with hazards, have knowledge of the manual and of the local regulations and directives.
- Before installation, check that the package contents are intact and complete against the packing list. Contact SUNGROW or the distributor in case of any damaged or missing components.
- The cable must be intact and well insulated. Operation personnel must wear proper personal protective equipment (PPE) all the time.
- Any violation could result in personal death or injury or device damage, and will void the warranty.

Safety

Please follow the safety instructions related to the PV strings and the utility grid. Otherwise, SUNGROW shall not be held liable for any damage caused.

DANGER

Lethal voltage!

- PV strings will produce electrical power when exposed to sunlight and can cause a lethal voltage and an electric shock.
- Only qualified personnel can perform the wiring of the PV panels.
- All electrical connections must be in accordance with local and national standards.
- Only with the permission of the utility grid, the inverter can be connected to the utility grid.
- Do not open the enclosure at any time. Unauthorized opening will void guarantee and warranty claims and in most cases terminate the operating license.
- When the enclosure lid is removed, live components can be touched which can result in death or serious injury due to electric shock.

WARNING

All the warning labels and nameplate on the inverter body must be clearly visible and not be removed, covered or pasted.

CAUTION

Risk of burns due to hot components!

Do not touch any hot parts (such as heat sinks) during operation. Only the DC switch can safely be touched at any time.

NOTICE

Only qualified personnel can perform the country setting.

Unauthorized alteration of the country setting may cause a breach of the type-certificate marking.



Disconnect the inverter from all the external power sources before service!



There is a danger from a hot surface that may exceed 60°C.



Danger to life due to high voltages!
Do not touch live parts for 5 minutes after disconnection from the power sources.
Only qualified personnel can open and maintain the inverter.



Do not dispose of the inverter together with household waste.



CE mark of conformity.
EU/EEA Importer



CSA mark of conformity.



Additional grounding point.



Read the user manual before maintenance!

 1x

 1x

 4x

 2x

 4x

 2x

24x *

 1x

 1x

 1x

 1x


 1x

Mounting location


The diagrams illustrate the following installation requirements and prohibitions:

- Temperature:**
 - Maximum temperature: $\leq 60^{\circ}\text{C}$ (indicated by a sun icon).
 - Minimum temperature: $\geq -30^{\circ}\text{C}$ (indicated by a snowflake icon).
- Humidity:**
 - Maximum relative humidity: $\leq 100\%$ (indicated by a water drop icon).
- Clearances:**
 - Top clearance: $\geq 200\text{mm}$
 - Left and right side clearances: $\geq 800\text{mm}$
 - Front clearance: $\geq 1000\text{mm}$
 - Bottom clearance: $\geq 600\text{mm}$
- Installation Prohibitions (Blue X):**
 - Installation directly against a wall without proper clearance.
 - Installation in a corner.
 - Installation on a sloped surface.
 - Installation tilted at an angle.
 - Installation on a floor.
 - Installation on a wall, tilted.
- Installation Requirements (Orange Checkmark):**
 - Installation with a gap between the device and the wall.
 - Installation on a sloped surface with a minimum gap of $\geq 10\text{mm}$.


Dimension

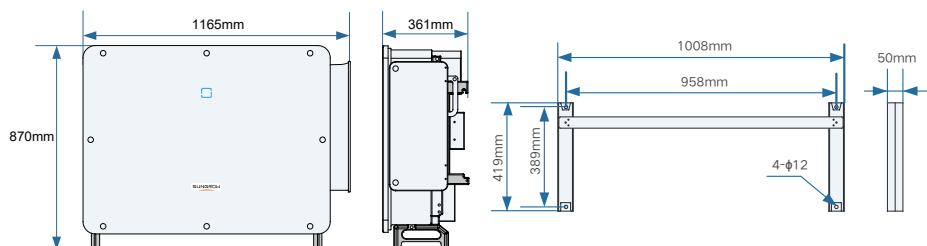

Mounting

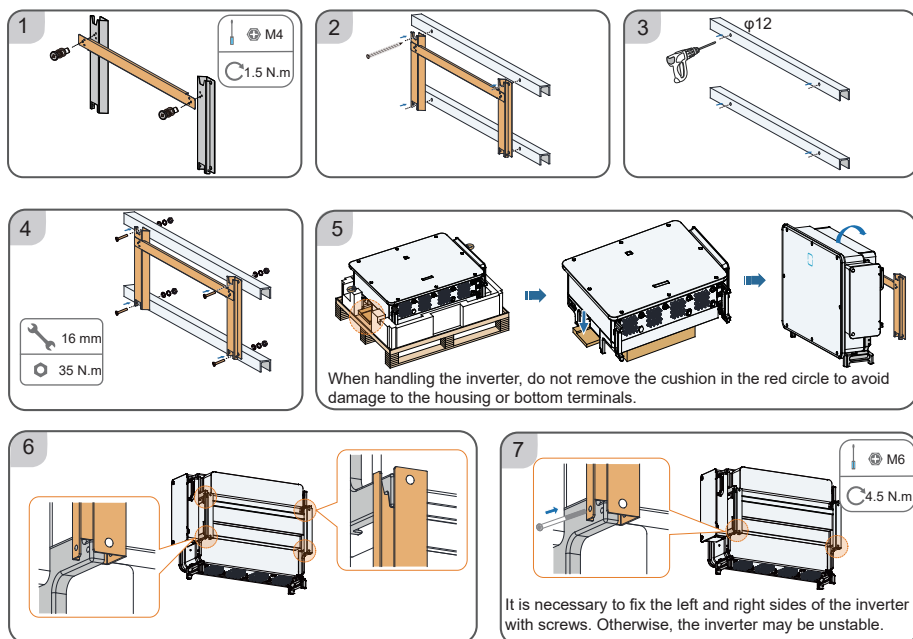


PE Connection

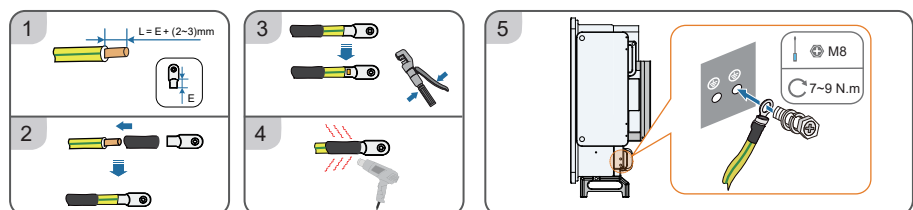


Connection Procedure (For a single-core cable)


The description is given by using four-core cable as an example.

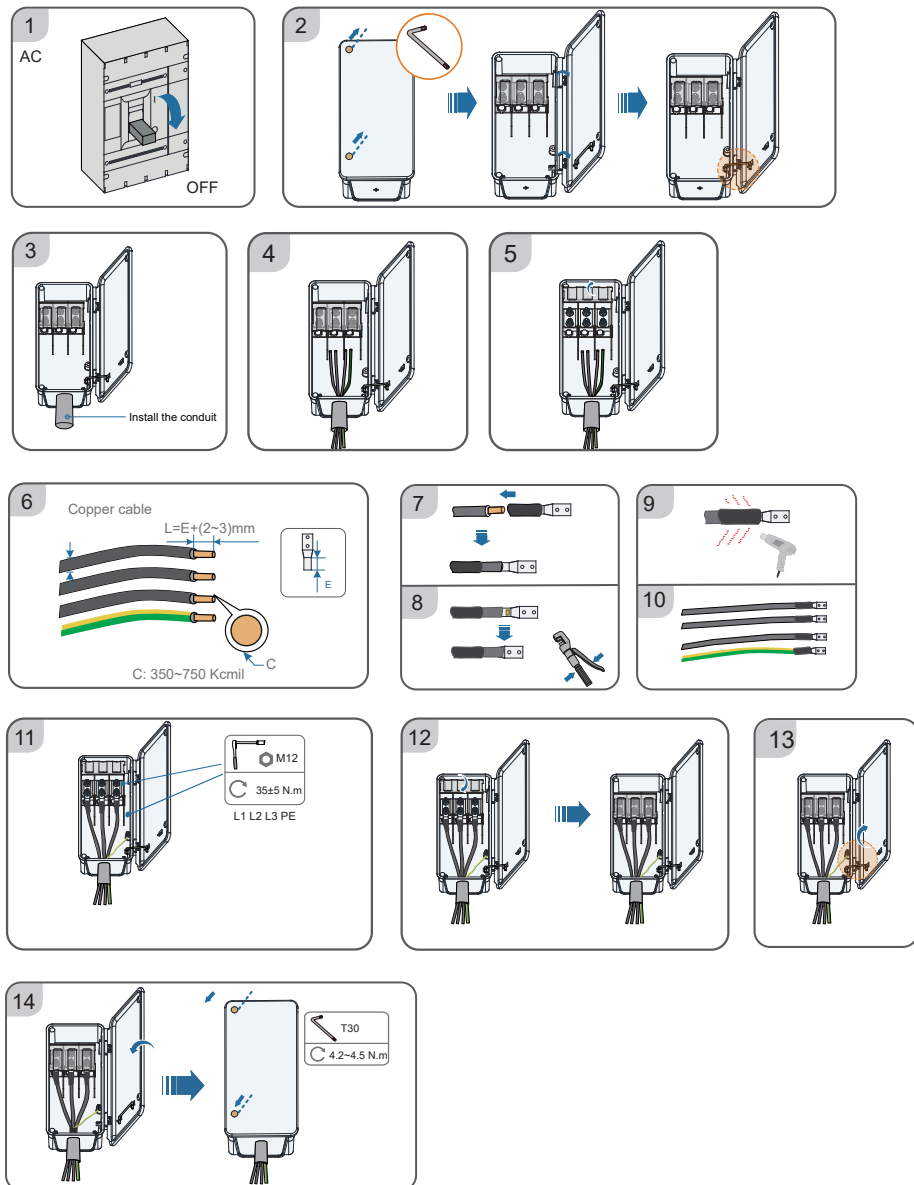


DC Connection

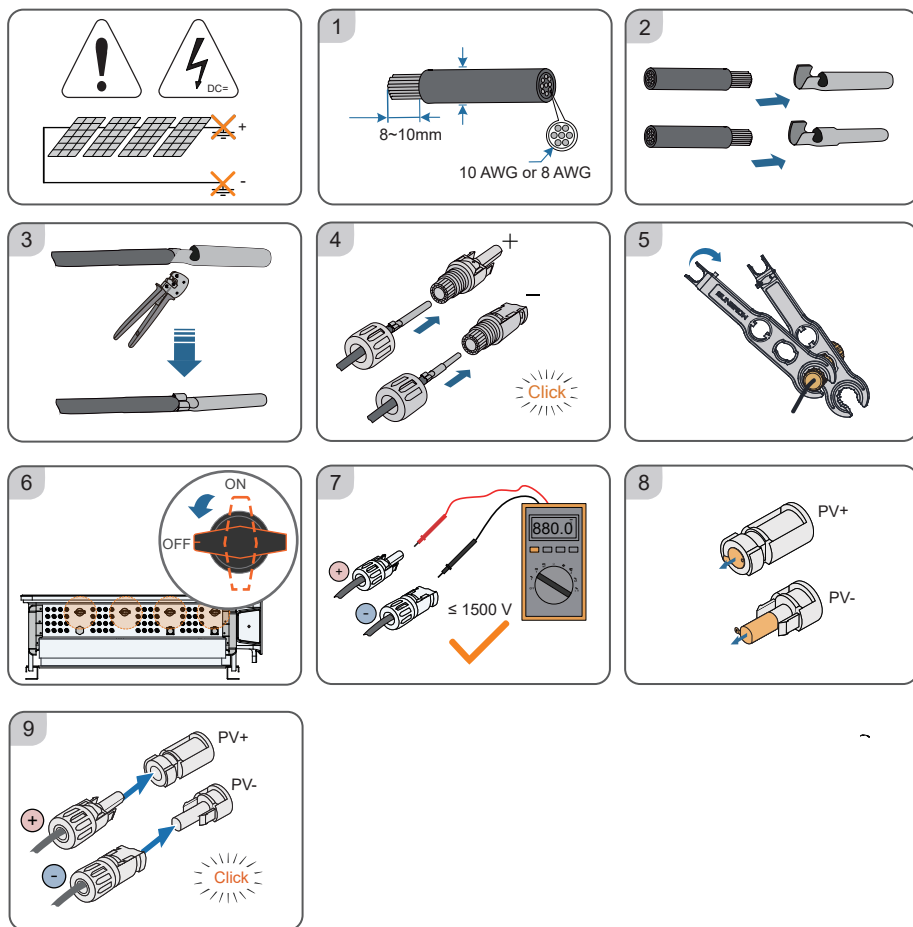


RS485 Communication Connection(COM1)

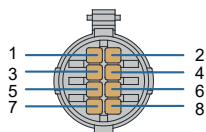



Port	PIN	Definition	Description
RS485_1	1	RS485A1, RS485 differential signal+	Used for cascading inverters or connecting to devices such as the Data Logger.
	2	RS485A1, RS485 differential signal+	
	3	RS485B1, RS485 differential signal-	
	4	RS485B1, RS485 differential signal-	
PE	5	PE, shielding ground	—
	6	PE, shielding ground	
RS485_2	7	RS485A2, RS485 differential signal+	Communication device for connection to the tracking system
	8	RS485B2, RS485 differential signal-	

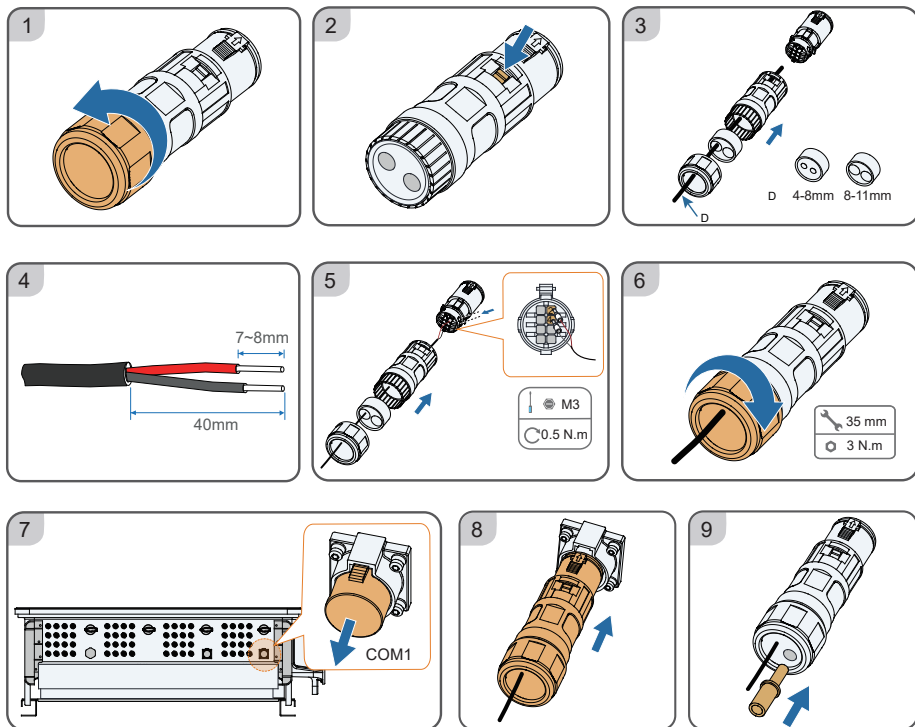


Power on

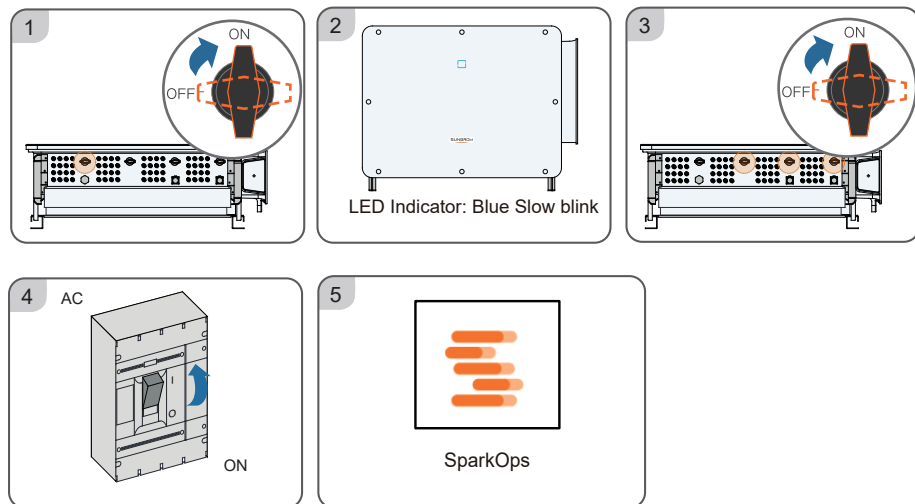

6

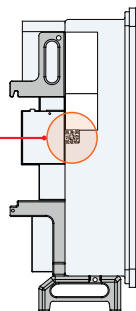
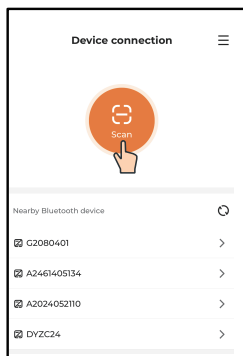


7

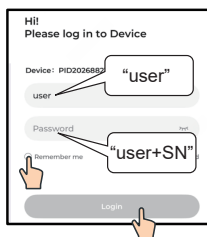

Scan the QR code to access the SparkOps App User Manual and complete software commissioning by referring to the Device Commissioning section.

LED指示灯

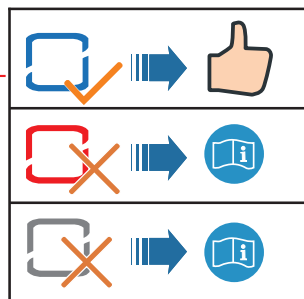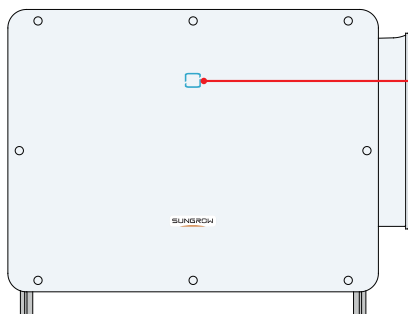



More information in the QR code or
at <http://support.sungrowpower.com/>