

Quick Installation Guide

1-Phase Hybrid Inverter MG5RL/ MG6RL



Scope of Delivery





Wall-mounting Bracket



Battery Connector





Expansion Plug Set (x 3)



M5×12 Screw Set (x 2)



M4×16 Screw Set(x 4)



Current Transformer(CT)



DO Plug-in Connector



Signal Plug-in Connector



Wire Ferrule (×9)




Wire Ferrule (DIN end) (×12)









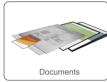





* The images shown here are for reference. The actual product and quantity are based on delivery.

Mounting Location




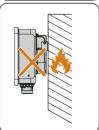

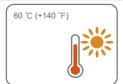







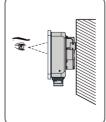






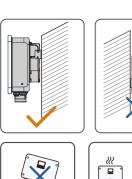

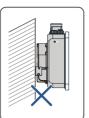

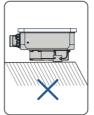















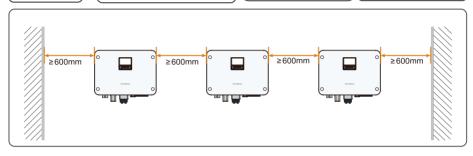

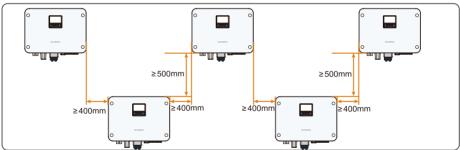

For more information about mounting location, please contact SUNGROW.

Installation Tools



Hydraulic Plier























Tube Terminal Crimping Tool














Mounting





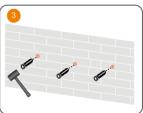


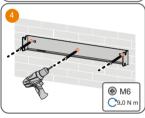


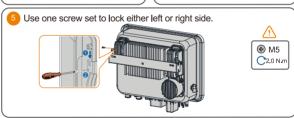


Terminal Description




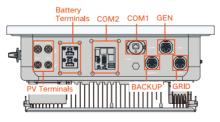


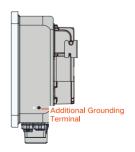


PE Connection

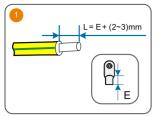

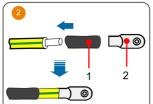

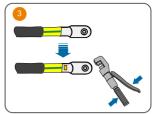



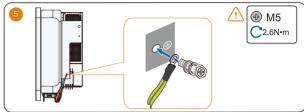


The cable specification must comply with local regulations (if available). Otherwise, keep it consistent with the PE wire in the AC cable.

The external protective grounding terminal must meet at least one of the following requirements.


- The cross-sectional area of the AC side grounding cable is not less than 10 mm² for copper wire or 16 mm² for aluminum wire. It is recommended that both the external protective grounding terminal and the AC side grounding terminal be reliably grounded.
- If the cross-sectional area of the AC side grounding cable is less than 10 mm² for copper wire or 16 mm² for aluminum wire, ensure that both the external protective grounding terminal and the AC side grounding terminal are reliably grounded.

The grounding connection can be made by other means if they are in accordance with the local standards and regulations, and Qcells shall not be held liable for the possible consequences.

AC Cable Connection

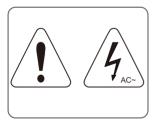



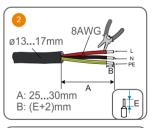















DC Cable Connection

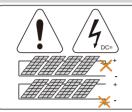

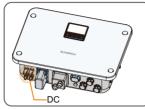

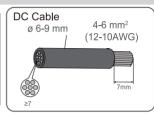


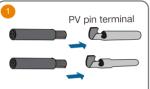










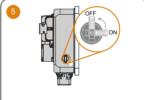


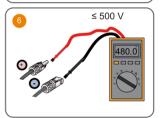

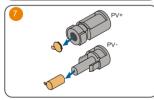


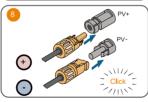


Backup Connection

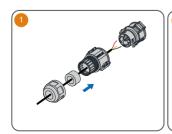



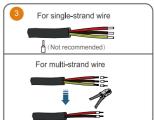

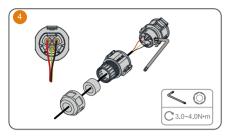












GEN Connection

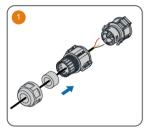


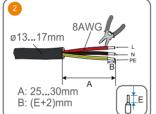

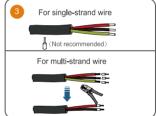

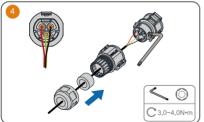


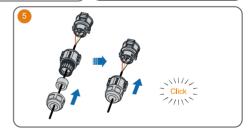


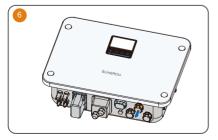






Battery Connection

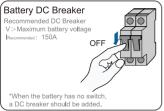

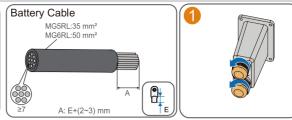


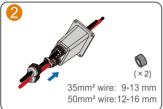

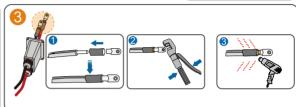


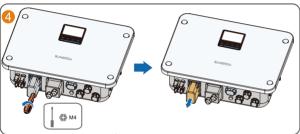



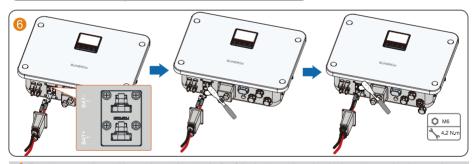

⚠ Do not reverse the positive and negative terminals of the battery, otherwise the inverter may be damaged.

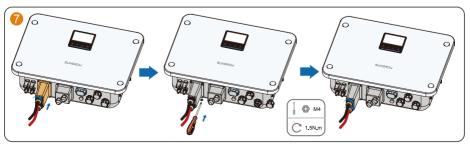


WiNet-S2 Connection

WLAN communication






· Ethernet Communication

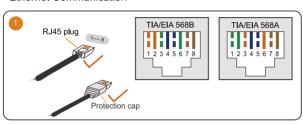



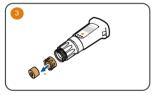












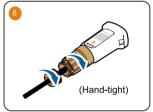

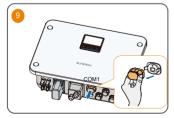




COM2 Terminal Communication Connection

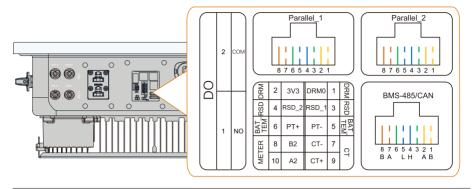



| Label | Description | |
|-------------------|---|--|
| DO(NO/1, COM/2) | For ground fault alarm, intelligent load control or genset control. | |
| Parallel_1 | For parallel RS485 communication (IN) | |
| Parallel_2 | For parallel RS485 communication (OUT) | |
| DRM(3V3, DRM0) | Reserved (Detail availability contact SUNGROW) | |
| RSD(RSD_1, RSD_2) | Reserved (Detail availability contact SUNGROW) | |
| BAT_TEM(PT-, PT+) | Reserved (Detail availability contact SUNGROW) | |
| METER(A2,B2) | For smart energy meter | |
| СТ | For grid CT signal sampling | |
| BMS-485/CAN | Only 4/H and 5/L are used for battery communication via CAN protocol, RS485 protocol is reserved. | |


CT Connection


* The length of CT cable is 5m.

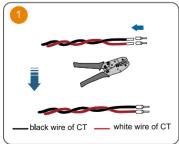


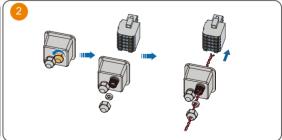

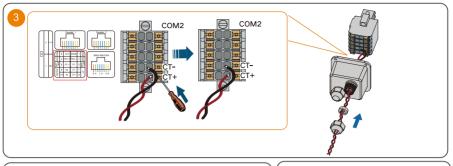


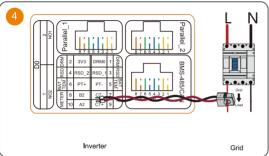


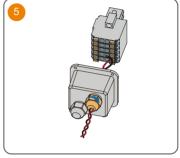

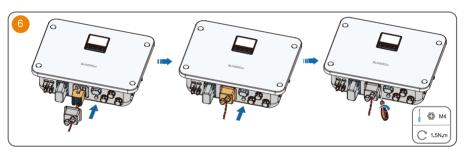


Smart Energy Meter Connection

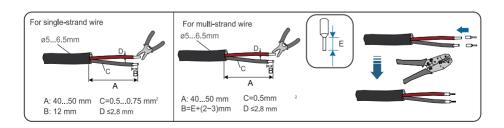

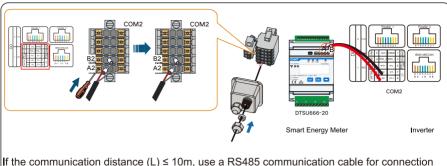


If the communication distance (L) ≤ 10m, use a RS485 communication cable for connection directly. If L > 10m, add an extra 120Ω resistor to improve the communication quality.

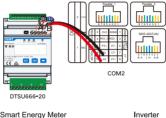


Smart Energy Meter

DO Connection (For GEN Communication)

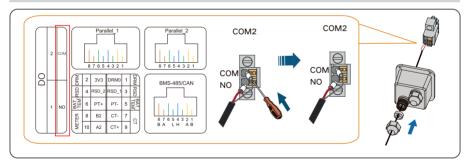



Battery Communication

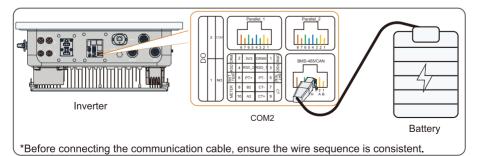

Power on



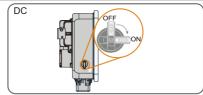

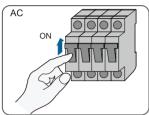

LED Indicator





• Wait 5 minutes after completing the previous step before proceeding to the next one.



| LED indicator | LED state | Definition | | |
|-----------------------|-----------|---|--|--|
| | ON | The inverter is running in the on/off-grid mode. | | |
| | Twinkling | The inverter is at standby or startup state (without on/off-grid operation). The inverter is recovering from a fault. | | |
| ON | | A system fault has occurred. | | |
| | OFF | Both the AC and DC sides are powered down. | | |
| Battery SOC Indicator | | | | |
| Battery SOC Indicator | | SOC | | |
| | | 0 <soc≤20%< td=""></soc≤20%<> | | |
| | | 20% <soc≤40%< td=""></soc≤40%<> | | |
| | | 40% <soc≤60%< td=""></soc≤60%<> | | |
| | | 60% <soc≤80%< td=""></soc≤80%<> | | |
| | | SOC>80% | | |

The dynamic flow direction of the LED light bar indicates the battery's charging/discharging status.

- SOC 0% → SOC 100%: Charging
- •SOC 0% ← SOC 100%: Discharging



- 1. Contents may be periodically updated or revised due to product development. The information in this guide is subject to change without notice. In no case shall this guide substitute for the user manual or related notes on the device
- 2. Make sure to read over, fully understand and strictly follow the detailed instructions of the user manual and other related regulations before installing the equipment. The user manual can be downloaded by visiting the website at http://support.sungrowpower.com/; or it can be obtained by scanning the QR code on the side of the equipment or the back cover of this guide.
- 3. All operations can be performed only by qualified personnel, that must be trained for installation and commissioning of electrical system, as well as dealing with hazards, have knowledge of the manual and of the local regulations and directives.
- 4. Before installation, check that the package contents are intact and complete compared to the packing list. Contact SUNGROW or the distributor in case of any damaged or missing components.
- 5. The cable used must be intact and well insulated. Operation personnel must wear proper personal protective equipment (PPE) all the time.
- 6. Any violation could result in personal death or injury or device damage, and will void the warranty.

Safety

The inverter has been designed and tested strictly according to international safety regulations. Read all safety instructions carefully prior to any work and observe them at all times when working on or with the inverter. Incorrect operation or work may cause:

- injury or death to the operator or a third party;
- damage to the inverter or other properties.

Please follow the safety instructions related to the PV strings and the utility grid.

♠ DANGER

Lethal voltage!

- PV strings will produce electrical power when exposed to sunlight and can cause a lethal voltage and an electric shock.
- Only qualified personnel can perform the wiring of the PV panels.

∧ NOTICE

Danger to life from electric shock due to lethal voltage!

- All electrical connections must be in accordance with local and national standards.
- Only with the permission of the local utility grid company, the inverter can be connected to the utility grid.

Inverter

The warning label on the inverter body are as follows.



Disconnect the inverter from all the external power sources before maintenance!



Do not touch live parts for 10 minutes after disconnection from the power sources.



Burn danger due to hot surface that may exceed 60 °C.



Danger to life due to high voltages!

Only qualified personnel can open and maintain the inverter.



Read the user manual before maintenance!



The inverter does not have a transformer.



TÜVRheinland mark of conformity.



TÜV mark of conformity.



CE mark of conformity. EU/EEA Importer.



Do not dispose of the inverter together with household waste.



RCM mark of conformity.



Additional grounding point.

Users may also attach other warning signs as per the requirements of the local standards or installation specifications.

↑ DANGER

Danger to life from electric shocks due to live voltage

- Do not open the enclosure at any time. Unauthorized opening will void warranty and warranty claims and in most cases terminate the operating license.
- When the enclosure lid is removed, live components can be touched which can result in death or serious injury due to electric shock.

Lethal danger from electric shock due to possibly damaged inverter

- Only operate the inverter when it is technically faultless and in a safe state.
- Operating a damaged inverter can lead to hazardous situations that can result in death or serious injuries due to electric shock.

Risk of inverter damage or personal injury

Do not pull out the PV connectors and AC connector when the inverter is running. Disconnect the AC circuit breaker, the circuit breaker of battery and set the DC load-break switch of the inverter to OFF.
 Wait 10 minutes for the internal capacitors to discharge. Verify that there is no voltage or current before pulling any connector.

⚠ WARNING

All the warning labels and nameplate on the inverter body:

- must be clearly visible.
- · must not be removed, covered or pasted.

↑ CAUTION

Risk of burns due to hot components!

 Do not touch any hot parts (such as the heat sink) during operation. Only the DC switch can safely be touched at any time.

∧ NOTICE

Only qualified personnel can perform the country setting. Unauthorized alteration may cause:

· A breach of the type-certificate marking.

Risk of inverter damage due to electrostatic discharge (ESD)!

By touching the electronic components, you may damage the inverter. For inverter handling, be sure to:

- avoid any unnecessary touching.
- · wear a grounding wristband before touching any connectors.

Battery

Batteries deliver electrical power, resulting in burns or a fire hazard when they are short circuited, or wrongly installed.

Lethal voltages are present in the battery terminals and cables in the inverter. Severe injuries or death may occur if the cables and terminals in the inverter are touched.

⚠ NOTICE

Improper settings or maintenance can permanently damage the battery. Incorrect inverter parameters will lead to the premature aging of battery.

EU Declaration of Conformity





within the scope of the EU directives

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

Low Voltage Directive 2014/35/EU (LVD)

Electromagnetic compatibility 2014/30/EU (EMC)

Restriction of the use of certain hazardous substances 2011/65/EU and 2015/863/EU (RoHS)

The manufacturer Sungrow Power Supply Co. Ltd, China hereby confirms that the product MG5RL, MG6RL complies with the essential requirements and other relevant provisions of Directive 2014/35/EU (LVD), 2014/30/EU (EMC),2011/65/EU and 2015/863/EU (RoHS).

The communication module that comes with the inverter and the technical parameters of wireless communication are listed in the table below. The model of the communication module actually delivered shall prevail. The EU Declaration of Conformity for the communication module can be found at support.sungrowpower.com.

WiNet-S/WiNet-S2:

| Radio technology | WLAN 802.11b/g/n20/n40 |
|----------------------------|--|
| Radio spectrum | 802.11b/g/n20 2412 MHz ~ 2472 MHz 802.11n40 2422 MHz ~ 2462 MHz |
| Maximum transmission power | ≤ 20 dBm |

Technical parameters listed above apply to EU countries only.

Manufacturer: Sungrow Power Supply Co., Ltd. No 1699. Xiyou Road, Hefei 230088.P.R.China

For EU only

EU/EEA Importer: Sungrow Deutschland GmbH Balanstraße 59, 81541 München, Germany

Security Declaration

For details on the product's network security vulnerability response process and vulnerability disclosure, please visit the following website: https://en.sungrowpower.com/security-vulnerability-management

For more information on network security, please refer to the user manual of the communication module or the Data Logger that comes with the product.





More information in the QR code or at http://support.sungrowpower.com/