

# User Manual

## High Voltage LFP Battery

SBH100/150/200/250/300/350/400



---

# All Rights Reserved

## All Rights Reserved

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

## Trademarks

**SUNGROW** and other SUNGROW trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

## Software Licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

# About This Manual

The manual mainly describes the product information, guidelines for installation, operation and maintenance. The manual cannot include complete information the system (i.e. the hybrid inverter), just the battery. The reader can get additional information about other devices at [www.sungrowpower.com](http://www.sungrowpower.com) or on the webpage of the respective component manufacturer.

## Validity

This manual is valid for the following battery models:

- SBH100
- SBH150
- SBH200
- SBH250
- SBH300
- SBH350
- SBH400



The SBH-V12 version is currently available only in Europe.

They will be referred to as "battery" hereinafter unless otherwise specified.

## Target Group

This manual is intended for battery owners who will have the ability to interact with the battery and qualified personnel who are responsible for the installation and commissioning of the battery. Qualified personnel should have the following skills:

- Training for installation and commissioning of electrical system, as well as dealing with hazards
- Knowledge of the manual and other related documents
- Knowledge of the local regulations and directives

## How to Use This Manual

Read the manual and other related documents before performing any work on the battery. Documents must be stored carefully and be available at all times.

Images in this manual are for reference only. The actual product received may differ.

Contents may be periodically updated or revised due to the product development. It is probably that there are changes of manual in the subsequent battery edition. The latest manual can be acquired via visiting the website at [support.sungrowpower.com](http://support.sungrowpower.com).

## Symbols

Important instructions contained in this manual should be followed during installation, operation and maintenance of the battery. They will be highlighted by the following symbols.

### **DANGER**

Indicates a hazard with a high level of risk that, if not avoided, will result in death or serious injury.

### **WARNING**

Indicates a hazard with a medium level of risk that, if not avoided, could result in death or serious injury.

### **CAUTION**

Indicates a hazard with a low level of risk that, if not avoided, could result in minor or moderate injury.

### **NOTICE**

Indicates a situation that, if not avoided, could result in equipment or property damage.



Indicates additional information, emphasized contents or tips that may be helpful, e.g. to help you solve problems or save time.

## Abbreviation

BMS: Battery Management System

CAN: Controller Area Network

LFP: Lithium iron phosphate

SOC: State of Charge

PACK: Battery module

# Contents

---

- All Rights Reserved..... I
- About This Manual..... II
- 1 Safety Instructions..... 1**
  - 1.1 Notices for Safe Use..... 2
  - 1.2 Battery Handling Information..... 3
  - 1.3 Emergency Situations..... 4
    - 1.3.1 Leaking Batteries..... 4
    - 1.3.2 Fire..... 4
    - 1.3.3 Wet Batteries..... 5
    - 1.3.4 Damaged Batteries..... 5
- 2 Product Description..... 7**
  - 2.1 Product Introduction..... 7
  - 2.2 Component Introduction..... 8
  - 2.3 Symbols on the Product..... 10
  - 2.4 LED Indicators..... 11
- 3 Unpacking and Storage..... 14**
  - 3.1 Unpacking and Inspection..... 14
  - 3.2 Scope of Delivery..... 15
  - 3.3 Storage..... 16
- 4 Mounting..... 19**
  - 4.1 Safety during Mounting..... 19
  - 4.2 Location Requirements..... 19
  - 4.3 Installation Tools..... 21
  - 4.4 Battery System Installation..... 23
- 5 Electrical Connection..... 29**
  - 5.1 Safety Instructions..... 29
  - 5.2 Terminal Description..... 29
  - 5.3 Electrical Connection Overview..... 30
  - 5.4 External Grounding Cable Connection and Disconnection..... 32
  - 5.5 DC Cable Connection..... 33
    - 5.5.1 Assemble DC Connectors..... 33
    - 5.5.2 DC Cable Connection and Disconnection..... 35
  - 5.6 Communication Cable Connection..... 39
    - 5.6.1 Assemble Communication Connectors and Termination Resistor..... 39

5.6.2 Communication Cable Connection and Disconnection.....	42
5.7 Top Cover Assembling.....	44
5.8 Battery Cascading.....	45
<b>6 Commissioning/Start-up.....</b>	<b>46</b>
6.1 Inspection before Commissioning.....	46
6.2 Commissioning Procedure.....	46
<b>7 Battery Decommissioning/Shutdown Procedure.....</b>	<b>48</b>
<b>8 Viewing Battery information.....</b>	<b>49</b>
<b>9 Battery Augmentation.....</b>	<b>54</b>
<b>10 Winter Battery Heating.....</b>	<b>58</b>
10.1 Automatic Heating.....	58
10.2 Scheduled Heating.....	59
<b>11 Troubleshooting and Maintenance.....</b>	<b>63</b>
11.1 Troubleshooting.....	63
11.2 Maintenance.....	68
<b>12 Appendix.....</b>	<b>71</b>
12.1 Technical Data.....	71
12.2 FAQs.....	75
12.2.1 Battery Not Charging.....	76
12.2.2 Battery Not Discharging.....	76
12.2.3 SOC Jump.....	77
12.2.4 Battery Upgrade.....	77
12.3 Quality Assurance.....	77
12.4 Contact Information.....	78

# 1 Safety Instructions

When installing, commissioning, operating, and maintaining the product, strictly observe the labels on the product and the safety requirements in the manual. Incorrect operation or work may cause:

- Injury or death to the operator or a third party.
- Damage to the product and other properties.

## WARNING

- **Do not perform any operation on the product (including but not limited to, handling, installing, powering on, or maintaining the product, performing electrical connection, and working at heights) in harsh weather conditions, such as thunder and lightning, rain, snow, and Level 6 or stronger winds. SUNGROW shall not be held liable for any damage to the device due to force majeure, such as earthquakes, floods, volcanic eruptions, mudslides, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weathers.**
- **In case of fire, evacuate from the building or product area and call the fire alarm. Re-entry into the burning area is strictly prohibited under any circumstances.**

## NOTICE

- **Tighten the screws with the specified torque using tools when fastening the product and terminals. Otherwise, the product may be damaged. And the damage caused is not covered by the warranty.**
- **Learn how to use tools correctly before using them to avoid hurting people or damaging the device.**
- **Maintain the device with sufficient knowledge of this manual and use proper tools.**



- The safety instructions in this manual are only supplements and cannot cover all the precautions that should be followed. Perform operations considering actual onsite conditions.
- SUNGROW shall not be held liable for any damage caused by violation of general safety operation requirements, general safety standards, or any safety instruction in this manual.
- When installing, operating, and maintaining the product, comply with local laws and regulations. The safety precautions in this manual are only supplements to local laws and regulations.
- During the product transport, installation, wiring, maintenance, etc., the materials and tools prepared by users must meet the requirements of applicable local laws and regulations, safety standards, and other specifications. SUNGROW shall not be held liable for any damage to the product caused by the adoption of materials and tools that fail to meet the above-mentioned requirements.
- Operations on the product, including but not limited to, handling, installing, wiring, powering on, maintenance, and use of the product, must not be performed by unqualified personnel. SUNGROW shall not be held liable for any damage to the product resulting from operations done by unqualified personnel.
- Where the transport of the product is arranged by users, SUNGROW shall not be held liable for any damage to the product that is caused by users themselves or the third-party transport service providers designated by the users.
- SUNGROW shall not be held liable for any damage to the product caused by the negligence, intent, fault, improper operation, and other behaviors of users or third-party organizations.
- SUNGROW shall not be held liable for any damage to the product arising from reasons unrelated to SUNGROW.

## 1.1 Notices for Safe Use

Read all safety instructions carefully prior to any work and observe them at all times when working on or with the battery. Failure to observe the precautions described in this section can cause serious injury to persons or damage to property.

**⚠ DANGER****Risk of explosion**

- Do not subject the battery to any strong force.
- Do not mechanically damage the battery (pierce, deform, strip down, etc.)
- Do not heat the battery or dispose of the battery in a fire.
- Do not install the battery in potentially explosive environments.
- Do not place the battery in water or other liquids.

**⚠ DANGER****Risk of fire**

- Do not place the battery near a heat source, such as direct sunlight, a fireplace, a thermally uninsulated wall exposed to sunlight, hot water, or a heater.
- Keep sources of ignition such as sparks, flames, and smoking materials away from the battery.

**⚠ DANGER****Risk of electric shock**

- Do not disassemble the battery.
- Do not handle a wet battery or use wet tools.
- Do not soak the battery in water or expose it to moisture or liquids.
- Keep the battery away from children and animals.
- Wear suitable clothing, guards and gloves to prevent you from direct contact with the DC voltage.
- Use insulated tools during working with battery.
- Set aside metal jewelry before working on the DC circuit.

## 1.2 Battery Handling Information

**NOTICE**

**Follow local standards to use the battery.**

Any man-made damage will void the limited warranty for the battery. Handle the battery with care to protect it from damage.

- Use the battery only as intended and designed.
- The battery must only be installed at a suitable location.
- Make sure the battery is well connected to ground before use.
- Do not use the battery if it is defective, appears cracked, broken or damaged, or fails to operate.
- Do not use the battery together with other types of batteries.

- Do not pull, drag or step on the battery.
- Do not leave any foreign objects inside the battery.
- Do not repair or modify the battery. It is not user serviceable.
- Do not pull out any cables when the battery is powered on.
- Do not damage the sheath of cables, wire harness and connectors.
- While the battery is charged, used and stored, keep it away from materials that are prone to electric discharge, including static discharge.
- Keep the battery away from babies and children to avoid any accidents.
- Cover terminals with insulating tape before proper disposal.
- Avoid direct contact with rain, snow, and water, and prevent the battery from falling and mechanical impact during battery transportation.

## 1.3 Emergency Situations

### 1.3.1 Leaking Batteries

Abuse/misuse/damage of the battery may cause increasing of internal pressure in the battery cells. It may result in the electrolyte venting. In the event that battery electrolyte is released:

- Do not enter the room under any circumstance.
- Avoid contact with the leaking liquid or gas.
- Call the Local Emergency number or Fire Brigade if necessary.

If one is exposed to the leaking substance, follow the suggestions below to minimize the chance of injury:

- Inhalation: Evacuate the contaminated area, and seek medical aid.
- Eye contact: Rinse eyes with copious amounts of water for at least 15 minutes, and seek medical aid immediately.
- Skin contact: Wash the affected area thoroughly with plenty of water for at least 15 minutes. If possible, remove or saturate contaminated clothing with water. Seek medical aid if the patient is distressed.
- Ingestion: Induce vomiting, and seek medical aid immediately.

Wipe out the contacted area with a sponge or cloth that is soaked in water until you obtain medical aid. These materials can damage skin and eyes, causing blindness.

### 1.3.2 Fire

Fire may occur with the battery despite its careful design. Likewise, a fire or unusually high temperatures near the battery can cause it to catch fire.

#### **Protective equipment**

A respirator is not required during normal operations.

In the event of a fire, hazardous fumes including carbon monoxide, carbon dioxide, and/or various hydrocarbons may be emitted. To comply with the Personal Protective Equipment Directive (89/686/EEC), use a full-face self-contained breathing apparatus (SCBA) with full protective gear during fire fighting.

### Fire fighting

#### NOTICE

**In the event of a fire, only qualified firefighters with appropriate protective equipment are permitted to enter the room where the battery is located. It may take a long time to completely extinguish the fire. Consider allowing the system to burn. Smoke indicates that the battery is still burning. Always note that there is a risk of the battery re-igniting.**

Proceed as follows for fire-fighting.

1. Shut off any connected power system or electronics such as the battery, battery isolator, PV DC isolator(s), AC isolator, solar supply main switch and normal supply main switch.
2. Perform an adequate knock down on the fire before entering the incident's hot zone.
3. If the battery catches on fire, use fire-fighting sand, CO<sub>2</sub> extinguisher, or other emergency fire extinguishing equipment approved by fire fighters to extinguish the fire.
4. If the fire is not from the battery and has not spread to it yet, use an ABC fire extinguisher to extinguish the fire. Remove batteries and other ignition sources from the scene of a fire.

### 1.3.3 Wet Batteries

If the battery is submerged in water, do not let people access it, and then contact Sungrow or an authorized service partner for technical support.

If a battery is submerged in water or flooded, first, switch off all circuit breakers in the system to cut off the power supply to the battery. Wait until floodwaters subside and do not approach near battery. If someone needs to go into the flooded water, wear insulated full length rubber boots and gloves.

Do not use a flooded battery again.

### 1.3.4 Damaged Batteries

The battery consists of lithium-ion cells. These are considered dry cell batteries. If the battery is damaged, only a small amount of battery fluid can leak.

A damaged battery can cause rapid heating of the battery cells. If you notice smoke coming from the battery area, assume that the battery is burning and take appropriate action as described in [1.3.2 Fire](#).

Damaged batteries are dangerous and must be handled with extreme caution. They are not fit for use and may pose a danger to people or property. If a battery seems to be damaged:

1. Pack it in its original container.
2. Store it in a separated room like the installation place.
3. Contact SUNGROW.

**⚠ DANGER**

**A damaged battery may release dangerous material and a flammable gas mixture.  
Never try to repair the battery even if you are a qualified electrician.**

## 2 Product Description

### 2.1 Product Introduction

#### Overview

As an important part of the PV power generation system, SBH100-400 high-voltage battery system works in conjunction with the hybrid inverter to store energy and supply it later for household use.



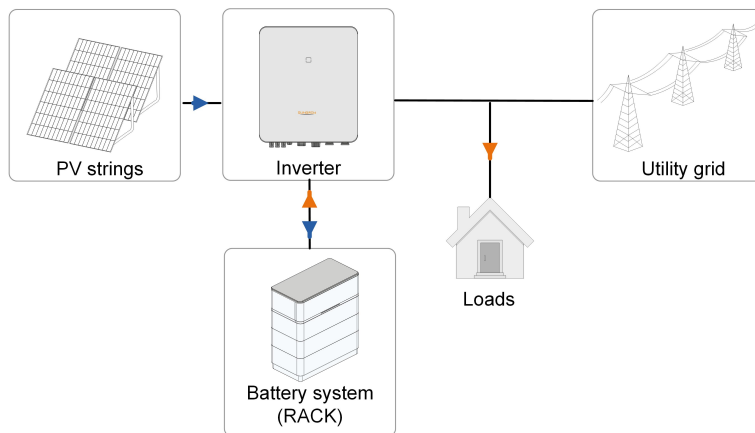


Figure 2-1 System Diagram

#### Product Introduction

The battery system (RACK) is composed of a top cover, a switch gear, PACKs (battery modules), and a base. The system operates at voltages ranging from 118.8V to 642.4V, allowing 2-8 PACKs to be stacked and connected in series ( $n$ =number of PACKs in the figures below).

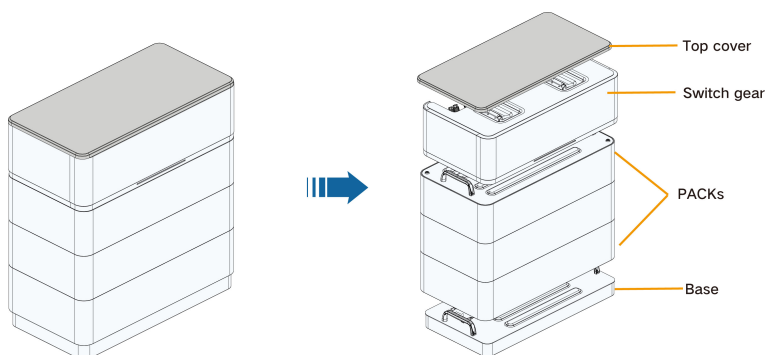

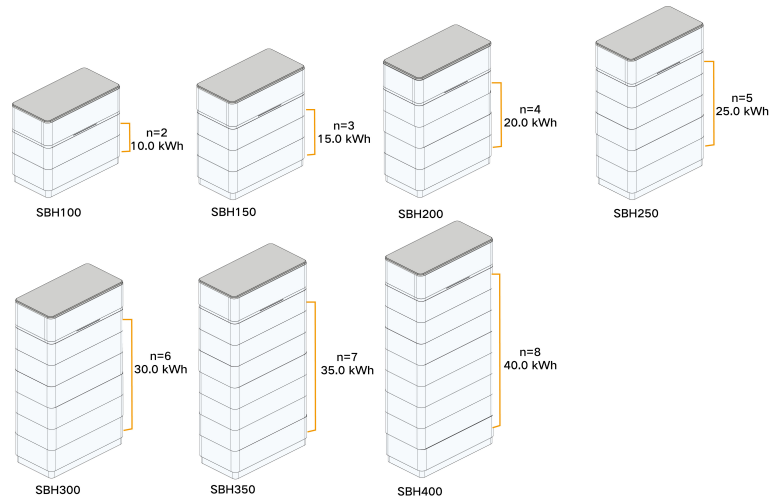

The images shown are for illustration purposes only. The actual product may vary.

**Table 2-1** System Composition


No .	Battery system	Base	PACK	Switch gear	Top cover
1	SBH100*	1	2	1	1
2	SBH150*	1	3	1	1
3	SBH200	1	4	1	1
4	SBH250	1	5	1	1
5	SBH300	1	6	1	1
6	SBH350	1	7	1	1
7	SBH400	1	8	1	1

\* These battery systems are not available for sale in Australia. For further information, please contact SUNGROW.

## 2.2 Component Introduction

### Switch Gear

The switch gear is equipped with a DC circuit breaker and a BMU, etc., and is used for battery monitoring, energy transmission, and signal interaction.

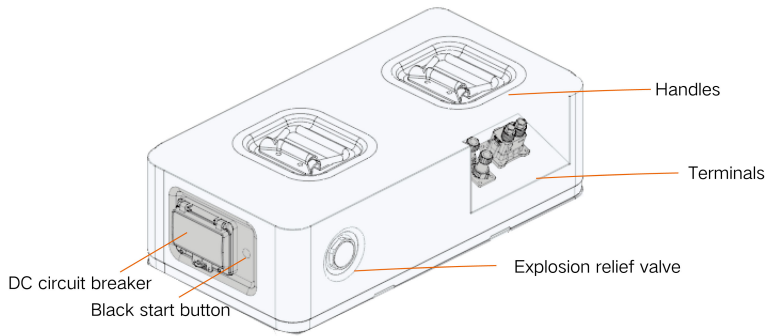


**Table 2-2** Parameters of the Switch Gear

Parameter	Value
Dimensions (W*H*D)	675 ± 5 mm * 194 ± 5 mm * 350 ± 5 mm (handles and terminals not counted)
Weight	11±1kg
Current range	-65 to 65A
Voltage range	0 to 650V

**i** Do not rotate the explosion relief valve.

**PACK**

The PACK is used for energy storage and supply. A single PACK is composed of cells connected in series. Data such as cell temperature and voltage are collected and then transmitted to the BMU inside the switch gear for processing.

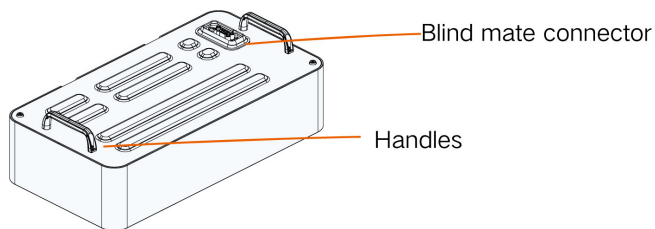


**Table 2-3** PACK Parameters

Parameter	Value
Dimensions (W*H*D)	675 ± 5 mm * 160 ± 5 mm * 350 ± 5 mm (handles and the connector not counted)
Weight	<ul style="list-style-type: none"> <li>SMR 050-V11: 45±2kg (Standard version)</li> <li>SMR 050-V12: 46±2kg (Heating version)</li> </ul>
Rated capacity	72Ah

Parameter	Value
Rated energy	5.0kWh
Voltage range	55 to 80.3V

### Base



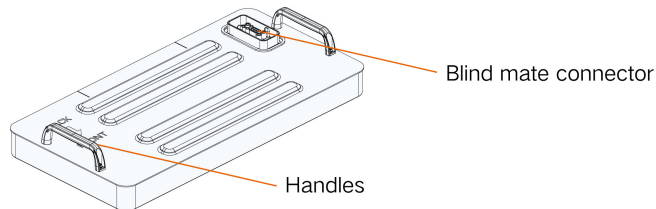



The base is used for holding the switch gear and the PACKs.










**Table 2-4** Base Parameters

Parameter	Value
Dimensions (W*H*D)	650 ± 5 mm * 55 ± 5 mm * 325 ± 5 mm (handles, footpads, and the connector not counted)
Weight	2.5kg±1kg

## 2.3 Symbols on the Product

Symbol	Explanation
	Pay attention to the danger. Do not operate this product in the live status!
	No open flames Do not expose to flame, incinerate, puncture, or impact.
	Electric shock hazard Serviced by qualified personnel only. Out of reach from children.
	TÜV mark of conformity
	TÜV mark of conformity
	CE mark of conformity EU/EEA Importer


Symbol	Explanation
	UKCA mark of conformity
	Do not dispose in trash. Compacting a lithium ion battery is dangerous as it can explode.
	Please recycle this lithium ion battery. Do not discard.
	Read the user manual before maintenance!
	Heating supported.*
	Read the user manual before maintenance!
	This is a protective grounding terminal, which should be grounded securely to protect the safety of operators.

\*The base, switch gear, and packs bearing this label support heating. The heating function is only supported when every component in the battery system is labeled as "Heating supported" (taking SBH150-V12 as an example).



## 2.4 LED Indicators



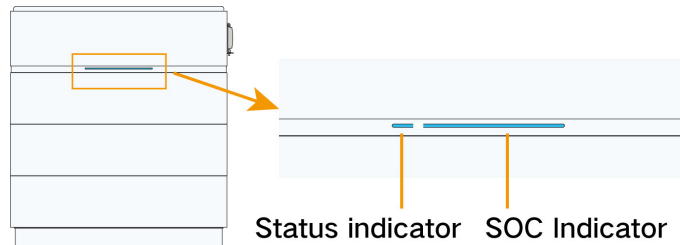



The battery system is equipped with two LED indicators, SOC indicator and status indicator.




**Figure 2-2** LED Indicators

### SOC Indicator


The SOC indicator indicates the current SOC of the battery. The indicator is designed with 5 bars in total, each for 20% SOC.




SOC Indicator	SOC
	0
	$0 < \text{SOC} \leq 20\%$
	$20\% < \text{SOC} \leq 40\%$
	$40\% < \text{SOC} \leq 60\%$
	$60\% < \text{SOC} \leq 80\%$
	$\text{SOC} > 80\%$

SOC indicator	Status	Description
	Steady on	The battery system works normally
	Blinking	The battery system is being charged/discharged

### Status indicator

The status indicator indicates the current status of the battery system, as shown in the table below.

Status indicator	Color	Status	Description
	Blue	Steady on	The battery system works normally
		Blink slow (at an interval of 1s)	The battery system is booting or in standby mode
		Blink fast (at an interval of 0.5s)	The battery system is being upgraded, tested, or calibrated

Status indicator	Color	Status	Description
	Red	Steady on	Battery system fault
	Red	Blink slow (at an interval of 1s)	Battery system alarm
	Grey	Off	No fault has occurred to the battery system




\*The images shown are for illustration purposes only. The actual product may vary.

## 3 Unpacking and Storage

### 3.1 Unpacking and Inspection

The product has undergone strict tests and inspections before delivery. However, as it may still get damaged during transportation, please carry out a thorough inspection before signing the delivery receipt.

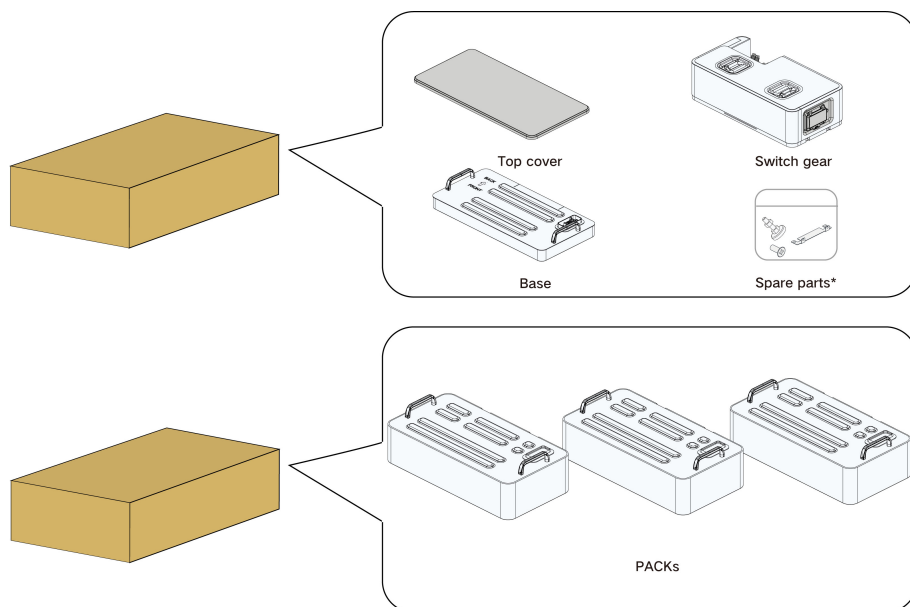

\*Please refer to [3.2 Scope of Delivery](#) for the list of parts and components.

- Inspect the packaging box for any damages.
- Check the delivered items for quantity and see if the delivery matches the order placed according to the packing list.
- Unpack and inspect the items inside for any damages.

Contact the transport company or SUNGROW in case of any damages or missing items, and provide relevant photos or the name/quantity of the missing items for better services.

Do not throw away the original packaging box. It is recommended to store the device in its original packaging after it is decommissioned.


**NOTICE**

Inspect the product for any external damages or damages to the structural parts, and check if the packing list matches the order placed. In case of any problem with the above-mentioned inspection items, do not install the device and contact SUNGROW in time.

If any tool is used for unpacking, be careful not to damage the product.

**3.2 Scope of Delivery**

**Main Components**

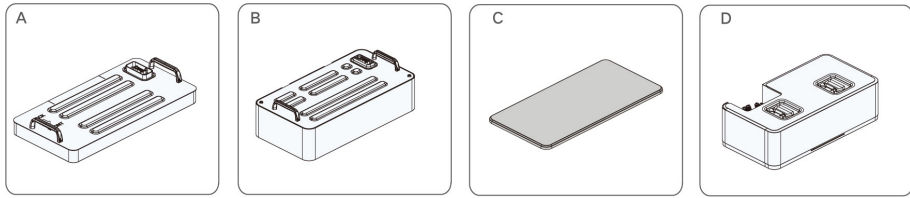


Item	Name	Quantity
A	Base	1
B	PACK	2 - 8
C	Top cover	1
D	Switch gear	1



The images shown here are for illustration purposes only. The actual product may vary.

**Parts**

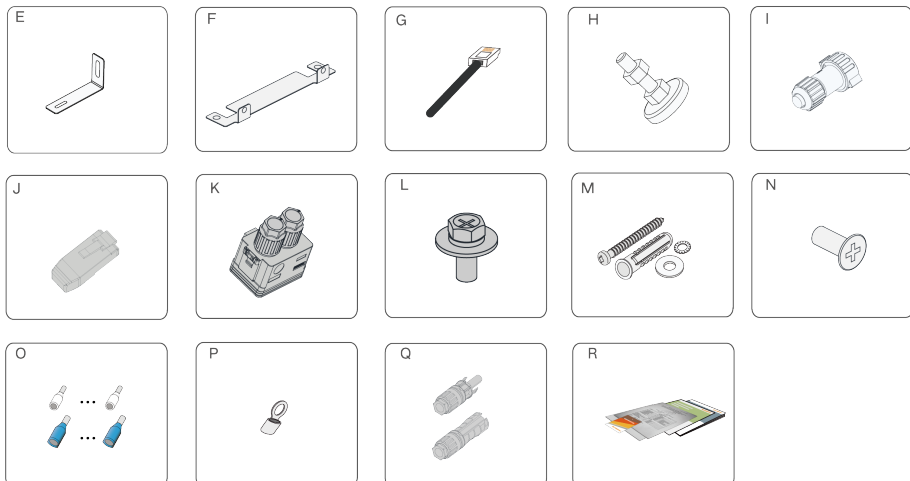

Item	Name	Quantity
E	Battery fixing bracket	2
F	Switch gear fixing bracket	2
G	Communication cable	1
H	Footpads	4
I	Communication connector	2
J	Termination resistor	1
K	Power connector	1
L	M5 screw assembly	6
M	Expansion bolt	3
N	M4 countersunk screw	5
O	Cold-pressed terminal	2
P	OT terminal	1
Q	Battery connector	1 set
R	Quick installation guide	1

### 3.3 Storage

Proper storage is required if the battery is not installed immediately.

- Store the battery in the original packing case with the desiccant inside.
- Store the battery in a clean and dry place, without exposure to sunlight and rain.
- The storage location must be free of harmful gases, flammable/explosive products and corrosive chemicals. The battery should be prevented from mechanical impact, high pressure, high-intensity magnetic field and direct exposure to sunlight.
- Preferably, keep the temperature in the range of 15°C - 25°C and install the battery as soon as possible. Store the battery within the temperature range of -10°C to 35°C. The storage time has to be ≤6 months, and the storage should not exceed 12 months. (The start of the storage time is the production time of the battery module. The production time can be checked by Sungrow sales network such as local distributors via the Serial Numbers of the battery modules.) The procedure is the following: Each battery module comes with a serial number label. This label is typically found on the side or top of the battery module or on the packaging of the battery module. The production date is encoded within the serial number and can be determined as follows:

EM	134	D	2	21	8	20	0289	D	A
				Year	Month	Day			


- In ideal conditions the maximum storage time for the battery is 12 months. However due to uncertainties regarding the warehouse conditions for example temperature fluctuations outside the normal storage range, it is required to recharge the battery to 40% SOC every 6 months of storage.
- Handle the batteries with care.
- The storage relative humidity must be always between 0 and 95%, non-condensing.
- The number of stacking layers of battery modules with package must not exceed 6. It is strictly forbidden to directly stack batteries without package.
- The packing and batteries should be upright.
- Regularly inspect the package for damage and insect bites. If any damage is found, the product should be replaced immediately.
- Always use the oldest stored batteries first to ensure none are stored beyond their recommended period.
- Lithium batteries are recommended to be recharged within 12 months of storage at recommended temperature or transportation.




If the battery is stored over one year, 5% - 8% of the capacity may lose irreversibly.

In case a battery needs to be charged, because it has been stored for more than 12 months, please gather necessary equipment such as a hybrid inverter, connecting cables and safety gear and follow chapters 4 to 5 of this user manual for a proper installation.


1. In the Energy Management Parameters, continue to set the compulsory charging mode in our iSolarCloud (Web-based version or App) of the hybrid inverter.

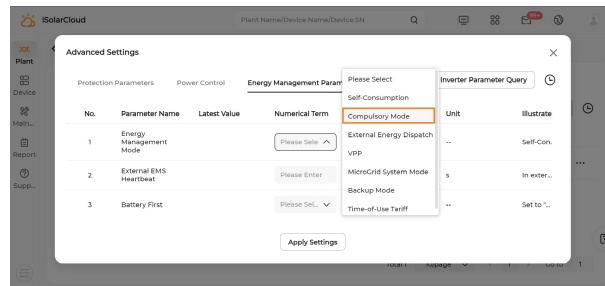

2. Set the lower SOC limit to 40%.

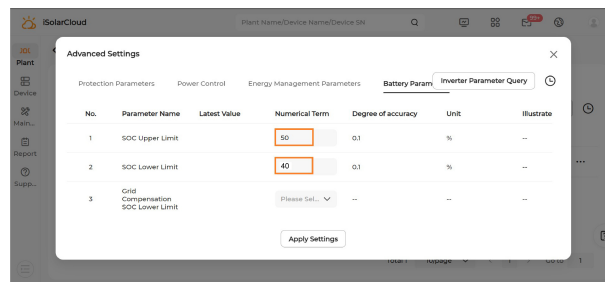

3. Select Charge as the charging command and an appropriate charging power. Monitor the charging process to ensure the SOC reaches 40%. Once charging is complete, disconnect the battery from the hybrid inverter safely.

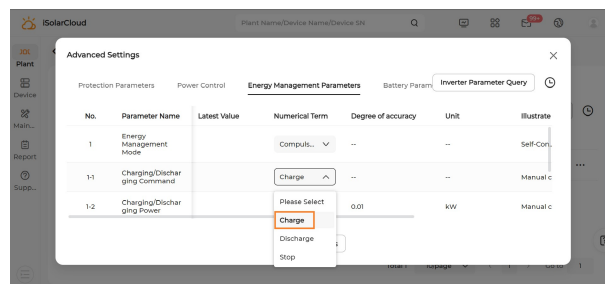

# 4 Mounting

## 4.1 Safety during Mounting

### WARNING

**This product or system must be operated by professionals!**  
Failure to follow the safety instructions in this manual or operation of this product or system by non-professionals may cause severe personal injury or major property damage.

### WARNING

**Strictly follow local relevant standards and requirements in the whole process of installation.**

## 4.2 Location Requirements

Select an optimal mounting location for safe operation, long service life and expected performance.


The battery with IP55 can be installed both indoors and outdoors.

Install the battery in a place convenient for electrical connection, operation, and maintenance.


- The battery with IP55 can be installed both indoors and outdoors.
- Install the battery in a place convenient for electrical connection, operation, and maintenance.
- Do not install the device in areas within 500 meters of the coastline or prone to sea winds. Otherwise, the battery may get corroded, thus resulting in fire.
- The installation environment must be free of inflammable or explosive materials.
- Keep the device out of the reach of children.

### **Installation Environment Requirements**


- The battery should be well ventilated. Ensure air circulation.
- The temperature and humidity should meet the following requirements:
  - SBH100-400-V11 (Standard version)

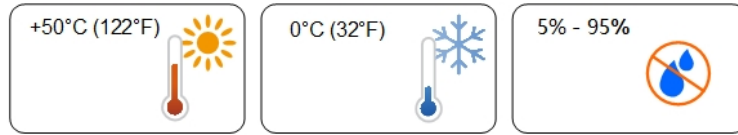

- SBH100-400-V12 (Heating version)

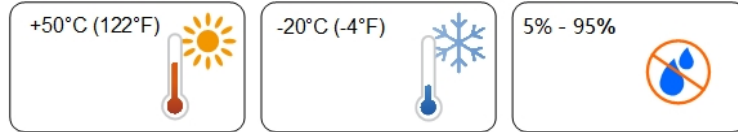

- Avoid direct exposure to sun, rain and snow.
- The installation environment requirements for SBH-V12 are as follows:
  - If installed for a long time at temperatures below 0°C, the system will enter low-power mode and trigger battery state-of-charge (SOC) protection.
  - If installed for a long time in an environment below 0°C and unable to be charged for an extended period, battery life and performance will degrade.
 If the battery trips due to the above conditions, wait until the ambient temperature rises above 0°C, then reclose the MCB to charge the battery.

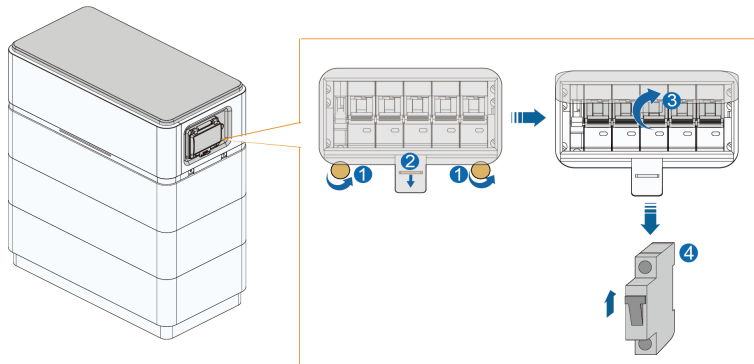

- For scenarios where the ambient temperature remains below 0°C for a long period, the battery must be installed in a location with temperatures  $\geq 0^\circ\text{C}$ .



The battery system may derate if the ambient temperature goes higher than 40°C.

### Installation Angle Requirements

It is recommended to adopt the wall-mounting installation for the battery system. Do not install it askew.

### Installation Carrier Requirements


The battery system should be positioned close to the wall and fitted using the battery fixing bracket, so as to prevent it from tipping over.

The support structure, to which the battery system is fitted, should be fireproof and not made of flammable materials.

Please make sure the support structure is solid enough to hold the device.


### Installation Clearance Requirements

Reserve enough clearance around the battery to ensure sufficient space for heat dissipation.

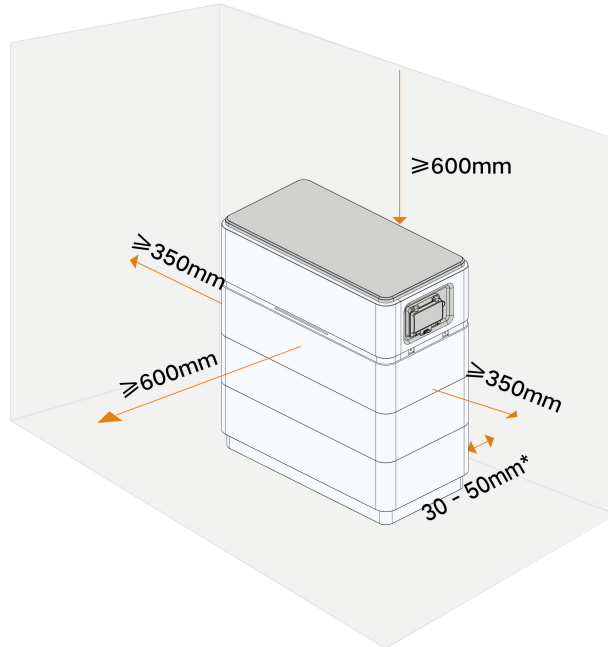

\* This distance is the distance between the RACK and the wall.

In case of multiple batteries, reserve specific clearance between the batteries.

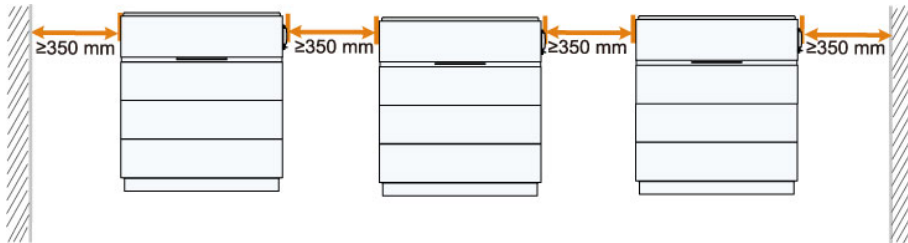


### 4.3 Installation Tools

Installation tools include, but are not limited to, the following recommended ones. If necessary, use other auxiliary tools on site.

**Table 4-1** Tool specification



Goggles

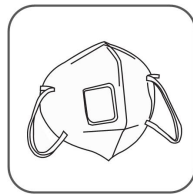

Dust mask




Safety gloves




Safety shoes




Utility knife

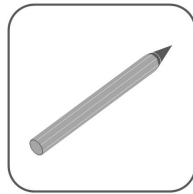


Marker

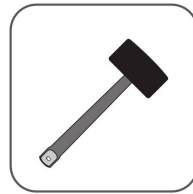


Rubber mallet

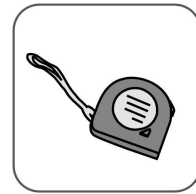


Measuring tape

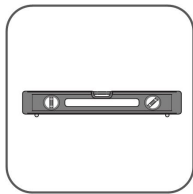

Level

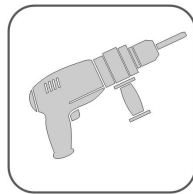


Hammer drill  
( $\phi 10$ )

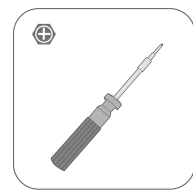


Torque  
screwdriver  
(ST6.3, M4, M5,  
M6)




Torque wrench  
(16mm, 17mm,  
35mm)

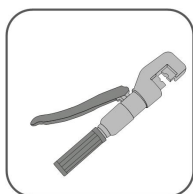


Hydraulic pliers

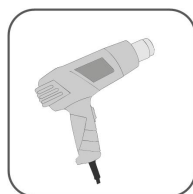

Heat gun

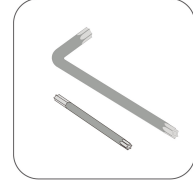


M4 Allen wrench

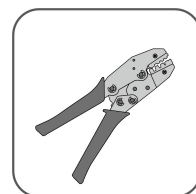

Terminal crimping  
tool (10mm<sup>2</sup>, cold-  
pressed terminal)



Wire stripper

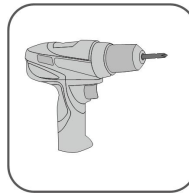Crimping tool  
(4-6mm<sup>2</sup>)Electric drill  
(ST6.3, M4, M5,  
M6)

## 4.4 Battery System Installation

### Prerequisite



Installation should be conducted on a flat surface in an open space.  
The installation process is illustrated with SBH150 as an example.

Mixing components from the Version with Heating Function (V12) and the Standard Version (V11) is not allowed. Before installation, ensure that all components used



are either equipped with a heating label or without one. In other words, the battery system can operate properly only under the following conditions.


- All components bear a heating label:




- None of components bear a heating label:



**Step 1** Fit the footpads onto the battery base to make it level.

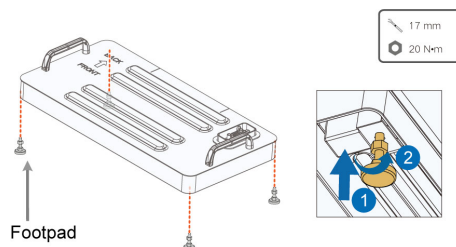


**Step 2** Mark the locations of holes for installing the battery fixing bracket. Position the base with its back against the wall, mark the installation position of the battery fixing bracket, and then move the base away.

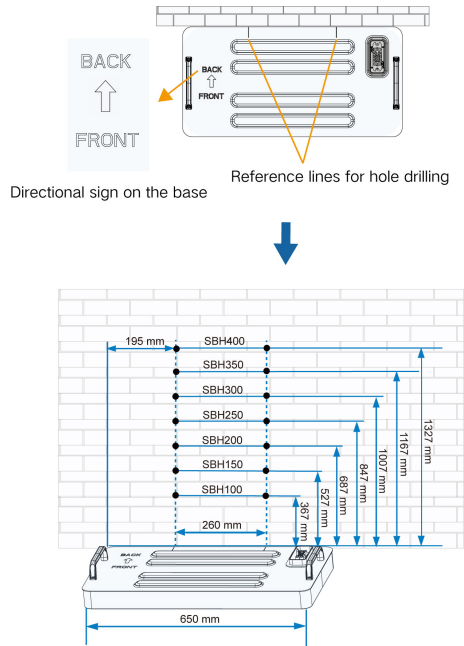

Reference lines for hole drilling: Used for determining the spacing between the two holes at the ends of the battery fixing bracket.

Directional sign on the base: Used for identifying the front and the back of the base. The arrow points from FRONT to BACK.


**Step 3** Drill holes according to the markings, and fit the expansion bolts.

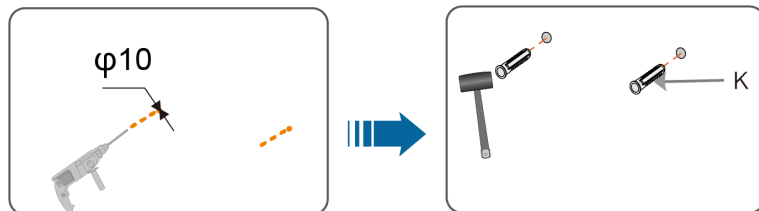


**NOTICE**

Please wear goggles and masks while drilling holes, so as to protect your eyes and respiratory system from dust and dirt. Clean the dust around in time after finishing drilling.


**Step 4** Position the base 42-62mm away from the wall, so that the battery fixing bracket can be installed.

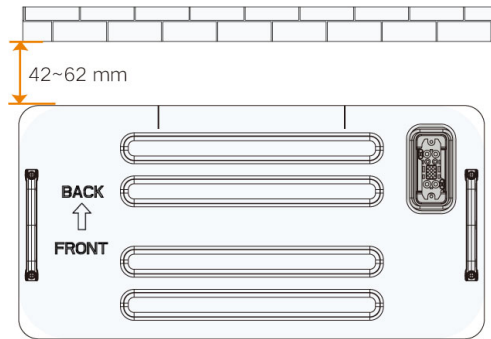


**Step 5** Place the PACKs on the base one by one from bottom to top.

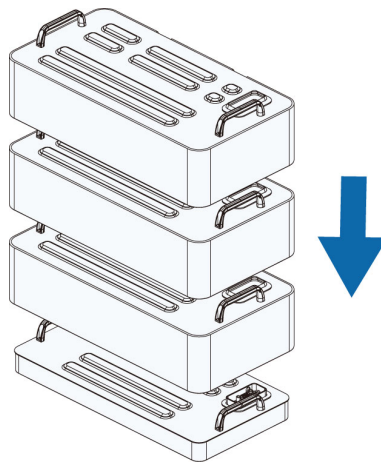

Do not tip the PACK on one side during installation.

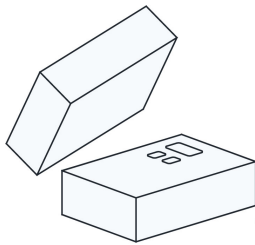


(Prohibited)

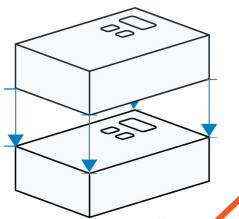


(Recommended)

**Step 6** Install the battery fixing bracket, to make sure the battery system will not tip over.

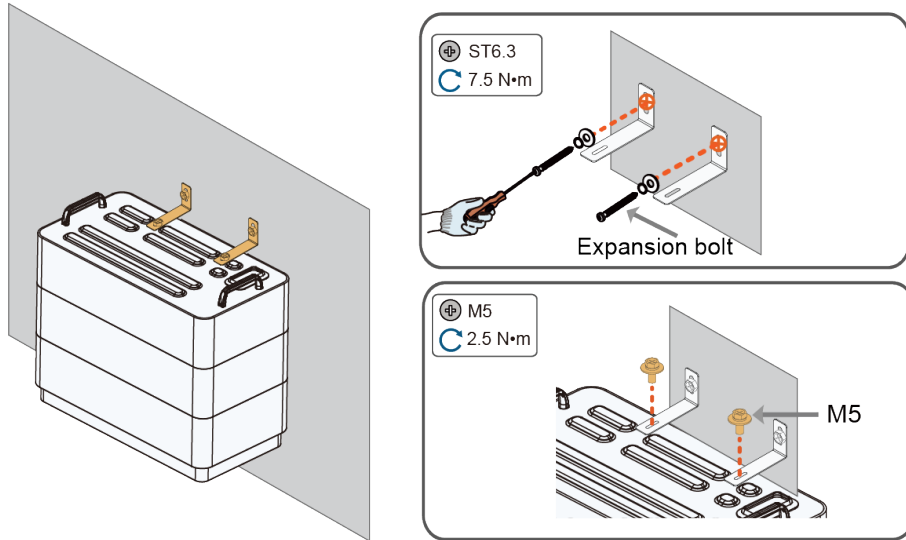


The battery fixing bracket should be installed on the top PACK.  
The installation position can be adjusted slightly through the slotted holes on the back.

**Step 7** Assemble the switch gear.

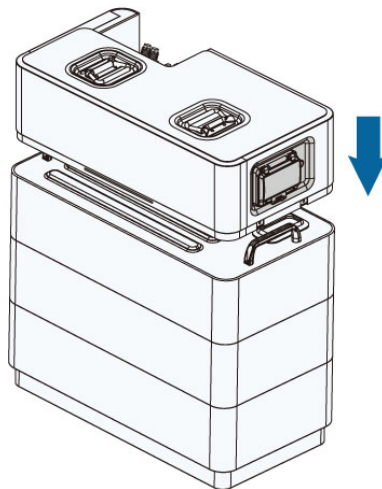

**Step 8** It is needed to install the switch gear fixing bracket, so as to prevent arc faults caused by moving the switch gear by mistake. Insert the bracket into the gap between the switch gear and the PACK, and fix it using screws.

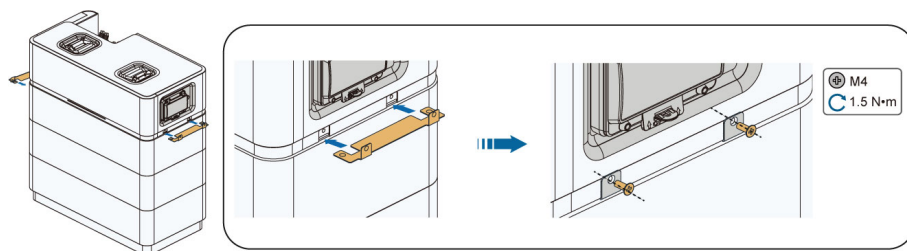

--End



The fire suppression kit is integrated into the module and is triggered in case of emergency.

# 5 Electrical Connection

## 5.1 Safety Instructions

### **⚠ DANGER**

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Ensure that the battery system is undamaged and all cables are voltage free before performing electrical work.
- Batteries deliver electric power, resulting in burns or a fire hazard when they are short circuited, or wrongly installed.

### **⚠ WARNING**


- Damage to the product caused by incorrect wiring is not covered by the warranty.
- Electrical connection must be performed by professionals.
  - All cables used in the system must be firmly attached, properly insulated, and adequately dimensioned.

### **NOTICE**


- All electrical connections must comply with local and national / regional electrical standards.
- All vacant terminals must be covered with waterproof covers to prevent affecting the protection rating.
  - When laying out communication cables, separate them from power cables and keep them away from strong interference sources to prevent communication interruption.
  - Cables used by the user shall comply with the requirements of local laws and regulations.
  - The cable colors in figures in this manual are for reference only. Please select cables according to local cable standards.

## 5.2 Terminal Description

Electrical terminals are set on the switch gear, as shown below.

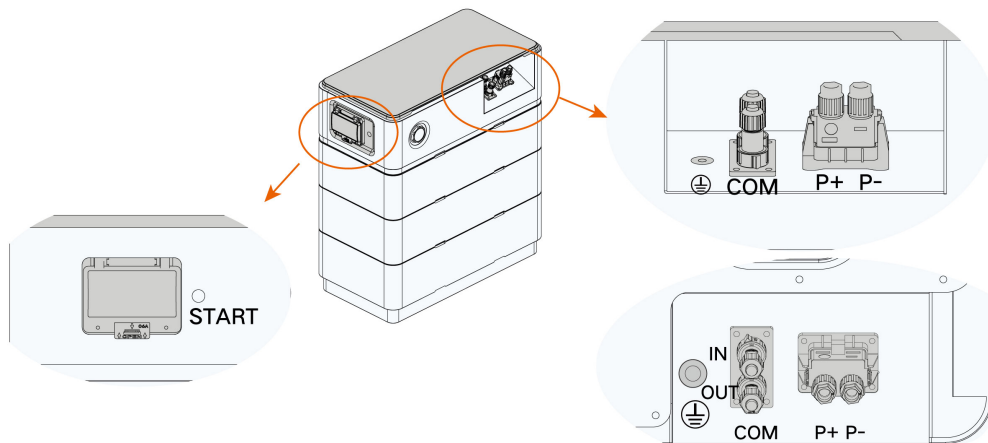


\*The images shown are for illustration purposes only and may not be an exact representation of the actual product.

Name	Mark	Note
Battery DC input terminal	P+ P-	P+: Connected to the positive terminal of the hybrid inverter P-: Connected to the negative terminal of the hybrid inverter
Communications terminal	COM	Two communication ports are available. IN is used for connecting the termination resistor, while OUT for the hybrid inverter.
PE terminal		Used for reliable protective grounding of the battery system.
DC circuit breaker	/	Used to turn on/off the battery system, as well as enable short-circuit protection, by breaking or closing the DC circuit.
Black start button	START	To enable black start of the battery system.

### 5.3 Electrical Connection Overview

The electrical connection between the battery system and the inverter is illustrated in the figure below.

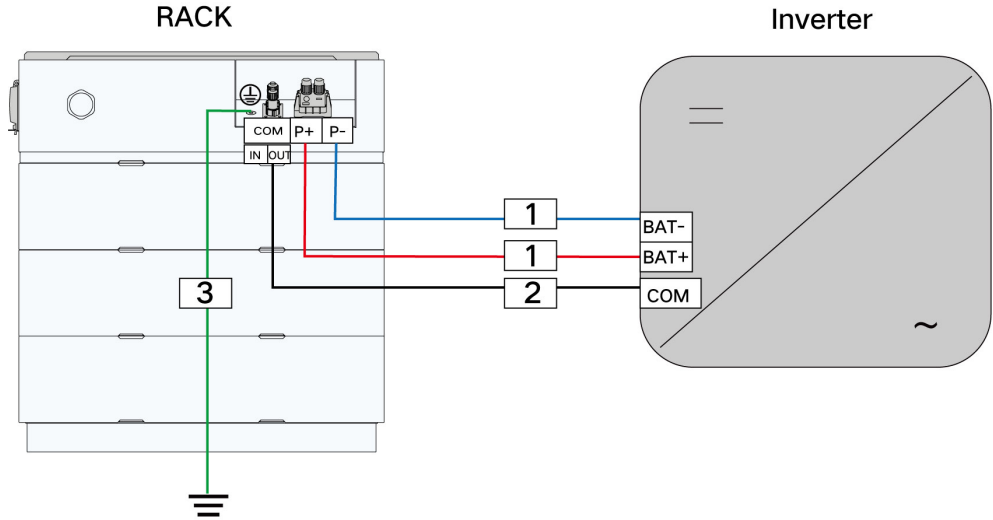


**Figure 5-1** Diagram of Electrical Connection Between the Battery System and the Inverter

**Table 5-1** Cable Requirements

No.	Name	Type	Specification	
			Outer diameter (mm)	Cross-sectional area of conductor (mm <sup>2</sup> )
1	DC cable	Multi-core PV cable, able to withstand voltages of >1100V	6 - 9	10 (7AWG)
2	Communication cable	Cat5e shielded network cable (provided as one of the accessories)	/	/
3	Protective grounding cable	Outdoor multi-core copper-conductor cable, able to withstand a voltage of 1000V and work at the temperature of 105°C	6 - 9	10 - 16 (7 - 5AWG)



Secure the power cables and the communication cable near the battery respectively using cable ties (do not bind the power cable and communication cable together) and ensure a U-curve in the cables, as shown in the figure below. This restricts the cable movement and reduces the risk of water flowing into the battery along the cables.

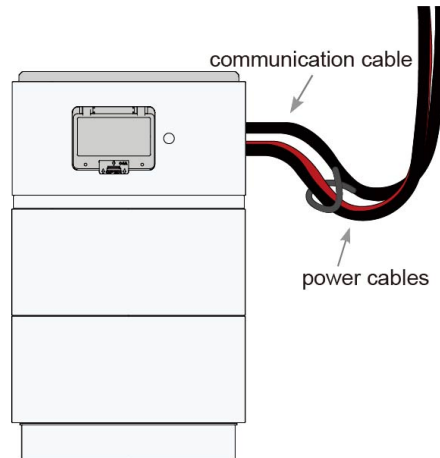


## 5.4 External Grounding Cable Connection and Disconnection


### Connect the grounding cable

The grounding cable should be prepared by the customer separately.

1. Crimp the OT/DT terminal onto the cable.

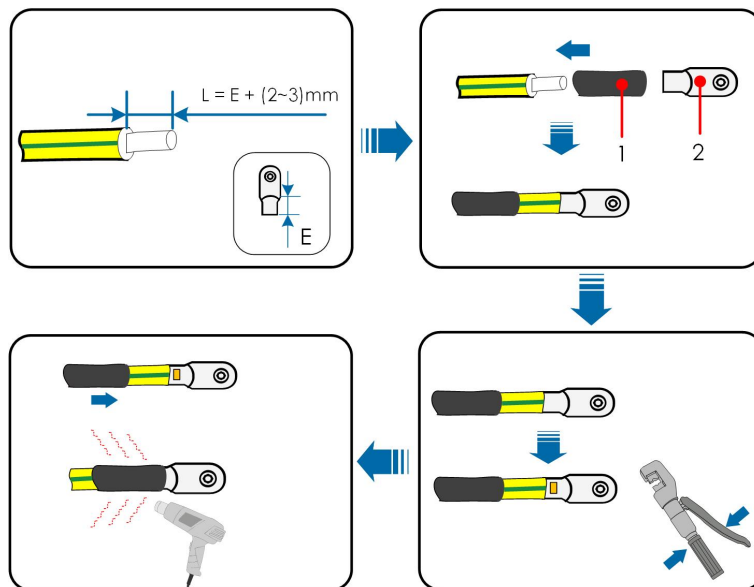


2. Remove the screw from the PE terminal. Position the cable, fit the screw back, and fasten the cable using a screwdriver.

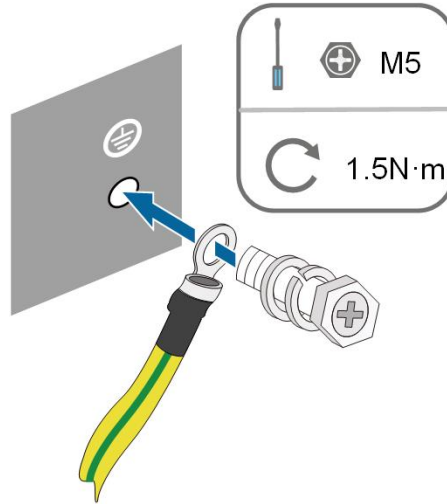

3. Apply silicone or painting to the PE terminal for corrosion protection.

#### **Disconnect the grounding cable**

Remove the screw from the PE terminal, and move the cable away.

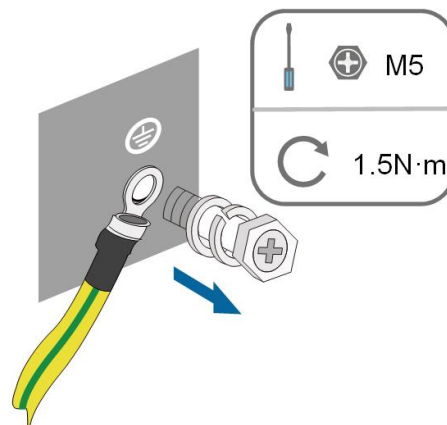

## **5.5 DC Cable Connection**

### **5.5.1 Assemble DC Connectors**

The DC cables are connected to the battery system on one side and to the inverter on the other side, as shown in the figure below.




RACK


Inverter

### Assemble the cold-pressed terminal for connection on battery side

The dimensions of the cold-pressed terminal are shown in the figure below.

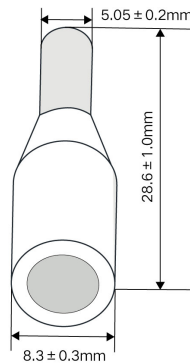


Remove the insulation of the DC cable by approximately 18–20mm using a wire stripper. Insert the stripped cable into the cold-pressed terminal, and crimp it using a crimping tool.

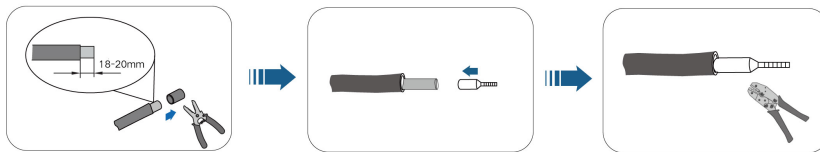


### Assemble the connectors for battery connection on inverter side


1. Remove the insulation of the DC cables, both by approximately 15mm.

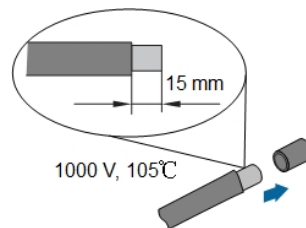

2. Remove the swivel nuts from the connectors.

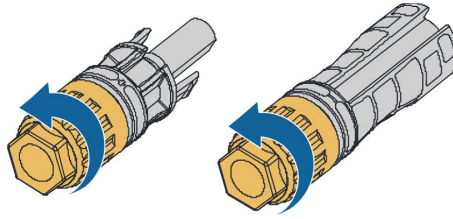


3. Crimp the corresponding wiring terminals on the cable wires using a crimping tool.

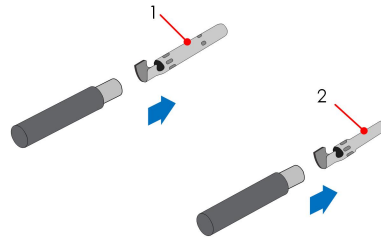


1: Positive cold-pressed terminal

2: Negative cold-pressed terminal

4. Lead the cables through the cable glands, and insert them into the insulators respectively until they snap into place. Pull gently the cables backward to make sure the connection is secure.

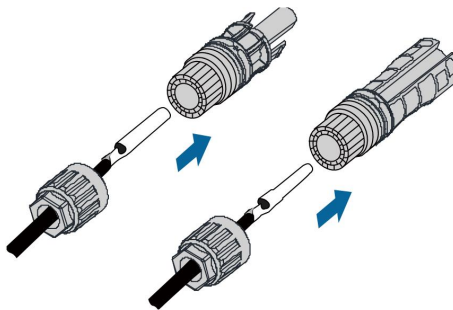


5. Fit the swivel nuts onto the connectors and tighten them. Pull gently the cables backward to make sure the connection is secure.

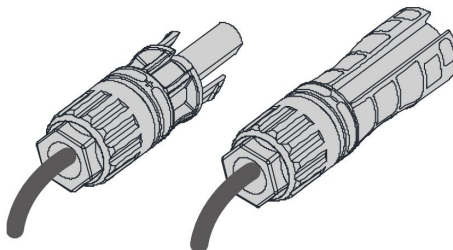


## 5.5.2 DC Cable Connection and Disconnection

### Connect the DC cables


1. Remove the dust cover from the port for DC cable connection.

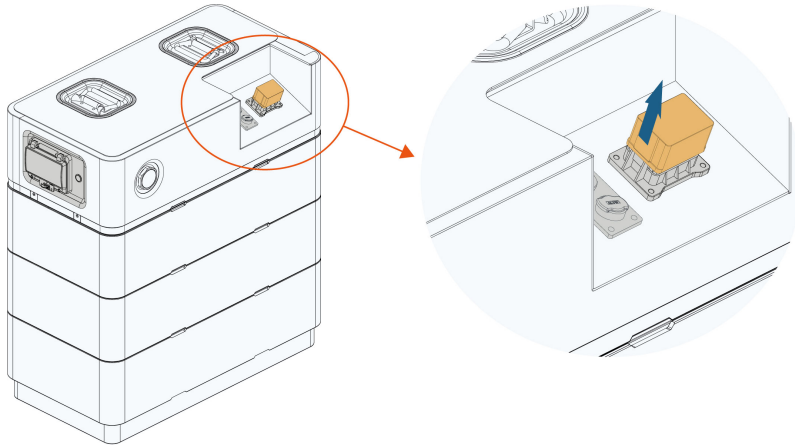


2. On the battery side, lead the DC cables through the power connector.

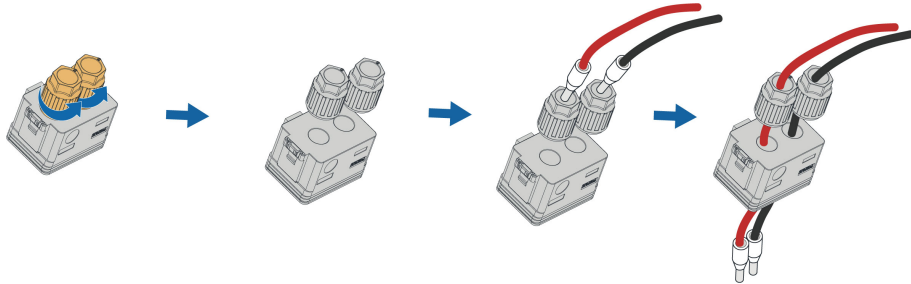


3. Insert the slotted screwdriver straight into the DC port, and press down on the screwdriver. The cable terminals can now be inserted into the corresponding ports. Release the pressure on the screwdriver, and the DC cables will be secured automatically.

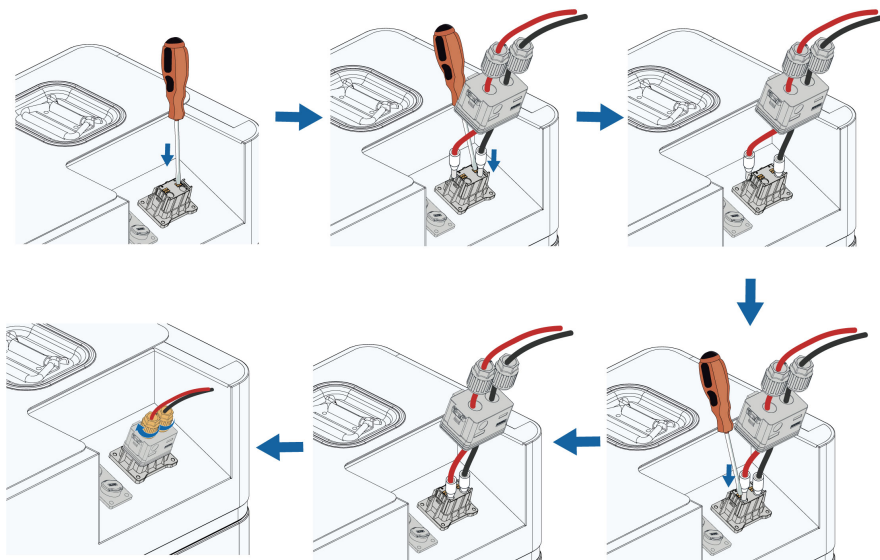

4. Fix the power connector with screws.

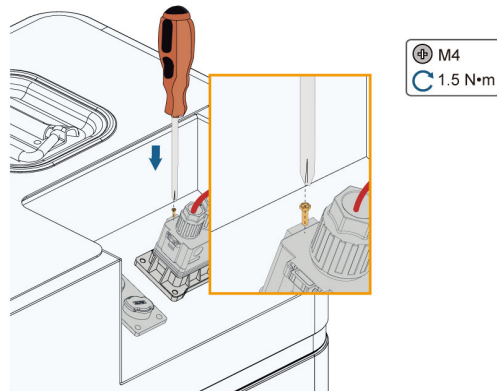

5. On the inverter side, connect the connectors of the DC cables to the corresponding BAT terminals of the inverter, and make sure they "click" into place.

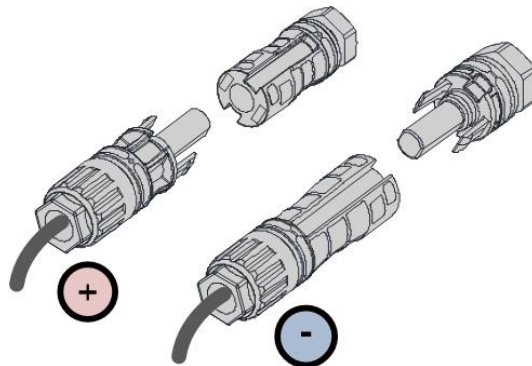


6. Pull gently the DC cables backward to check whether the connection is secure.

#### Disconnect the DC cables


##### NOTICE

**Check whether the system is powered, or let it stand for a while before disconnecting the cables.**


1. Remove the fixing screws from the power connector.

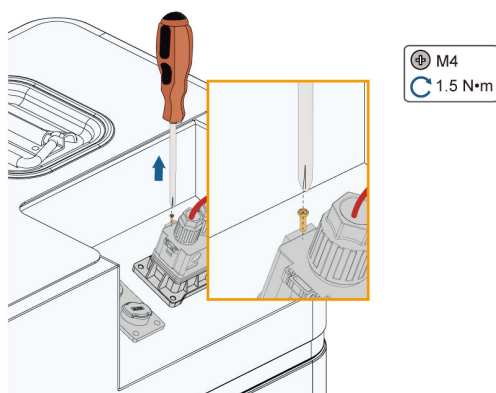


2. Rotate anticlockwise the waterproof terminals at the end of the connector.

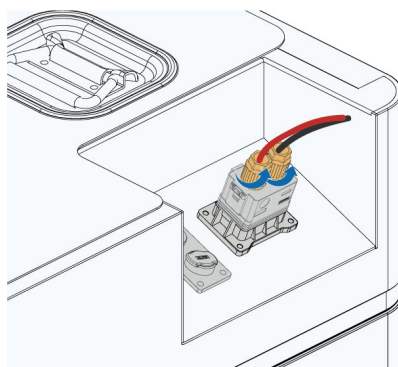

3. On the battery side, pull the DC cables out directly.

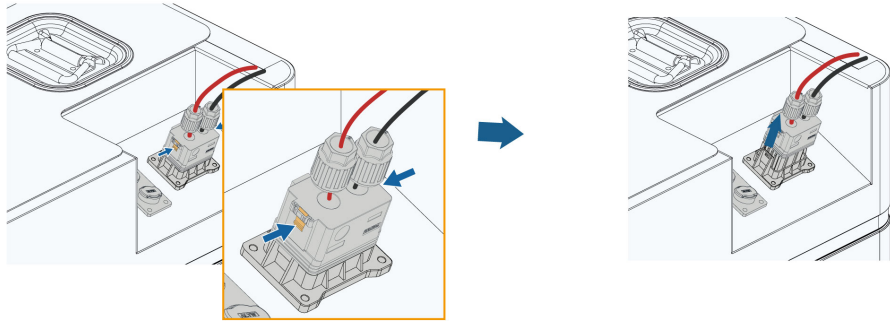

4. On the inverter side, loosen the locking element of the connector with a dismantling wrench, and fit the waterproof plug.

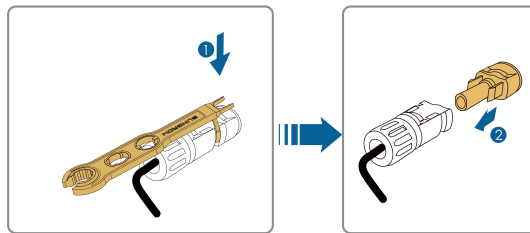

## 5.6 Communication Cable Connection

### 5.6.1 Assemble Communication Connectors and Termination Resistor

The communication cable is connected to the battery system on one side and to the inverter on another side, as shown in the figure below.




RACK


Inverter

### Assemble the communication connector for connection on battery side


1. Unscrew the swivel bolt from the communication connector, and remove the rubber washer inside.

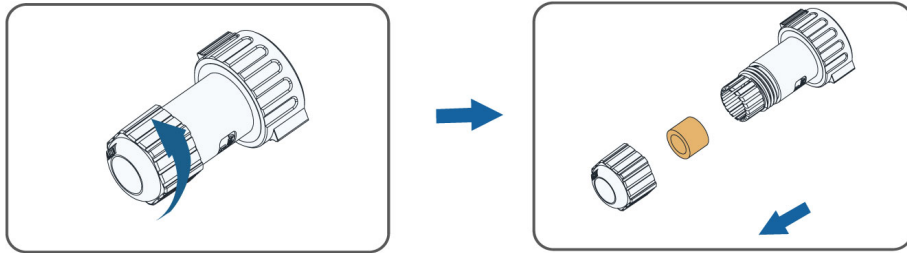


2. Lead the communication cable through the communication connector, and remove the insulation of the cable from one side by approximately 10-15mm.

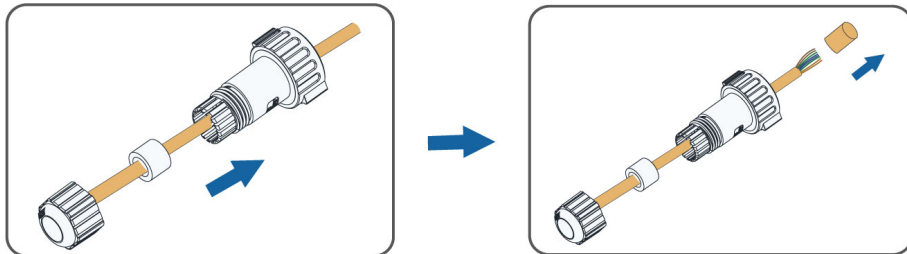

3. Attach the RJ45 connector, and crimp it using the RJ45 crimping tool.

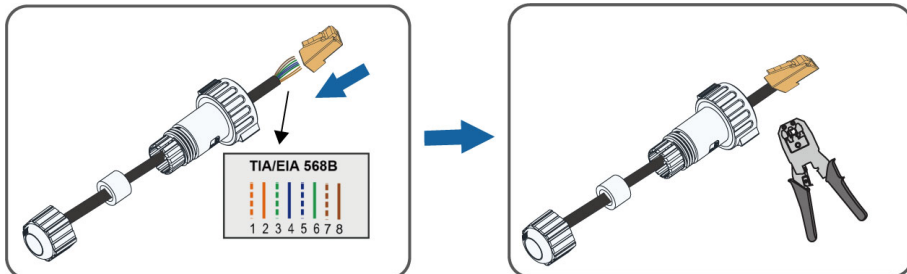


4. Put the rubber washer back, and then tighten the bolt.

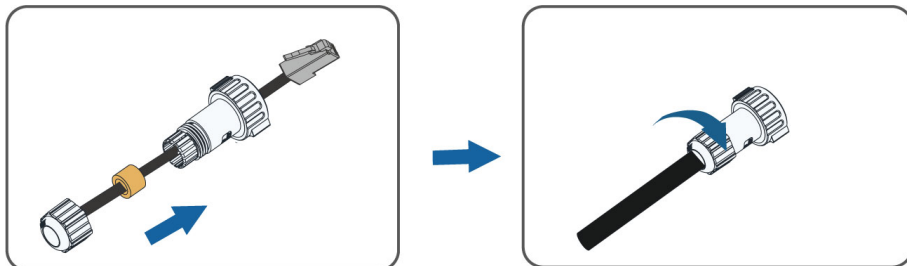


### Assemble the wiring terminal for connection on inverter side

1. Remove the insulation of the communication cable from the other side. Keep signal wires CAN1\_H (orange-white wire) and CAN1\_L (orange wire), and cut off the unused signal wires.

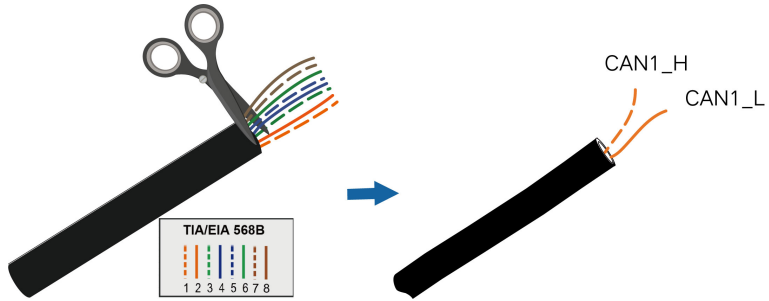

2. Remove the insulation of the signal wires, both by 12mm.

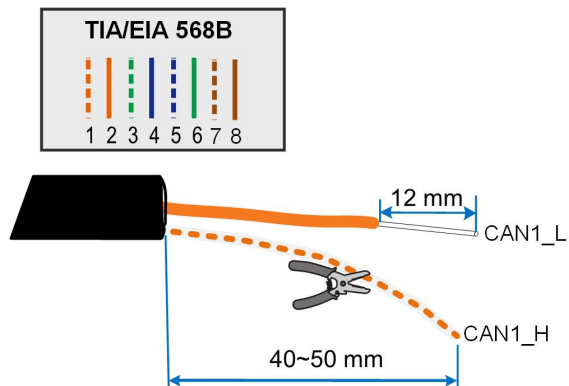


3. Insert the stripped wires into the corresponding cold-pressed terminals, and crimp them using a crimping tool.



**Install the termination resistor**

To improve the communication quality of the battery system, a termination resistor should be connected to the COM IN port on the switch gear. The installation process is illustrated as follows.


Fit the termination resistor into the communication connector.

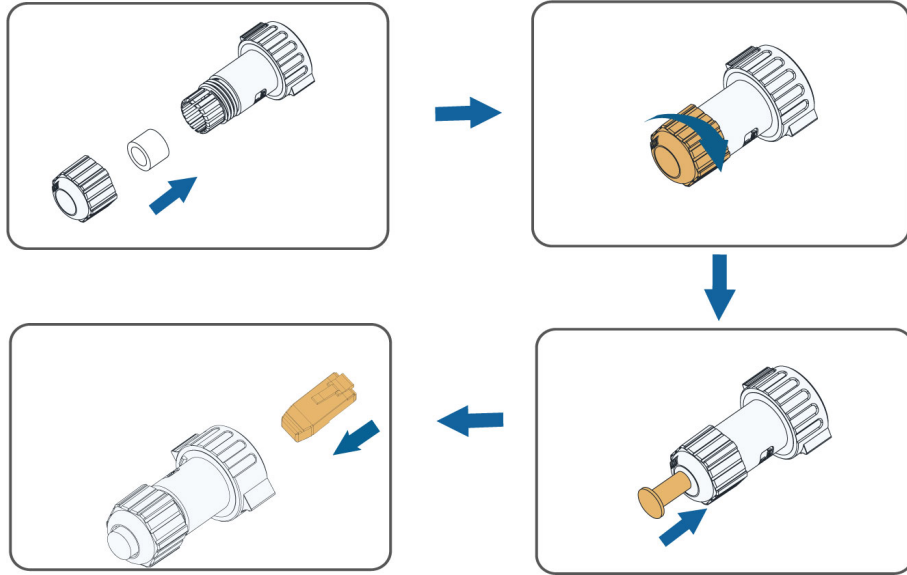


### 5.6.2 Communication Cable Connection and Disconnection

#### Connect the communication cable

1. Remove the waterproof plug from the COM port of the battery.

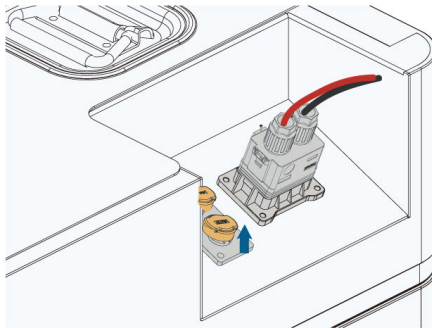


2. Insert the communication cable and the termination resistor respectively into the OUT and IN ports of the communication terminal, and make sure they "click" into place.

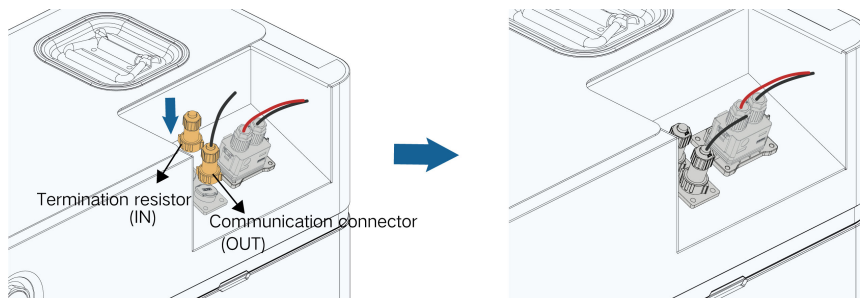

Be sure to install a termination resistor, otherwise, the battery communication cannot be enabled.


3. Connect the other side of the communication cable to the H and L of the communication port of the inverter.

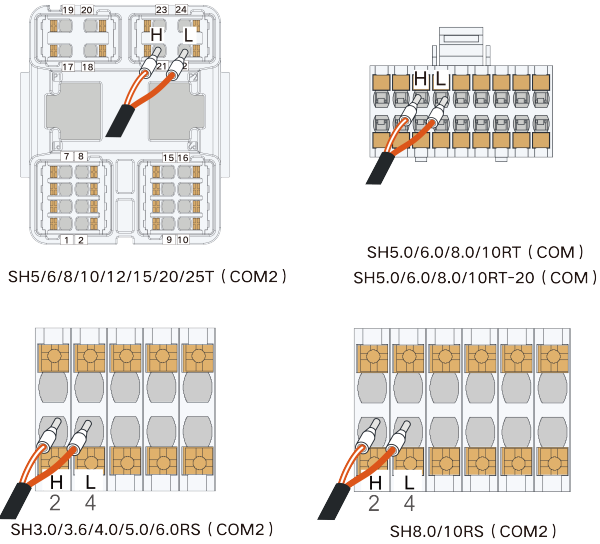


**i** In EU region, SBH100-400 battery is only compatible with SH5-25T inverter.

**Disconnect the communication cable**

1. Pull the communication connector out of the COM port of the battery.

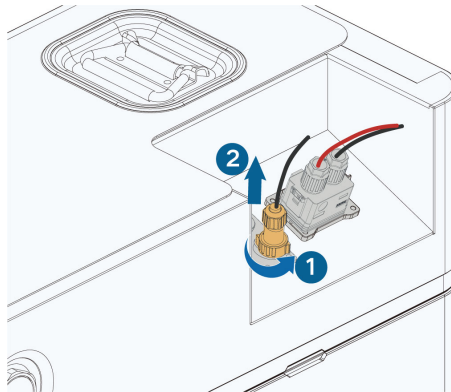


2. Fit the waterproof plug.

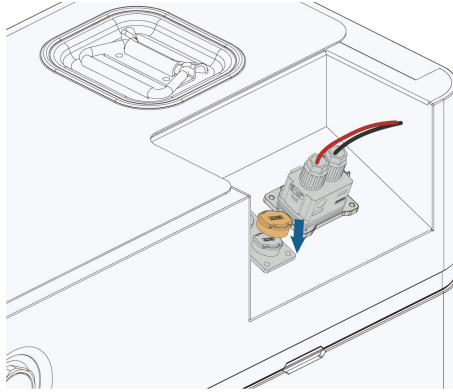


### Remove the termination resistor

1. Pull the termination resistor out of the COM port of the battery.

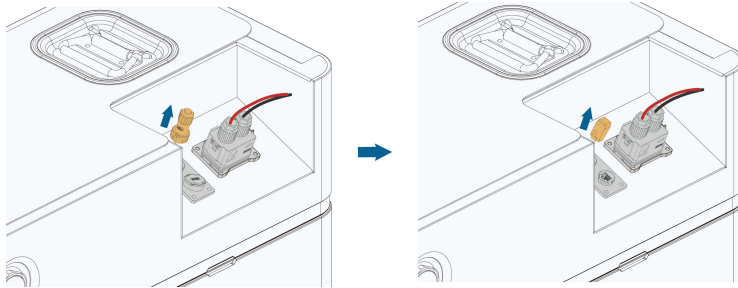


2. Fit the waterproof plug.

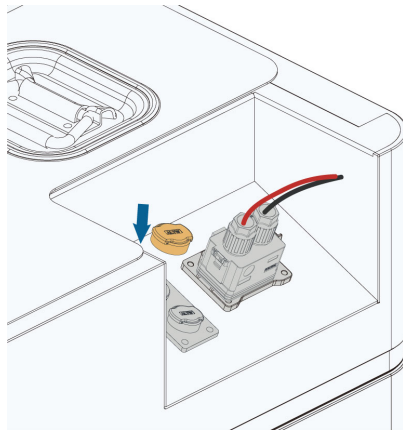


## 5.7 Top Cover Assembling

Assemble the top cover after the electrical connection is completed and the cables are confirmed to be correctly and firmly connected.

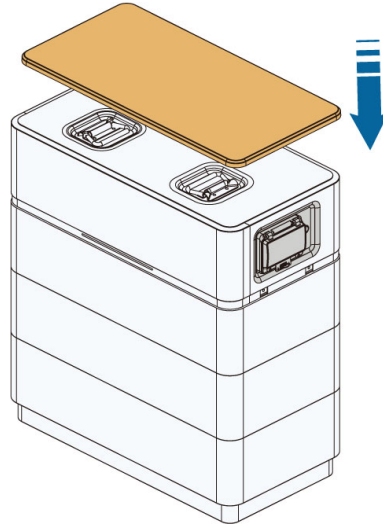

### 5.8 Battery Cascading

**i** RACKs (battery systems) can be connected in parallel, allowing for at most 4 RACKs to be cascaded. Please make sure the usable energy of each RACK is the same when cascading the RACKs.

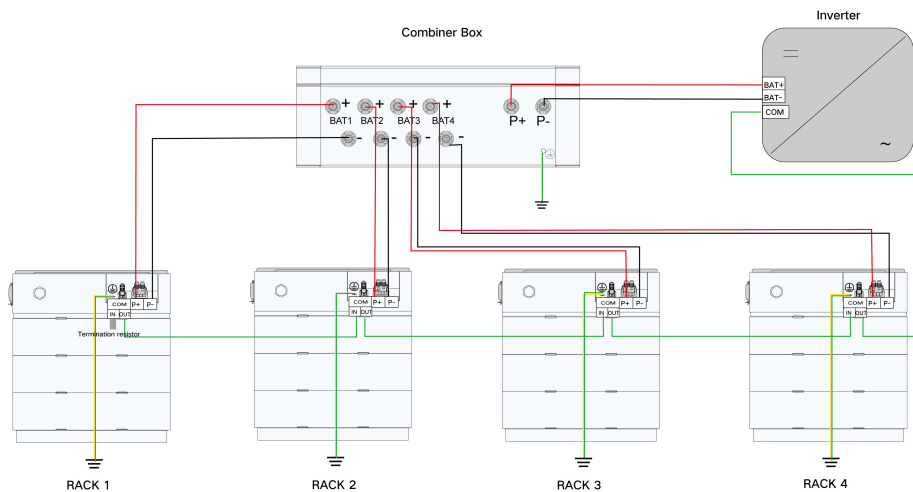

**Figure 5-2** Battery Cascading Diagram

**i**

- Combiner box is not available in EU.
- The SBH-V12 version currently supports single-cluster battery configurations only.

## 6 Commissioning/Start-up

### 6.1 Inspection before Commissioning

Check the following items before starting the battery:



- Check that the battery system has been installed completely.
- Check that the appearance of the battery system is intact.
- Check that the battery system output wiring harness is correctly connected to the positive and negative terminals of the battery and hybrid inverter to avoid misconnection and reverse connection.
- If a combiner box is used, check whether the connection between the battery and the combiner box and the connection between the combiner box and the hybrid inverter is complete, and whether the positive and negative terminals are correctly connected. (Combiner box not sale in EU)

### 6.2 Commissioning Procedure

#### Prerequisite

If the requirements of the inspection items above are all met, please proceed with the following steps to start the battery system for the first time.

- Step 1** Open the protective cover of the DC circuit breaker, and pull the switch up. The status indicator then blinks blue. When the indicator is steady blue, it indicates that the battery system has been powered on and is working normally.

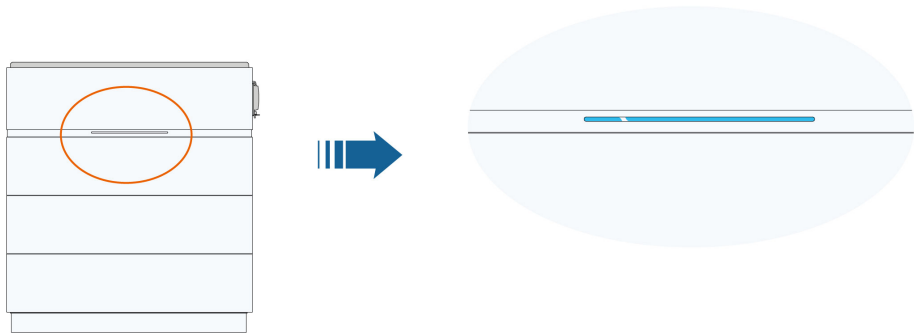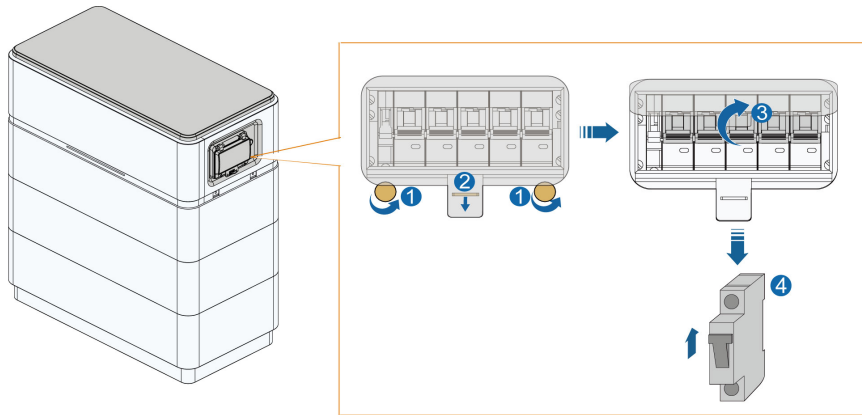

Please refer to [2.4 LED Indicators](#) for the description of LED indicator status.



It is required to press the black start button at the first start-up of the system.

--End

## 7 Battery Decommissioning/Shutdown Procedure

### Prerequisite

The battery in the system should be decommissioned once the hybrid inverter is out of service. Proceed with the following steps to decommission the battery.

**Step 1** Shut off the DC circuit breaker of the battery system.

**Step 2** One minute after the DC circuit breaker is shut off, disconnect and remove the power cables and communication cable.

--End



Contact SUNGROW for battery disposal.

## 8 Viewing Battery information


### NOTICE

To view the battery information, complete the plant creation process in iSolarCloud first. For details on how to create a plant in iSolarCloud, please refer to *iSolarCloud App User Manual*, which can be obtained by scanning the following QR code.




### Viewing Battery information on iSolarCloud App

1. Log in to the **iSolarCloud App**. Select a plant, and tap **Overview**. In the **Energy Analysis** section, you can view the battery charge and discharge data within a specific time period. You can switch between **Curve** and **Summary** to display data in different formats.

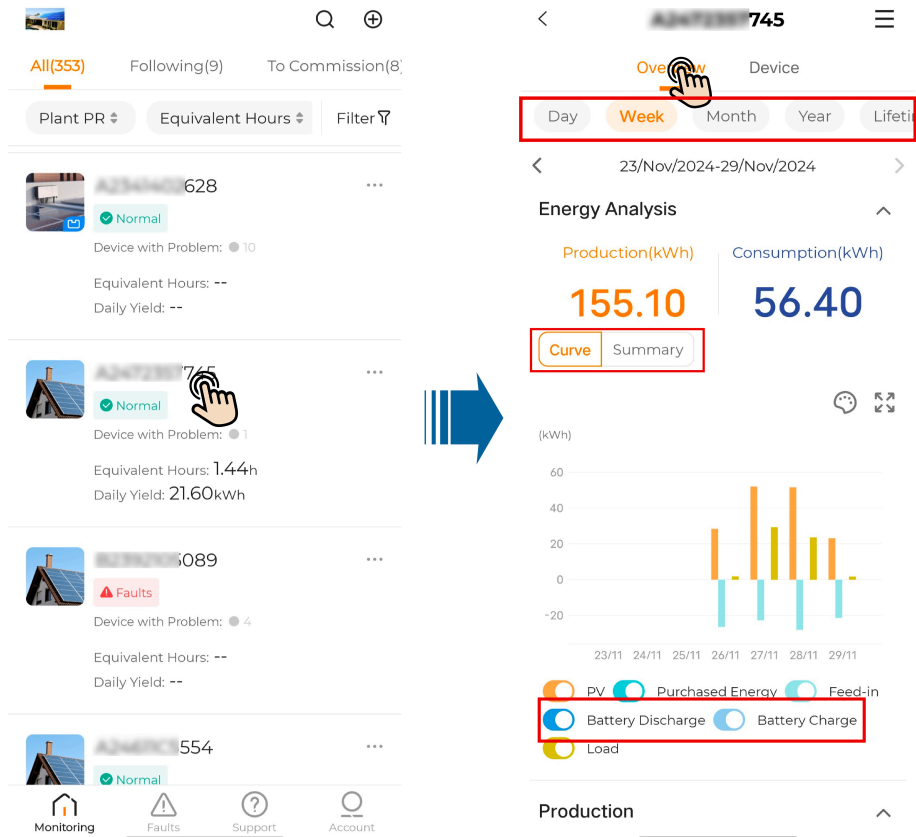

2. Tap **Device** and choose **Battery**. You can select a battery to view information including **Battery Chemistry Performance and Durability, Battery Life, Module Manufacturing Date, Other Information, and Device Information.**

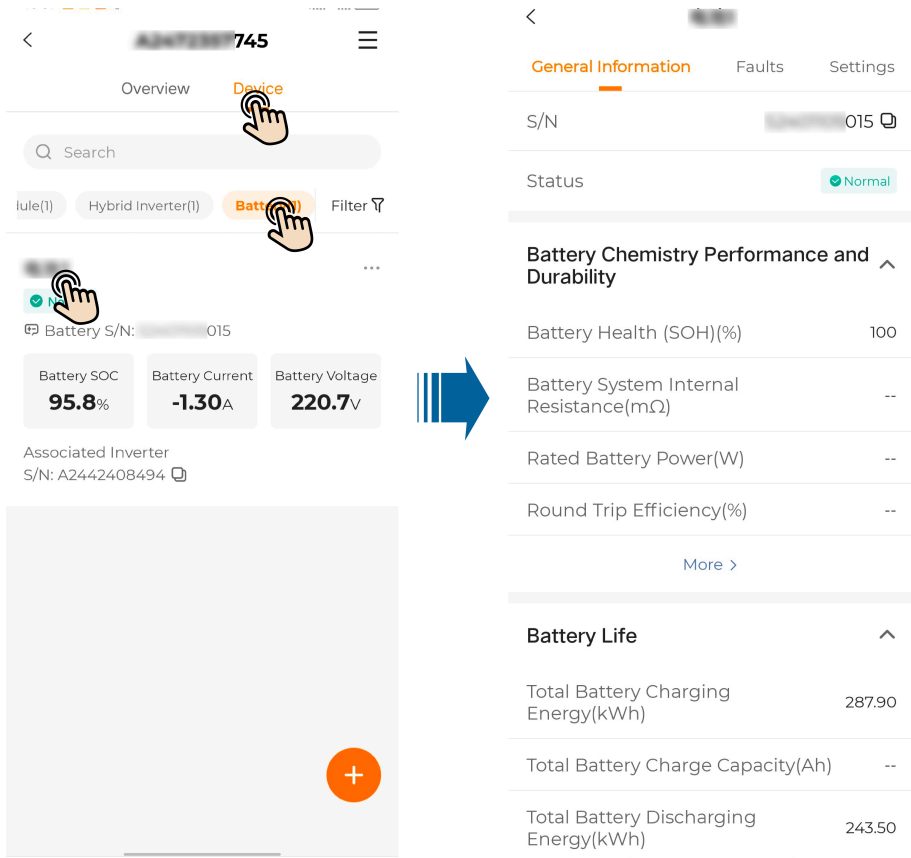

**Viewing Battery information on iSolarCloud Web**

1. Log in to the **iSolarCloud Web**. Select a plant, and click **Overview** to view the battery charge and discharge data within a specific time period.

The screenshot shows the iSolarCloud dashboard with a list of plants. The table below represents the data shown in the table:

Plant Image	Plant Name	Plant Type	Status	Installed Power	Real-time Power	Yield Today	Total Yield	Et Action
	...	Residential PV	Normal	10 kWp	1.51 kW	0.1 kWh	7.8 kWh	0 ☆ 🗑️
	...	Residential PV	Offline Device: 1	0 kWp	--	--	--	-- ☆ 🗑️
	...	Residential PV	Normal	10 kWp	2.059 kW	0.3 kWh	178.93 kWh	0 ☆ 🗑️
	...	Residential PV	Commissioning...	10 kWp	--	--	--	-- ☆ 🗑️
	...	Residential PV	Commissioning...	10 kWp	--	--	--	-- ☆ 🗑️
	...	Residential PV	Offline Device: 4	200 kWp	--	--	--	-- ☆ 🗑️
	...	Commercial PV	Offline Device: 7	400 kWp	84.54 kW	0 kWh	11.27 MWh	0 ☆ 🗑️
	...	Residential PV	Offline Device: 1	15 kWp	-156 W	34.7 kWh	462.1 kWh	2 ☆ 🗑️




The screenshot shows the device information page for a battery. The data is summarized in the table below:

Category	Value
PV	31.1 kWh
Load	2.228 kWh
Battery Charge	0.1 kWh
Battery Discharge	2 kWh
Feed-in	30.772 kWh
Purchased Energy	0 kWh

Below the data is a line chart showing Power (W) over time for PV, Grid, Battery, and Load. The Battery power is highlighted with a red box. At the bottom, there are environmental impact metrics:

- CO<sub>2</sub> Reduction: 450.016 kg
- Save Standard Coal: 186.406 kg
- Equivalent Trees Planted: 25.117 trees

2. Click **Device information** and choose **Battery** in **Device Type**. You can select a battery to view the **Measuring Point Parameter** and **Device Information**.

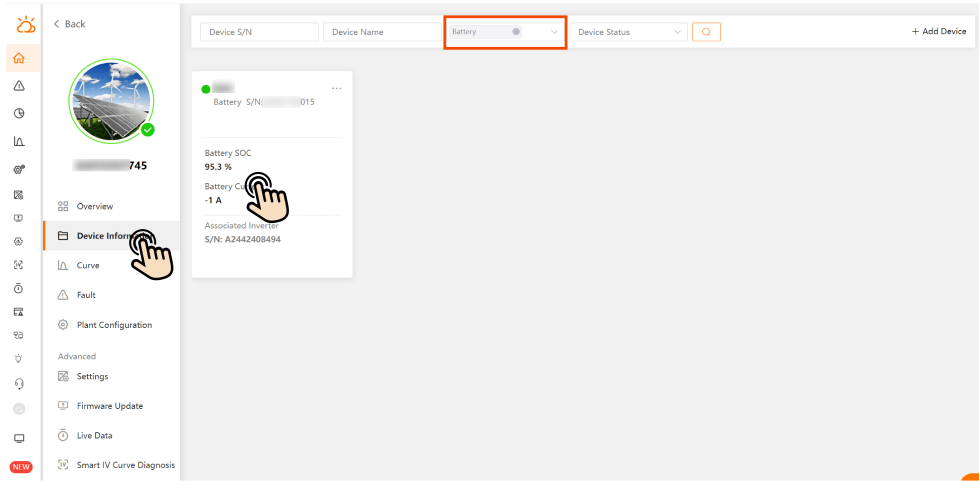

Plant Name: 745 Device Location: Device Model: SBH150-V11

General Information Pending Fault Fault History Remote Signaling Status Device Document

Measuring Point Parameter Data Update Time: 2024-11-29 16:15

**Battery Information**

Battery SOC	92.2 %	✓	Battery Current	-10.3 A	✓	Battery Voltage	223.4 V	✓	Battery Temperature	19.1 °C	✓
DC Contactor State	2	✓	Fault Module ID	0	✓	Battery Health (SOH)	100 %	✓	Battery Operation Status	Run	🕒
Total Battery Charging Energy	289.5 kWh	✓	Total Battery Discharging Energy	245.6 kWh	✓						

**Battery Chemistry Performance and Durability**

Rated Battery Power	-- W	✓	Round Trip Efficiency	-- %	✓	Battery Max. Allowable Output Power	-- W	✓	Rated Battery Capacity	-- Ah	✓
Battery System Internal Resistance	-- mΩ	✓									

**Battery Life**

Extreme Temperature Working Time	-- h	✓	Battery Equivalent Cycles	--	✓	Total Battery Discharge Capacity	-- Ah	✓	Total Battery Charge Capacity	-- Ah	✓
Deep Discharge Times	--	✓	Extreme Temperature Charging Time	-- h	✓						

## 9 Battery Augmentation



If you have requirements of battery augmentation, please contact battery installers for professional support.

Battery charging and discharging may take a long time. So before adding a new battery (module), please finish charging and discharging the battery system on site remotely. Please follow the instructions as outlined below:

Follow steps to remotely charge and discharge the batteries at the plant site to ensure that the SOC of these batteries is consistent with that of the new modules to be added.

The following conditions must be met to use the battery augmentation function:

- The iSolarCloud App version should be V2.1.6.20230731 or later.
- The battery version should be V02 or later.
- The inverter model should be SH3.0-6.0RS/SH8.0-10.0RS series and the version should be later than SUNSTONE-H\_01011.02.43(LCD)/SUNSTONE-H\_01011.02.40(LCD).




For the European region, SBH series is only applicable to SHT series inverters and the version should be later than PEARL-H\_01011.01.21.


### WARNING


**Before adding a new battery (module), be sure to charge/discharge the on-site battery system via iSolarCloud App. After the settings are completed successfully, battery charging/discharging will start automatically, until the SOC of the battery on site is the same as that of the battery to be added. Otherwise, the battery system may not work normally after the new battery is added, and the problems arising therefrom will not be covered by warranty.**


**Step 1** Open the iSolarCloud App and tap **Local Access** at the bottom left of the login screen.

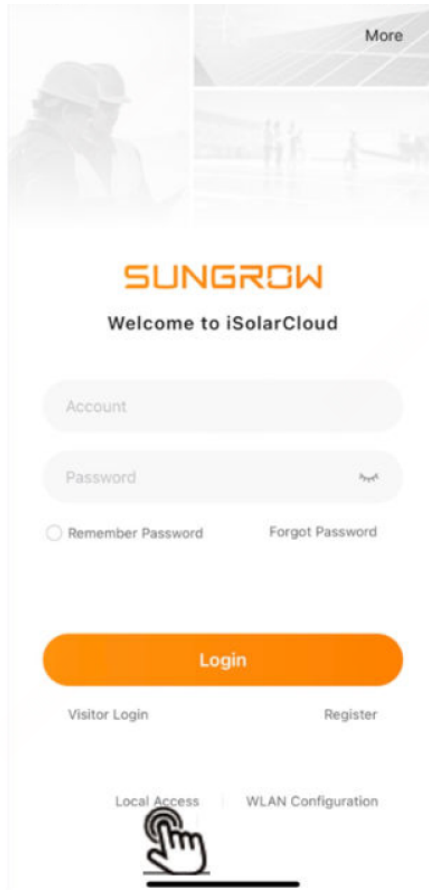

**Step 2** On the **Scan to Connect** screen, point your camera at the QR code on the device's enclosure, then wait for the connection to complete.

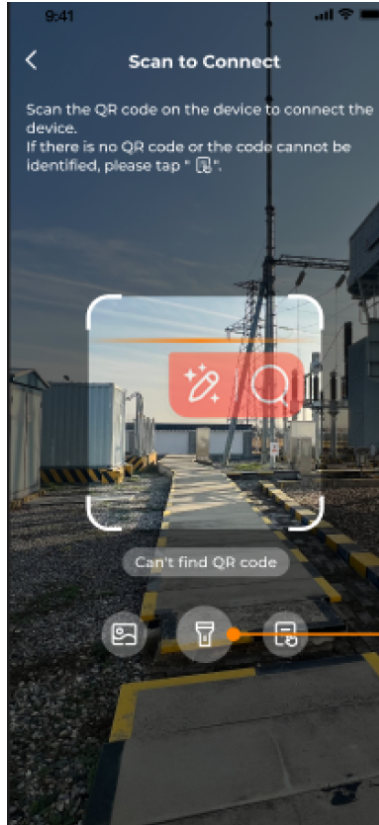

- a. If the QR code is missing or the scan fails, tap  to go to Manual Connection and connect to the device manually.

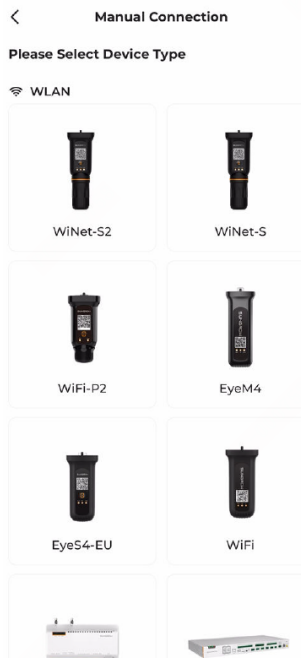

- b. Select the target device. The system will proceed to Bluetooth Connection. Wait for the connection to complete. If no Bluetooth device is found, disconnect and reconnect the communication module, then try again.

**Step 3** Enter your account name and password on the Identity Verification screen, and then tap Verify. The default account name and password are listed below. Please change your password as soon as possible to keep your account secure.

**Step 4** Tap .

**Step 5** Tap **Battery augmentation**.

**Step 6** Tap **Start charging/discharging** to start.

< **Battery augmentation** 



Charge/discharge the battery to 40%

#### Friendly reminder

1. Do not adjust battery parameters or perform battery augmentation during charging/discharging.
2. After charging/discharging, complete battery augmentation within 24 hours; otherwise, the battery cannot be used and the process must be restarted.

What is battery augmentation?

Start charging/discharging

**Step 7** Power down the system following the commissioning steps. Install the new battery after the system is completely powered down.

**Step 8** Check the battery base to ensure that the battery is placed steadily after the new battery module has been added. Reactivate the battery referring to Chapter Commissioning in the battery user manual and check whether the battery operates properly. Restore the battery waterproof cover, awning (if there is), etc.

**--End**


# 10 Winter Battery Heating

The battery cannot be charged when its temperature is below 0°C. After enabling the Winter Battery Heating function, the system will heat the battery automatically or during the configured time period using PV or grid power, and will stop heating automatically once the default system temperature is reached.


There are two Winter Battery Heating modes:

- Automatic heating mode: Maximize the use of PV energy for heating and ensure that the battery is in good condition under low temperatures.
- Scheduled heating mode: Within the set time range, maximize the use of PV energy for heating.

## 10.1 Automatic Heating

**Step 1** On the **Overview** page of the target plant, click  in the upper right corner to enter the **Settings** page.

**Step 2** Tap **Winter battery heating** and choose **Automatic heating**.

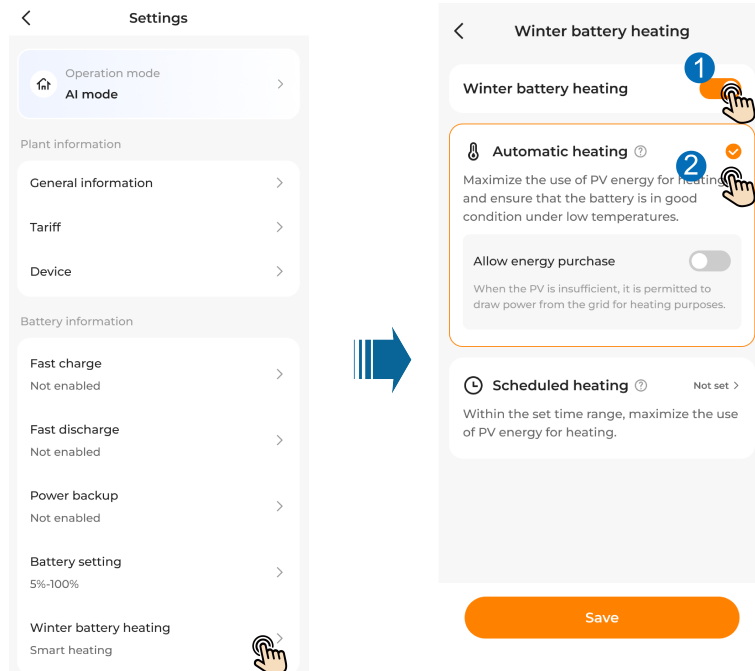




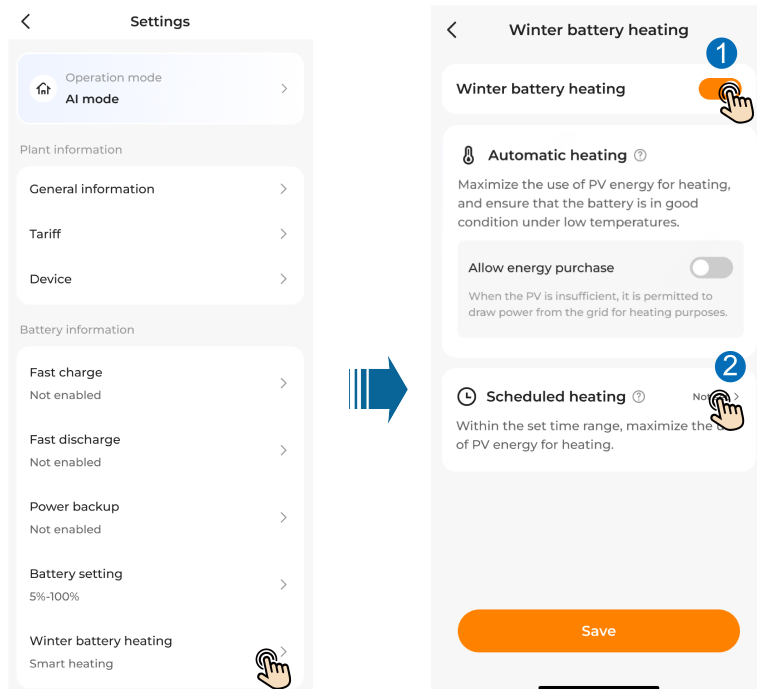
In automatic heating mode, to ensure battery availability and maximize heating efficiency, it is recommended that you enable the **Allow energy purchase** switch.

--End


## 10.2 Scheduled Heating

**Step 1** On the **Overview** page of the target plant, click  in the upper right corner to enter the **Settings** page.


**Step 2** Tap **Winter battery heating** and choose **Scheduled heating**.




**Step 3** Select the repeat time for battery heating (multiple selections supported).

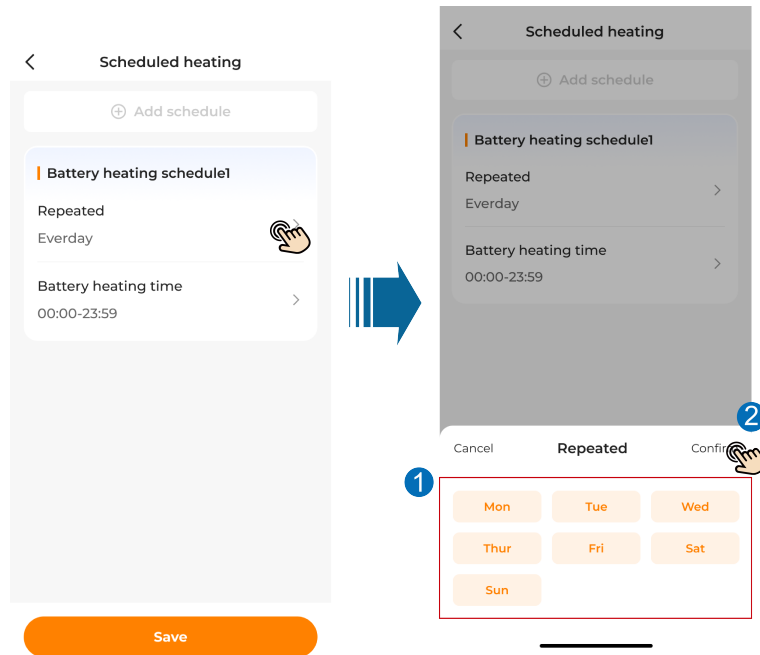


**Step 4** Tap the corresponding time range to add a new time period (up to 4 time periods can be set). Drag the time period up or down to adjust its duration and tap **Save**.

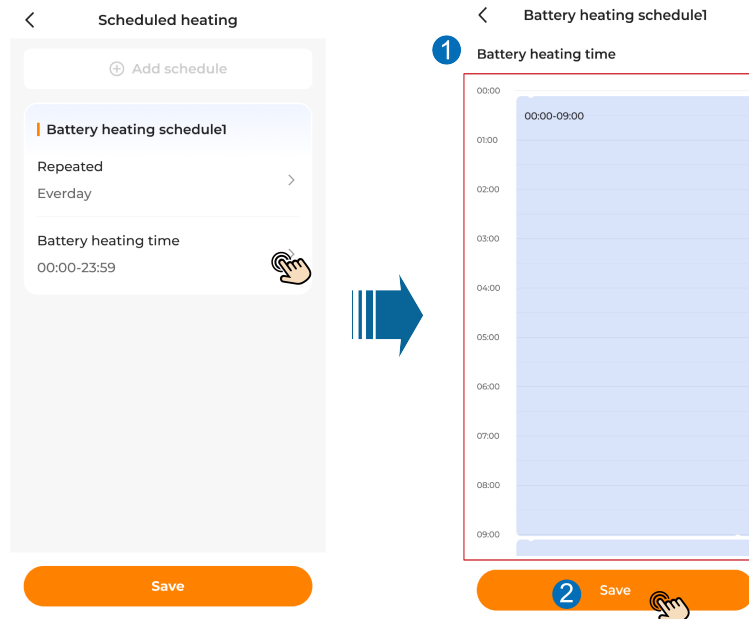

**Step 5** To add a new battery heating schedule, tap **Add schedule** and continue setting the heating schedule.

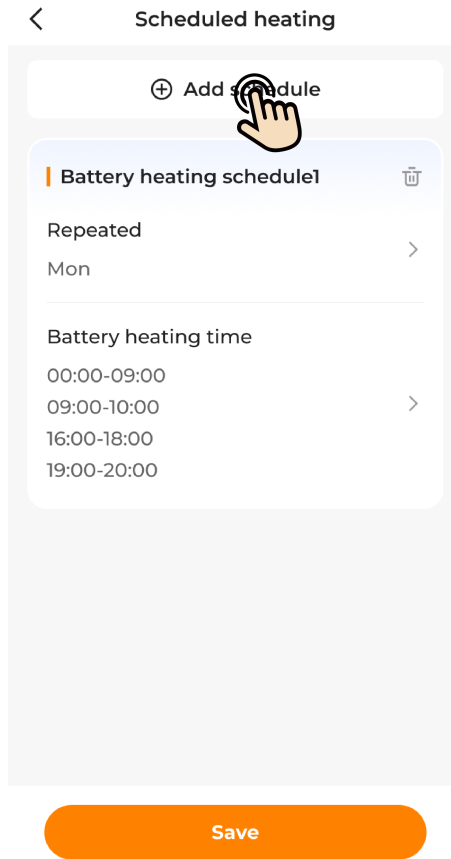

**Step 6** After setting, tap **Enable**.

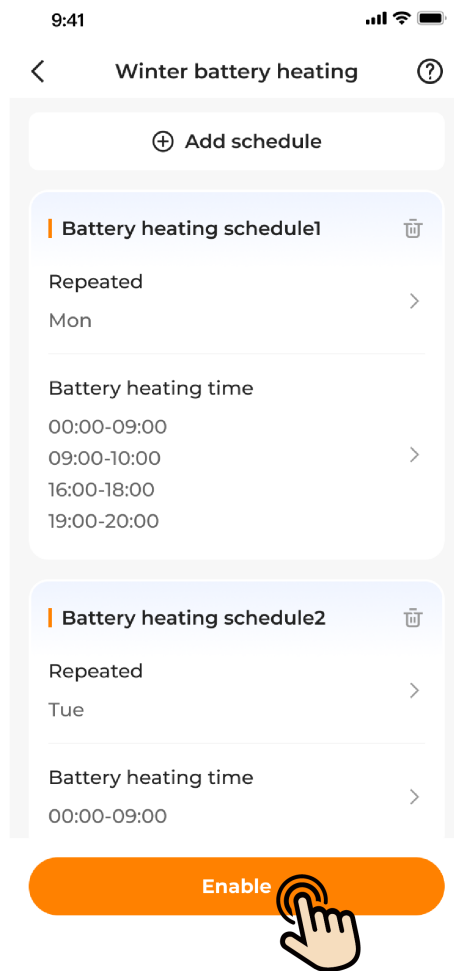

--End

# 11 Troubleshooting and Maintenance

## 11.1 Troubleshooting

Fault Name	Fault Code	Corrective Measure
	703, 711, 712, 715, 717	<ol style="list-style-type: none"> <li>1. Generally, the fault will disappear by itself within 20 min.</li> <li>2. In the event of continual and frequent occurrence of this fault, please switch off the battery system, and contact the installer or manufacturer to check whether the inverter is damaged.</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
Battery fault	707, 733	<ol style="list-style-type: none"> <li>1. Check whether there is a heat source near the battery system, and measure the ambient temperature. The operating temperature range of the battery system is 0 to 55°C for charging, and -20 to 55°C for discharging. Please check whether the ambient temperature or the battery temperature goes beyond this range. In case the battery is placed near a heat source or in an unventilated environment, or the ambient temperature is too high, please improve the installation environment for the battery system.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	708, 734	<ol style="list-style-type: none"> <li>1. The operating temperature range of the battery system is 0 to 55°C for charging, and -20 to 55°C for discharging. Please check whether the ambient temperature or the battery temperature falls below this range. In case the ambient temperature is too low, please improve the installation environment for the battery system.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery</li> </ol>

Fault Name	Fault Code	Corrective Measure
		<p>system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</p>
	714	<ol style="list-style-type: none"> <li>1. Check whether the communication cable between the battery and the inverter is incorrectly or loosely connected.</li> <li>2. Replace the communication cable if the problem is not resolved.</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	732	<ol style="list-style-type: none"> <li>1. Please contact the installer or manufacturer to upgrade the hybrid inverter, WiNet, and battery software to the latest version.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	735, 736, 737	<ol style="list-style-type: none"> <li>1. Generally, the battery will return to normal automatically;</li> <li>2. If the problem is not resolved, switch off the battery system, and restart it after 5 minutes.</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	739	<ol style="list-style-type: none"> <li>1. Switch off the battery system, and restart it after 5 minutes.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	740	<ol style="list-style-type: none"> <li>1. Check whether the client RACK is incorrectly or loosely connected. Switch off the battery, and restart it after 5 minutes.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>

Fault Name	Fault Code	Corrective Measure
	741	<ol style="list-style-type: none"> <li>1. Please contact the installer or manufacturer to upgrade the hybrid inverter, WiNet, and battery software to the latest version.</li> <li>2. If the problem is not resolved, please check whether the system configuration is correct (SUNGROW single-phase hybrid inverter used with battery system consisting of 2~6 PACKs; SUNGROW three-phase hybrid inverter used with battery system consisting of 3~8 PACKs).</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	742	<ol style="list-style-type: none"> <li>1. Please check whether the power cables are connected in inverse or poorly connected.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	743, 744, 745	<ol style="list-style-type: none"> <li>1. Generally, the battery will return to normal automatically;</li> <li>2. If the problem is not resolved, please upgrade the battery software.</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	746	<ol style="list-style-type: none"> <li>1. Please contact the installer or manufacturer to upgrade the hybrid inverter, WiNet, and battery software to the latest version.</li> <li>2. If the problem is not resolved, please contact the installer to change the order of PACKs and re-install the battery system.</li> <li>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	747	<ol style="list-style-type: none"> <li>1. Switch off the battery system, and restart it after 5 minutes.</li> </ol>

Fault Name	Fault Code	Corrective Measure
		<p>2. If the problem is not resolved, please upgrade the battery software.</p> <p>3. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</p>
	833	<p>1. Please contact the installer or manufacturer to upgrade the hybrid inverter, WiNet, and battery software to the latest version.</p> <p>2. If the problem is not resolved, please check whether the system configuration is correct (SUNGROW single-phase hybrid inverter used with battery system consisting of 2~6 PACKs; SUNGROW three-phase hybrid inverter used with battery system consisting of 3~8 PACKs).</p> <p>3. If the problem is not resolved, please contact the installer to change the order of PACKs and re-install the battery system.</p> <p>4. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</p>
	2727	Please turn off the heating function before contacting the installer or the manufacturer.
	932, 939, 964	<p>1. Generally, the battery will return to normal automatically.</p> <p>2. Please contact the installer or the manufacturer if the issue remains unresolved for a long term. Turn off the battery immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge..</p>
Battery alarm	937, 941, 942	<p>1. Generally, the battery will return to normal automatically.</p> <p>2. If the problem is not resolved, please upgrade the battery software.</p> <p>3. Please contact the installer or the manufacturer if the issue remains unresolved for a long term. Turn off the battery immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge..</p>

Fault Name	Fault Code	Corrective Measure
	933	<ol style="list-style-type: none"> <li>1. Check whether there is a heat source near the battery system, and measure the ambient temperature. The operating temperature range of the battery system is 0 to 55°C for charging, and -20 to 55°C for discharging. Please check whether the ambient temperature or the battery temperature goes beyond this range. In case the battery is placed near a heat source or in an unventilated environment, or the ambient temperature is too high, please improve the installation environment for the battery system.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	934	<ol style="list-style-type: none"> <li>1. The operating temperature range of the battery system is 0 to 55°C for charging, and -20 to 55°C for discharging. Please check whether the ambient temperature or the battery temperature falls below this range. In case the ambient temperature is too low, please improve the installation environment for the battery system.</li> <li>2. Please contact the installer or the manufacturer if the issue persists for a long time. Switch off the battery system immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	935	<ol style="list-style-type: none"> <li>1. Generally, the battery will return to normal automatically.</li> <li>2. If the problem is not resolved, switch off the battery system, and restart it after 5 minutes.</li> <li>3. Please contact the installer or the manufacturer if the issue remains unresolved for a long term. Turn off the battery immediately if the SOC drops below 3% to avoid damage caused by battery over-discharge.</li> </ol>
	2728	<ol style="list-style-type: none"> <li>1. Please check whether the ambient temperature is below the battery's operable temperature range.</li> <li>2. Please verify if the battery is installed in a high-wind environment, which may cause heat dissipation to exceed the design rate.</li> </ol>

Fault Name	Fault Code	Corrective Measure
		<p>3. Please check whether the energy allocated for heating is sufficient and whether the grid-powered heating function is enabled.</p> <p>4. If all the above items are normal after inspection, please continue to use the product with confidence.</p> <p>5. If the alarm occurs frequently or persistently, please turn off the heating function first, and then contact the installer or the manufacturer.</p>
	2729	<p>1. Please check whether the inverter is operating abnormally.</p> <p>2. Please verify whether the energy supply for heating is sufficient and whether the grid-powered heating function is enabled.</p> <p>3. If all the above items are normal after inspection, please continue to use the system with confidence.</p> <p>4. If the alarm occurs frequently or persists, please turn off the heating function first, and then contact the installer or the manufacturer.</p>
	2730	<p>1. If the alarm occurs for the first time or infrequently, please continue to use the system.</p> <p>2. If the alarm occurs frequently or persistently, please contact the installer or the manufacturer.</p>

## 11.2 Maintenance

### NOTICE

**Please contact SUNGROW when adding any new PACK for capacity expansion, and perform the operation following the instructions provided by SUNGROW. Otherwise, the system performance may be affected, and the system may not be able to work normally.**

The recommended maintenance intervals are listed as follows, which however should be adjusted according to the actual installation environment.

The maintenance interval of the product is subject to factors such as power plant size, location, and site conditions. It is necessary to shorten the interval and increase the frequency of maintenance for products working in sandy or dusty environments.

**Items to be inspected once a year**

Inspection item	Inspection method
PACK status and cleanliness	<p>The following items should be inspected. Take corrective actions immediately for items that fail the inspection:</p> <ul style="list-style-type: none"> <li>• Check if there is any damage to or deformation of the PACK and its internal components.</li> <li>• Check if the internal components make abnormal noises during running.</li> <li>• Check if the temperature inside the RACK goes too high.</li> </ul>
Warning signs	Check if warning labels and signs are legible and clean. Clean them if necessary.
Cable	Check if the switch gear is correctly connected to the hybrid inverter.
Corrosion	Check if the PACK has oxidized or rusted inside.

**Items to be inspected every six months**

Inspection item	Inspection method
Switch gear and PACKs	<p>The following items should be inspected. Take corrective actions immediately for items that fail the inspection:</p> <ul style="list-style-type: none"> <li>• Check if there are flammables near the PACKs.</li> <li>• Check if the PACK is firmly fixed on the wall, and if the fixing points are rusted or corroded.</li> <li>• Inspect the switch gear and the PACKs for any damage, paint peeling-off, oxidation, etc.</li> </ul>
Wiring and cable laying	<p>Do not perform any inspection unless all the components inside the PACKs are powered off. Take corrective actions immediately for items that fail the inspection during the inspection process</p> <ul style="list-style-type: none"> <li>• Check whether the cables are laid in compliance with relevant standards without short-circuit. Take corrective actions immediately for anything abnormal.</li> <li>• Check if water has penetrated into the PACKs.</li> <li>• Check if the cable is loosely connected. If so, fasten it at the required torque.</li> </ul>
Grounding	Check if the system is correctly grounded.

Inspection item	Inspection method
Functions	Check if the current, voltage, and temperature of the PACKs are in the normal range.

**NOTICE**

**Battery capacity auto-calibration is available, however only when SUNGROW hybrid inverters are used.**

# 12 Appendix

## 12.1 Technical Data

**Table 12-1** Technical parameters of high voltage LFP battery(SBH100 / SBH150 ).

Parameters	SBH100	SBH150
<b>Technical properties</b>	2 modules	3 modules
<b>System Data</b>		
Battery Type	LiFePO4 Prismatic Cell	
Battery module	5.0 kWh, V11: 45 kg, V12: 46 kg	
Energy (usable) <sup>(1)</sup>	10.0 kWh	15.0 kWh
Nominal voltage	140.8 V	211.2 V
Operating voltage	118.8~160.6 V	178.2~240.9 V
Max. charging / discharging current: continuous	50 A	
Depth of discharge	Max. 100%DOD (settable)	
Display	SOC indicator, Status indicator	
Communication interface	CAN	
<b>Protection</b>		
Over/under voltage protection	Yes	
Over current protection	Yes	
Over/under temperature protection	Yes	
DC breaker	Yes	
<b>General Data</b>		
Dimensions (W*H*D)	675 * 580 * 350 mm	675 * 740 * 350 mm

Parameters	SBH100	SBH150
Weight	V11: 106 kg, V12: 108 kg	V11: 151 kg, V12: 153 kg
Installation location	Indoor / Outdoor	
Mounting method	Floor stand	
Operating ambient temperature range	<ul style="list-style-type: none"> <li>• Charge</li> <li>- V11: 0 to 50°C</li> <li>- V12: -20°C to 50°C</li> <li>• Discharge: -20°C to 50°C</li> </ul>	
Degree of protection	IP55	
Allowable relative humidity range	5% to 95% no condensing	
Max. operating altitude	Max. 2000 m	
Cooling method	Natural convection	
Warranty <sup>(2)</sup>	10 Years	

Note(1) : Test conditions: 25°C, 100% depth of discharge (DOD), 0.2C charge discharge.

Note(2) : Refer to battery warranty letter for conditional application.

**Table 12-2** Technical parameters of high voltage LFP battery(SBH200 / SBH250 ).

Parameters	SBH200	SBH250
<b>Technical properties</b>	4 modules	5 modules
<b>System Data</b>		
Battery Type	LiFePO4 Prismatic Cell	
Battery module	5.0 kWh, V11: 45 kg, V12: 46 kg	
Energy (usable) <sup>(1)</sup>	20.0 kWh	25.0 kWh
Nominal voltage	281.6 V	352.0 V
Nominal power <sup>(3)</sup>	14.08 kW	17.60 kW
Operating voltage	237.6~321.2 V	297~401.5 V
Max. charging / discharging current: continuous	50 A	

Parameters	SBH200	SBH250
Depth of discharge	Max. 100%DOD (settable)	
Short circuit current <sup>(4)</sup>	3900 A	
Display	SOC indicator, Status indicator	
Communication interface	CAN	
<b>Protection</b>		
Over/under voltage protection	Yes	
Over current protection	Yes	
Over/under temperature protection	Yes	
DC breaker	Yes	
<b>General Data</b>		
Dimensions (W*H*D)	675 * 900* 350 mm	675 * 1060 * 350 mm
Weight	V11: 196 kg, V12: 200 kg	V11: 241 kg, V12: 246 kg
Installation location	Indoor / Outdoor	
Mounting method	Floor stand	
Operating ambient temperature range	• - • -	Charge V11: 0 to 50°C V12: -20°C to 50°C Discharge: -20°C to 50°C
Degree of protection	IP55	
Allowable relative humidity range	5% to 95% no condensing	
Max. operating altitude	Max. 2000 m	
Cooling method	Natural convection	
Warranty <sup>(2)</sup>	10 Years	

Note(1) : Test conditions: 25°C, 100% depth of discharge (DOD), 0.2C charge discharge.

Note(2) : Refer to battery warranty letter for conditional application.

Note(3) : For Australia. Nominal charge / discharge current and power derating will occur related to Temperature and SOC.

Note(4) : For Australia.

**Table 12-3** Technical parameters of high voltage LFP battery(SBH300 / SBH350 / SBH400).

Parameters	SBH300	SBH350	SBH400
<b>Technical properties</b>	6 modules	7 modules	8 modules
<b>System Data</b>			
Battery Type	LiFePO4 Prismatic Cell		
Battery Module	5.0 kWh, V11: 45 kg, V12: 46 kg		
Energy (usable) <sup>(1)</sup>	30.0 kWh	35.0 kWh	40.0 kWh
Nominal voltage	422.4 V	492.8 V	563.2 V
Operating voltage	356.4 V~481.8 V	415.8 V~562.1 V	475.2 V~642.4 V
Nominal power <sup>(3)</sup>	21.12 kW	24.64 kW	28.16 kW
Max. charging / discharging current: continuous	50 A		
Depth of Discharge	Max. 100% DOD(settable)		
Short circuit current <sup>(4)</sup>	3900A		
Display	SOC indicator, Status indicator		
Communication interface	CAN		
<b>Protection</b>			
Over / under voltage protection	Yes		
Over current protection	Yes		

Parameters	SBH300	SBH350	SBH400
Over / under temperature protection		Yes	
DC breaker		Yes	
<b>General Data</b>			
Dimensions (W*H*D)	675*1220*350 mm	675*1380*350 mm	675*1540*350 mm
Weight	V11: 286 kg, V12: 292 kg	V11: 331 kg, V12: 338 kg	V11: 376 kg, V12: 384 kg
Installation location	Indoor / Outdoor		
Mounting method	Floor stand		
Operating temperature	• - - •	Charge V11: 0 to 50 V12: -20°C to 50°C Discharge: -20°C to 50°C	
Degree of protection	IP55		
Allowable relative humidity range	5% to 95% no condensing		
Max. operating altitude	Max. 2000 m		
Cooling method	Natural convection		
Warranty <sup>(2)</sup>	10 Years		

Note(1) : Test conditions: 25°C, 100% depth of discharge (DOD), 0.2C charge discharge.

Note(2) : Refer to battery warranty letter for conditional application.

Note(3) : For Australia. Nominal charge / discharge current and power derating will occur related to Temperature and SOC.

Note(4) : For Australia.

## 12.2 FAQs

### 12.2.1 Battery Not Charging

1. Please wait 5~10 minutes for data refresh of iSolarCloud App.
2. If the problem persists, try charging the battery by enabling force mode. If the battery can be charged now, please contact the hybrid inverter installer or manufacturer.
3. Check if the current battery SOC is the same as the set SOC upper limit of the hybrid inverter. Once the battery SOC reaches or goes beyond the SOC upper limit, the battery cannot be charged (please set the value to 50~100 as needed).
4. If the problem is still not resolved, please check the system for any faults and take countermeasures according to the fault code.
5. If the problem is still not resolved, check whether the ambient temperature is near or below 0°C. Switch off the battery in the event of the temperature falling below 0°C, and restart and charge it when the temperature rises up to over 5°C.
6. If the problem persists, check whether there is a heat source near the battery and whether the ambient temperature goes higher than 55°C. Switch off the battery in the event of the temperature exceeding 55°C, and restart and charge it when the temperature falls below 40°C.
7. Contact the installer or manufacturer if the problem can still not be resolved. Switch off the battery immediately once the SOC drops below 3%.

### 12.2.2 Battery Not Discharging

1. Please wait 5-10 minutes for data refresh of iSolarCloud App.
2. If the problem persists, try discharging the battery by enabling force mode. If the battery can discharge now, please contact the hybrid inverter installer or manufacturer.
3. Check if the current battery SOC is the same as the set SOC lower limit of the hybrid inverter. Once the battery SOC reaches or falls below the SOC lower limit, the battery will not discharge (please set the value to 5-50 as needed).
4. If the problem is still not resolved, please check the system for any faults and take countermeasures according to the fault code.
5. Check whether there is a heat source near the battery and whether the ambient temperature goes higher than 55°C. Switch off the battery in the case of the temperature exceeding 55°C, and restart and discharge it when the temperature falls below 40°C.
6. Contact the installer or manufacturer if the problem can still not be resolved. Switch off the battery immediately once the SOC drops below 3%.

### 12.2.3 SOC Jump

1. Occasional occurrence of SOC jump is considered to be a normal phenomenon, which does not affect the normal operation of the system.
2. In case the SOC jump issue occurs frequently, please contact the installer or manufacturer.

### 12.2.4 Battery Upgrade

1. Please contact the installer or manufacturer for iSolarCloud upgrade, if needed.
2. If the iSolarCloud is updated, please upgrade the software of the hybrid inverter, the communication module, and the battery at the same time. Otherwise, there may be problems arising from the mismatch of software versions.
3. Please contact the installer or manufacturer immediately in case of anything abnormal during or after the upgrade.

## 12.3 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

The software security update period for this product aligns with the warranty period. During the warranty, security patches or updates will be provided if any vulnerabilities or compatibility issues are identified.

### Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

### Conditions

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

### Exclusion of Liability

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.

- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.



Product data such as product dimensions are subject to change without prior notice. The latest documentation from SUNGROW should take precedence in case of any deviation.

## 12.4 Contact Information

In case of questions about this product, please contact us. We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Fault code/name
- Brief description of the problem

For detailed contact information, please visit: <https://en.SUNGROWpower.com/contactUS>

**SUNGROW**

Sungrow Power Supply Co., Ltd.

[www.sungrowpower.com](http://www.sungrowpower.com)