

# **User Manual**

# Home Energy Manager

iHomeManager



# **All Rights Reserved**

### **All Rights Reserved**

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

#### **Trademarks**

**SUNGROW** and other SUNGROW trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

#### **Software Licenses**

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

# **Contents**

All Rights Reserved	
1 About This Manual	1
2 Safety Instructions	3
2.1 Packaging, Transport & Storage	4
2.2 Installation Safety	5
2.3 Electrical Connection Safety	6
2.4 Operation Safety	6
2.5 Maintenance Safety	7
2.6 Disposal Safety	7
3 Product Overview	9
3.1 About iHomeManager	9
3.2 Application Scenarios	10
3.3 External Design	15
4 Unpacking and Storage	17
4.1 Scope of Delivery	17
4.2 Unpacking and Inspection	18
4.3 Nameplate	18
4.4 Storage Requirements	19
5 Mechanical Mounting	21
5.1 Installation Requirements	21
5.2 Installation Tools	21
5.3 Installation Methods	22
5.3.1 Mounted on a Wall	22
5.3.2 Mounted on a Guide Rail	25
5.4 Antenna Installation	26
6 Electrical Connection	28
6.1 Wiring Notice	28
6.2 Terminal Description	28
6.3 Cable Requirements	31
6.4 Power Supply and CT Connection	32
6.5 Inverter Connection via RS485	34
6.6 (Optional) CT Connection for Third-Party Inverter	37
6.7 Heat Pump Connection via DO	37
6.8 Router Connection	39

	6.9 DI Connection	40
7	Commissioning	42
	7.1 Inspection Before Powering on	42
	7.2 Power-on Process	43
8	iHomeManager Configuration with iSolarCloud	44
	8.1 About iSolarCloud App	44
	8.2 Preparation	44
	8.2.1 Install iSolarCloud	44
	8.2.2 Local Access	45
	8.3 iSolarCloud App Overview	47
	8.4 Quick Setting	48
	8.4.1 Network Configuration	49
	8.4.2 Device Management	54
	8.4.3 Parameter Settings	57
	8.4.4 System Self-test	58
	8.4.5 Create Plant	59
	8.4.6 View Plant Information	61
	8.4.7 View Device Information	61
	8.5 EV Charger Settings (Optional)	61
	8.5.1 Eco Charging	63
	8.5.2 Fast Charging	64
	8.5.3 Scheduled Charging	65
	8.5.4 Customized Charging	66
	8.6 Energy Management by iHomeManager	68
	8.6.1 Self-Consumption	68
	8.6.1.1 Demand Control	
	8.6.1.2 Custom Month Span	
	8.6.2 Time Plan	
	8.6.3 Compulsory Mode	
	8.6.4 AI Mode	
	8.6.4.1 Maximize Revenue	
	8.6.4.2 Maximize Clean Energy Usage	
	8.6.4.3 View Energy Analysis Curve Results	
	8.7 Power Control	
	8.7.1 DI Power Regulation	
	8.7.1.1 Ripple Control	
	8.7.1.2 Control via EnWG 14a	
	8.7.1.3 Emergency Stop Function	
	8.7.2 Grid-connection Power Regulation	
	8.8 Intelligent Load	86

	8.8.1 Scheduled Mode (Heat Pump Control)	87
	8.8.2 Instant Mode (Heat Pump Control)	88
	8.8.3 ECO Mode (Heat Pump Control)	89
	8.8.4 Intelligent Load Consumption Priority	90
	8.9 Device Settings	91
	8.9.1 iHomeManager Settings	91
	8.9.2 Inverter Grid-connection Settings	94
	8.10 Device List	95
	8.10.1 Add Device	96
	8.10.2 Delete Device	98
	8.11 Other Functions	99
	8.11.1 Firmware Update	99
	8.11.2 Download Logs	99
	8.11.3 Network Configuration	101
	8.11.4 Server Settings	101
	8.11.5 Certificate Management	101
	8.11.6 User Management	103
	8.11.6.1 Change Account Password	103
	8.11.6.2 Logout	104
9 1	Froubleshooting	105
	9.1 Fault List	105
	9.2 Fault Description	105
	9.3 FAQs	106
10	Maintenance	108
	10.1 Maintenance Notices	108
	10.2 Routine Maintenance	109
11	Appendix	111
	11.1 Technical Data	
	11.2 Quality Assurance	
	11.3 Contact Information	113

# 1 About This Manual

The manual mainly contains the product information, as well as guidelines for installation, operation, and maintenance. The manual does not include complete information about the photovoltaic (PV) system. Readers can get additional information at <a href="https://www.sungrowpower.com">www.sungrowpower.com</a> or on the webpage of the respective component manufacturer.

#### Validity

This manual is valid for the following models:

iHomeManager

#### **Type Description**

Туре	Product Aliases	Communication Manner
iHomeManager	Home Energy Manager, device, product	Supports WLAN, ETH, RS485, DI, and DO

### **Target Group**

This manual is intended for professional technicians who are responsible for installation, operation, and maintenance of inverters, and users who need to check inverter parameters.

The product must only be installed by professional technicians. The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- · Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

## **How to Use This Manual**

Please read this manual carefully before using the product and keep it properly at a place for easy access.

1 About This Manual User Manual

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from **support.sungrowpower.com** or sales channels.

#### **Security Declaration**

For details on the product's network security vulnerability response process and vulnerability disclosure, please visit the following website: https://en.sungrowpower.com/security-vulnerability-management.

#### **Symbols**

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance in an efficient way.

Please carefully understand the meaning of these warning symbols to better use the manual.

### **A** DANGER

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

## **M** WARNING

Indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

## **A** CAUTION

Indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

#### NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.



"NOTE" indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

# 2 Safety Instructions

When installing, commissioning, operating, and maintaining the product, strictly observe the labels on the product and the safety requirements in the manual. Incorrect operation or work may cause:

- · Injury or death to the operator or a third party.
- · Damage to the product and other properties.

### **M** WARNING

- Do not perform any operation on the product (including but not limited
  to, handling, installing, powering on, or maintaining the product, performing
  electrical connection, and working at heights) in harsh weather conditions,
  such as thunder and lightning, rain, snow, and Level 6 or stronger winds.
   SUNGROW shall not be held liable for any damage to the device due to force
  majeure, such as earthquakes, floods, volcanic eruptions, mudslides, lightning
  strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other
  extreme weathers.
- In case of fire, evacuate from the building or product area and call the fire alarm. Re-entry into the burning area is strictly prohibited under any circumstances.

#### **NOTICE**

- Tighten the screws with the specified torque using tools when fastening the product and terminals. Otherwise, the product may be damaged. And the damage caused is not covered by the warranty.
- Learn how to use tools correctly before using them to avoid hurting people or damaging the device.
- Maintain the device with sufficient knowledge of this manual and use proper tools.

2 Safety Instructions User Manual

 The safety instructions in this manual are only supplements and cannot cover all the precautions that should be followed. Perform operations considering actual onsite conditions.

- SUNGROW shall not be held liable for any damage caused by violation of general safety operation requirements, general safety standards, or any safety instruction in this manual.
- When installing, operating, and maintaining the product, comply with local laws and regulations. The safety precautions in this manual are only supplements to local laws and regulations.
- During the product transport, installation, wiring, maintenance, etc., the
  materials and tools prepared by users must meet the requirements of
  applicable local laws and regulations, safety standards, and other specifications.
  SUNGROW shall not be held liable for any damage to the product caused
  by the adoption of materials and tools that fail to meet the above-mentioned
  requirements.
- Operations on the product, including but not limited to, handling, installing, wiring, powering on, maintenance, and use of the product, must not be performed by unqualified personnel. SUNGROW shall not be held liable for any damage to the product resulting from operations done by unqualified personnel.
- Where the transport of the product is arranged by users, SUNGROW shall not be held liable for any damage to the product that is caused by users themselves or the third-party transport service providers designated by the users.
- SUNGROW shall not be held liable for any damage to the product caused by the negligence, intent, fault, improper operation, and other behaviors of users or third-party organizations.
- SUNGROW shall not be held liable for any damage to the product arising from reasons unrelated to SUNGROW.

# 2.1 Packaging, Transport & Storage

## **A** CAUTION

Improper handling may lead to personal injuries!

- Operators must wear proper personal protective equipment when handling the product bare-handed.
- When handling the product, get prepared for carrying its weight and keep the balance to prevent it from tilting or falling.



User Manual 2 Safety Instructions

#### NOTICE

Improper transport may damage the product!

 Choose appropriate tools for transport based on the size and weight of the product.

- Place the product horizontally during transport. Secure it using appropriate packaging materials and protect it against impacts.
- · Avoid collision or strong shock during transport.

#### NOTICE

Improper storage may damage the product!

- · The product must not be stored unpackaged.
- Do not store the product outdoors or in direct sunlight.

#### NOTICE

For a product stored for over six months, take strict protective measures and conduct necessary inspections. If necessary, ask qualified personnel to perform a power-on test on the product before installation.

# 2.2 Installation Safety

## **A** DANGER

Improper installation may cause fire!

- 1. Make sure there is no electrical connection to the product before installation.
- 2. During installation, protect the product against the ingress of foreign objects.

## **A** WARNING

Do not modify the product! Unauthorized modifications may lead to severe safety risks, deterioration in product performance, or even personal injury.

## **A** CAUTION

Be sure to avoid the water pipes and electrical wires in the wall before drilling.

2 Safety Instructions User Manual

# 2.3 Electrical Connection Safety

## **A** DANGER

Before electrical connections, please make sure that the product is not damaged. Otherwise, it may cause danger!

Before electrical connections, please make sure that the product switch and all switches connected to the product are set to "OFF", otherwise electric shock may occur!

## **A** DANGER

- Be sure to use special insulation tools during cable connections.
- Note and observe the warning labels on the product, and perform operations strictly following the safety instructions.
- Respect all safety precautions listed in this manual and other pertinent documents.

#### **▲** WARNING

Damage to the product caused by incorrect wiring is not covered by the warranty.

- Electrical connection must be performed by professionals.
- Check the power cord and confirm that the identifier is correct before connecting it.
- All cables used shall comply with the requirements of local laws and regulations, and must be firmly attached, properly insulated, and adequately dimensioned.

#### NOTICE

Comply with the regulations related to the local grid during wiring.

# 2.4 Operation Safety

#### **A** DANGER

- · When the product is running, do not touch its enclosure.
- When the product is running, do not touch any wiring terminal of the product.
   Otherwise, electric shock may occur.
- When the product is running, do not disassemble any parts of the product.
   Otherwise, electric shock may occur.

User Manual 2 Safety Instructions

## **A** CAUTION

Professional equipment and keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

## **A** CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

# 2.5 Maintenance Safety

## **A** DANGER

Unauthorized modification or use of parts not sold or recommended by SUNGROW may result in fires and electric shocks.

#### **A** CAUTION

To prevent misuse or accidents caused by unrelated personnel, post prominent warning signs or demarcate safety warning areas around the product to prevent accidents caused by misoperation.

#### NOTICE

- To avoid the risk of electric shock, do not perform any other maintenance operations beyond this manual. If necessary, contact SUNGROW for maintenance. Otherwise, the losses caused are not covered by the warranty.
- If a fault occurs, only restart the device after the fault is cleared. Otherwise, the fault may expand, and the device may be damaged.

# 2.6 Disposal Safety

#### **A** CAUTION

The product to be disposed of may contain hazardous substances or carry other hidden dangers!

- All work related to product disposal must be done in compliance with the applicable local, national, and international laws, regulations, and standards.
- During the process of product transport, storage, and disposal, take appropriate measures to avoid the leakage of or contamination by hazardous substances and protect the soil, water, and air quality.
- The operators must take necessary training, wear personal protective equipment, and follow the safe operating procedure. Ask a specialized professional team to dispose of the product if necessary.

2 Safety Instructions User Manual

## **NOTICE**

Take proper measures, such as data erasure, destruction, and encryption, to ensure data security and prevent leaks or abuse of sensitive data before product disposal.



# 3 Product Overview

# 3.1 About iHomeManager

The iHomeManager is a smart home energy management device capable of forecasting the PV plant's energy production and analyzing the load profile. It helps users to optimize energy usage based on local electricity prices, thus maximizing clean energy utilization and lowering electricity expenses. Additionally, it can store energy automatically in advance of severe weather and serve as a backup power source for users.

The iHomeManager can also be accessed to cloud. It can upload the collected data to the iSolarCloud so that users can easily view and monitor the operating status of devices attached to it in real time. Besides, it allows users to set the parameters for the attached devices and offers other functions such as log export, and power control.

## **Key Features**

- Easy Installation
  - Allows wired or wireless network connection for easier communication;
  - Equipped with smart metering capabilities, requiring no additional power supply or RS485 communication wiring for an external energy meter.



The iHomeManager is not an energy meter for power consumption in the sense of the EU directive 2004/22/EG (MID). The iHomeManager may not be used for billing purposes. The data collected by the iHomeManager relating to the power generated by your PV system may deviate from the data of the main energy meter, which is used for billing purposes.

- Easy networking
  - Supports RS485, Ethernet, and WLAN communications;
  - Supports networking with the charger, battery, and multiple inverters.
- Easy O&M
  - Intelligent Al-based scheduling helps to increase clean energy usage and lower electricity cost;
  - Intelligent prediction enables the battery to charge in advance automatically ahead of severe weather, thus eliminating the concerns of power outages;
  - Energy management is made simpler with real-time yield tracking and at-a-glance consumption analysis.

3 Product Overview User Manual


# 3.2 Application Scenarios

#### **NOTICE**

• Establishing a network connection using both the RS485 communication and the WiNet communication module is not supported.

- By default, the iHomeManagercommunicates with the WiNet-S2 or the EV charger via Modbus TCP Port 516, with the port secured using SSL encryption.
- All communication devices need to be connected to the same home router.
   Only one iHomeManager is supported to be connected under a home router. To ensure stable communication between devices, all communication devices and the home router should be installed on the same layer. For devices not on the same layer, an Ethernet cable should be added for connection.

### Residential PV-ESS-EV charging system (WiNet)

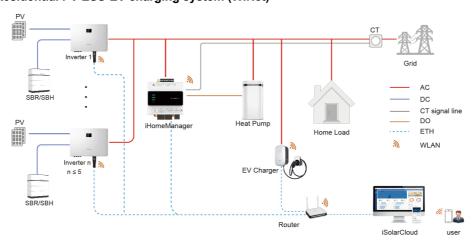


In this scenario, the iHomeManager communicates with the inverter via WiNet, thereby simplifying the wiring process.

The compatible devices are listed below.

Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	AC22E-01
SH3.0~6.0RS	SBR SBS	

User Manual 3 Product Overview

## Residential PV-ESS-EV charging system (RS485)

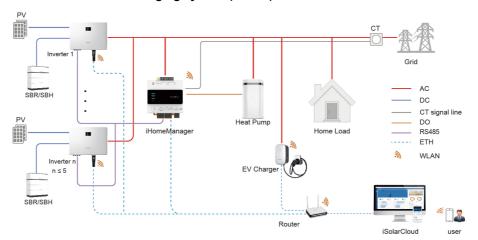


In this scenario, the iHomeManager communicates with the inverters and the inverters communicate with each other over RS485. The maximum distance for RS485 wiring is 1000m (baud rate: 9600bps). The inverter can only be connected via RS485 if the feed-in power limitation function is required.

The compatible devices are listed below.

Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	AC22E-01
SH3.0~6.0RS	SBR SBS	

3 Product Overview User Manual


## Retrofit system with third-party inverter (WiNet)

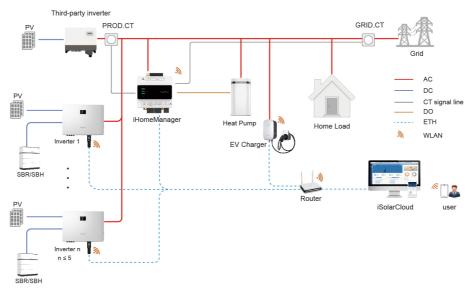

The compatible devices are listed below.

Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	AC22E-01
SH3.0~6.0RS	SBR SBS	

## Retrofit system with third-party inverter (RS485)

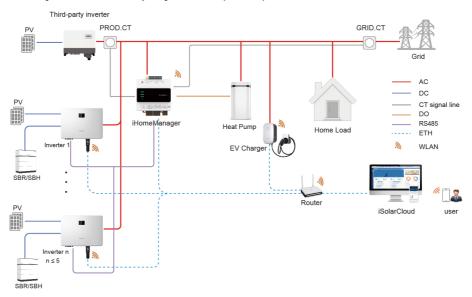


User Manual 3 Product Overview

The compatible devices are listed below.

Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	AC22E-01
SH3.0~6.0RS	SBR SBS	

# Retrofit system with SUNGROW inverter (WiNet)

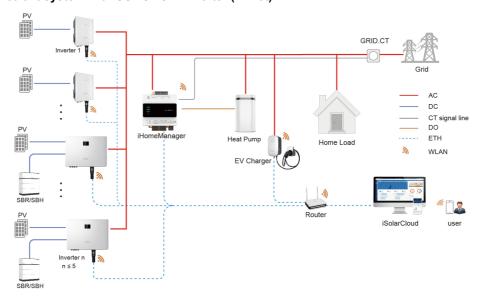


The compatible devices are listed below.

Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	
SG5.0-20RT SG5.0-20RT-P2	I	AC22E-01
SH3.0~6.0RS	SBR SBS	-

3 Product Overview User Manual

# Retrofit system with SUNGROW inverter (RS485)

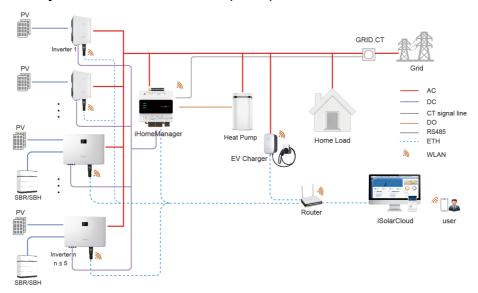

The compatible devices are listed below.


Inverter	Battery RACK	Charger
SH5.0~10RT-20 SH5.0~10RT SH5-25T	SBR SBH	
SG5.0-20RT SG5.0-20RT-P2	1	AC22E-01
SH3.0~6.0RS	SBR SBS	

See the user manual for the inverter for its compatible battery RACKs.

User Manual 3 Product Overview

# 3.3 External Design

# iHomeManager External Design

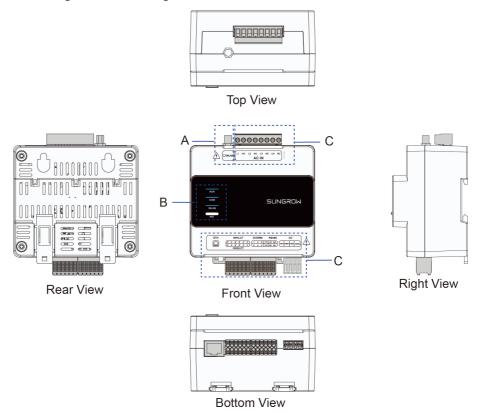

No.	Definition	Description
Α	WLAN antenna connector	-
В	Indicators	Indicate the current status of the iHomeManager.
С	Terminals for connection	See Table 6-1 Terminal Description for details.

## **Indicators**

Indicator	Color	Status	Description
RUN	Blue	Off	Not connected to power.
KUN	N Blue	Blinking	Operating normally.
COM Blue	Dlue	Off	No device is online.
	Blue	Steady on	All devices are online.
		-	


3 Product Overview User Manual

Indicator	Color	Status	Description
		Blinking	Some devices are online.
WLAN		Off	Not connected to cloud server.
	Blue	Steady on	Connected to cloud server.
		Blinking	Data interaction in progress.

# **RST Key**

Operation	Description
Short press 3 times	Turn on the AP hotspot.
Press and hold for 3–10s	Restart the device.
Press and hold for over 30s	Reset to factory settings.

## **Product Dimensions**

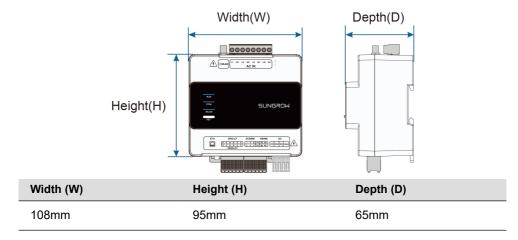


# Signs on the Product

Sign	Description
	Danger to life due to hazardous high voltages! Installation and operation must only be performed by qualified technical persons.

# 4 Unpacking and Storage

# 4.1 Scope of Delivery

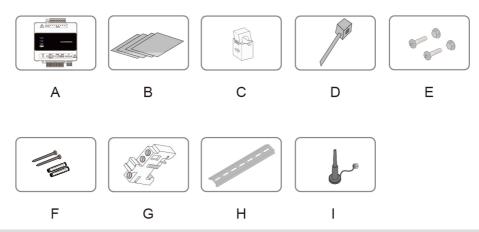

No.	Item	Description
Α	Home Energy Manager	iHomeManager.
В	Documents	Quick Installation Guide, factory inspection report, packing list, warranty card, and quality certificate.
С	External CT	100A * 3 pcs (standard equipment).
D	Nylon cable tie	6 pcs; used to secure the cables.
E	Fastener assembly	M4X16, 4 sets in total; used to mount the device on a metal wall.
F	Expansion bolt	ST4.8X19, 4 sets in total; used to mount the device on a concrete wall.
G	End bracket	E/UK-1201442, 2 sets; mounted on the guide rail at the two sides ofiHomeManager.
Н	Guide rail	148mm in length.
ı	WLAN antenna	External suction base antenna.

4 Unpacking and Storage User Manual

# 4.2 Unpacking and Inspection

The product has been thoroughly inspected and securely packaged before it leaves the factory. However, as it may still get damaged during transport, please carry out a thorough inspection before signing the delivery receipt.

- Check the delivered items for quantity and see if the delivery matches the order placed according to the packing list.
- · Unpack and inspect the items inside for any damages.
- · Check that the model of the product delivered to you is the one you have ordered.
- Check that the safety signs, warning labels, and nameplate on the product are all legible.



In case of any damage, do not install the device. Contact your transport service provider or SUNGROW, and provide relevant photos for further assistance.

# 4.3 Nameplate

The nameplate shows the model and key technical data of the product.

iHomeManagerThe iHomeManager has a nameplate on its side, as shown below.



Table 4-1 Nameplate

Parameter	Definition
Model	Product model.
S/N	Product serial number.
AC Input	AC input requirements.
Temperature	Operating temperature range.
X	Do not dispose of this product as household waste.
(€	CE compliance mark.

User Manual 4 Unpacking and Storage

Parameter	Definition
ANATEL 02499-25-11568	ANATEL mark of conformity.
<u> </u>	Please read the user manual.
	Equipment protected throughout by reinforced insulation.

Product over-voltage rating OVERVOLTAGE CATEGORY II.

Product Pollution Class POLLUTION DEGREE 2.

# 4.4 Storage Requirements

After receiving and inspecting the product, if you do not install or use it immediately, please store it properly.

### **A** CAUTION

Losses resulting from storage not in accordance with the instructions specified in this manual will not be covered by the warranty.

- To put the packaged products in stacks, ensure the maximum stack does not exceed 8 levels and proper protective measures are taken.
- Put the product in its original packaging and store it indoors in a ventilated, dry, and clean environment.
- The support structure on which the product is stored should be solid enough to bear the
  weight of the product and its packaging.
- Ensure the product is stored in a well-ventilated and moisture-proof place, without accumulation of water.
- The ambient temperature in the place where the product is stored should be between -40°C and +70°C, and the relative humidity should be between 0 and 95%, non-condensing.
- Avoid damages to the product caused by severe environmental conditions such as sudden temperature changes or collisions.
- Carry out regular inspections, generally at least once a week. Inspect the packaging
  for damages, and make sure there is no damage caused by pests and animals. Repackage the product immediately if its packaging gets damaged.

4 Unpacking and Storage User Manual



A thorough inspection should be performed on the product before installing it after a long storage, to make sure it is in a good state. If necessary, ask qualified personnel to test it before installation.

# 5 Mechanical Mounting

### **A** WARNING

Respect all local standards and requirements during mechanical installation.

# 5.1 Installation Requirements

An ideal installation position is critical to the safe operation, longer service life, and sound performance of the iHomeManager.

Take the following requirements into account when selecting the installation position:

- · The device must only be installed indoors.
- Ambient temperature: -30°C to +60°C.
- Allowable humidity: ≤ 95%, non-condensing.
- The device should be protected against moisture, dampness, and corrosives.
- Overly high humidity may cause damage to the internal components of the iHomeManager.
- Losses resulting from installation not in accordance with the instructions specified in this manual will not be covered by the warranty.

## 5.2 Installation Tools

Installation tools to be used include but are not limited to those listed below. If necessary, use other auxiliary tools at the site.

5 Mechanical Mounting User Manual



0

Installation tools are not included in the scope of delivery and should be prepared by the installer.

#### 5.3 Installation Methods

The iHomeManager must be installed in a power distribution box that has an SPD inside. It can be mounted on a wall or a guide rail, based on the user's needs.



Be sure to avoid the water pipes and electricity wires in the wall before drilling.

#### 5.3.1 Mounted on a Wall

#### Prerequisite

The iHomeManager is mounted on a wall using the mounting holes.

The wall should be flat and solid.

A

The operators should wear safety goggles and dust masks, to prevent dust from getting into their eyes or mouths.

The iHomeManager can be mounted on a concrete or metal wall, based on the actual situation at the site.

User Manual 5 Mechanical Mounting


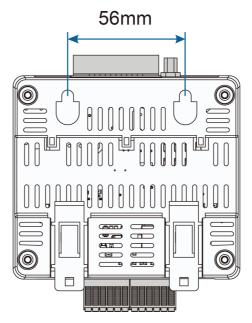


Figure 5-1 Mounting Holes


- **Step 1** Select an appropriate installation position.
- **Step 2** Measure and determine the positions of the two mounting holes using a tape measure. The distance between them is 56mm. Then, use a marker to mark the hole positions for drilling on the wall.

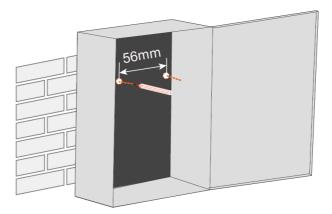


Step 3 Drill holes at the marked positions using a hammer drill.

- · Hole diameter on a metal wall: 5mm;
- · Hole diameter on a concrete wall: 6mm;

5 Mechanical Mounting User Manual

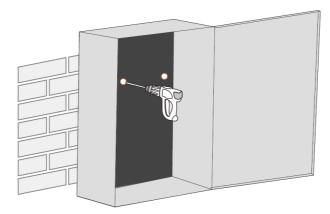


**Step 4** Fit all the expansion sleeves into the holes using a rubber mallet.

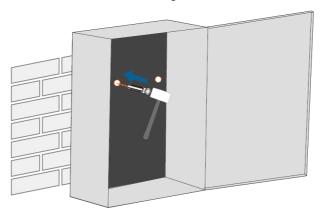

Skip this step if the device is mounted on a metal wall.

**Step 5** Fix the expansion bolts or fasteners into the wall, approximately 5mm higher than the wall surface. Then, hang the iHomeManager to the bolts on the concrete or metal wall by the mounting holes on its back.

User Manual 5 Mechanical Mounting

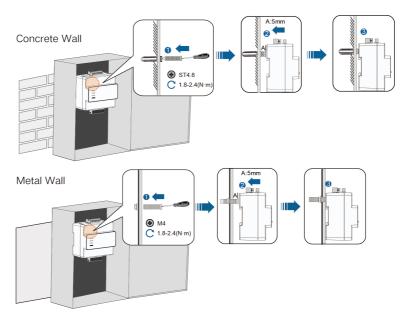

**Step 6** Gently shake the iHomeManager to make sure the installation is secure.


--End

#### 5.3.2 Mounted on a Guide Rail

#### **Prerequisite**


The iHomeManager has clips on the back, which are used to attach it to the guide rail.

- Step 1 Mount the guide rail in a proper position and fix it properly.
- **Step 2** Insert the tip of a Phillips screwdriver into the opening on the bottom clips of iHomeManager, then slightly drag downward to pull out the clips.

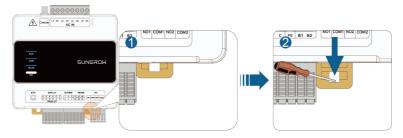


Step 3 Slightly tip the iHomeManager to have its clips latch onto the guide rail.


5 Mechanical Mounting User Manual

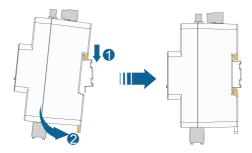

Step 4 Push the bottom clips upward. Make sure the iHomeManager firmly fits on the guide rail.

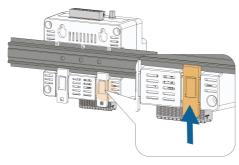

 **Step 5** Install the end brackets on the guide rail at both sides of theiHomeManager to restrict it in a fixed position.



**Step 6** Gently shake the iHomeManager to make sure the installation is secure.

--End

## 5.4 Antenna Installation

If the iHomeManager is installed in a metal enclosure or on a metal wall, put the antenna suction base outside of the enclosure or wall, to avoid impacts on signal transmission.



An external antenna is used by default. If no external antenna is connected, change the antenna settings on the iSolarCloud App. For details, see 8.9.1 iHomeManager Settings in **Select Antenna**.


#### Requirements

- You have fixed the suction base in a position outside the metal enclosure or the metal wall.
- · You have reserved an opening for the antenna (hole diameter: 20mm).

User Manual 5 Mechanical Mounting

**Step 1** Lead the nut end of the antenna cable to the iHomeManager.

**Step 2** Rotate the nut clockwise to tighten it onto the WLAN antenna connector on the iHomeManager.

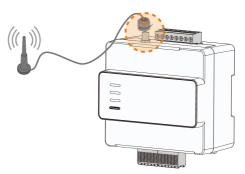

--End

# **6 Electrical Connection**

# **6.1 Wiring Notice**

#### **A** WARNING

Risk of product damage or personal injury due to improper wiring!

- · A product can be wired only if it is intact without any signs of damage.
- The specification of cables used should meet the relevant requirements, and the cables should be well-insulated and firmly connected.

## **A** CAUTION

Risk of device damage due to improper wiring!

- The specification of cables used should meet the relevant requirements, and the cables should be well-insulated and firmly connected.
- During electrical connection, do not forcibly pull any wires or cables, as this
  may diminish their insulation performance.
- Ensure that all cables and wires have sufficient space for any bends.
- Adopt necessary auxiliary measures to reduce the stress applied to cables and wires.
- Keep a sufficient distance between the cables and the heat-generating components, to prevent the cable insulation layer from aging or getting damaged due to high temperature.

## **A** CAUTION

Damages resulting from wiring not in accordance with the instructions specified in this manual will not be covered by the warranty.

# **6.2 Terminal Description**

#### **External Interface**

External wiring areas are set at the top and bottom of of the iHomeManager.

User Manual 6 Electrical Connection

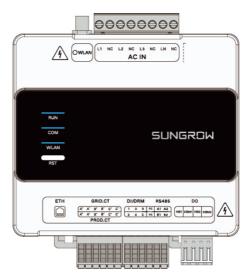


Table 6-1 Terminal Description

Name	Signal	Function
	L1	AC power supply L1
AC IN	L2	AC power supply L2
AC IN	L3	AC power supply L3
	LN	AC power supply N
ETH	I	Ethernet port. It can be connected to a router for data communication.
	A+, A-	Used for phase L1 current detection on the grid-connection side.
GRID.CT	B+, B-	Used for phase L2 current detection on the grid-connection side.
	C+, C-	Used for phase L3 current detection on the grid-connection side.
PROD.CT	A+, A-	Used for phase L1 current detection of the third-party inverter.

6 Electrical Connection User Manual

Name	Signal	Function
	B+, B-	Used for phase L2 current detection of the third-party inverter.
	C+, C-	Used for phase L3 current detection of the third-party inverter.
	1, 2, 3, 4	Used for DI power regulation.
DI/DRM	R, C	Used for emergency stop function (via short-circuiting connection).
	A1, B1, PE	RS485 communication
RS485	A2, B2, PE	port; used to connected to the inverter.
DO	NO1, COM1	Used for heat pump control.
	NO2, COM2	Reserved.

# Service ports

This section describes the functions and default status of the product's service ports.

Table 6-2 Port Description

Port	Description	
502	Used to connect SUNGROW devices or third-party management systems to iHomeManager via Modbus Transmission Control Protocol (Modbus TCP). By default, the port is enabled and SSL-encrypted by default.	
503, 504	Used to connect SUNGROW devices or third-party management systems to iHomeManager via Modbus TCP. By default, ports 503 and 504 are disabled and are not SSL-encrypted.  To use this port, tap More > iHomeManager settings > Forwrading channel settings to enable it.	

User Manual 6 Electrical Connection

Port	Description
516	Used to connect SUNGROW devices or third-party management systems to iHomeManager via Modbus Transmission Control Protocol (Modbus TCP). By default, the port is enabled and SSL-encrypted by default.
22	Used to connect to the server via Secure File Transfer Protocol (SFTP) for transferring data such as log files.
21	Used to connect to third-party devices via File Transfer Protocol (FTP). This port is disabled by default and is enabled only when required by the connected thirdparty device.
443	Used to connect to the local embedded Web or local App via Hypertext Transfer Protocol Secure (HTTPS).
67	Used to obtain IP addresses via Dynamic Host Configuration Protocol (DHCP).
5353	Used for fast network configuration via Multicast DNS (mDNS).
49152~65535	Used for the HTTP server to dynamically apply for a port for internal message communication.

# 6.3 Cable Requirements

Cable type	Specifications	Description
RS485 communication cable	Recommended cross- sectional area: 0.75mm²	<ul> <li>Communication distance &lt; 1000m</li> <li>Outdoor-type anti-UV twisted-pair cable with a shielding layer</li> </ul>
RJ45 Ethernet cable	Network cable of Cat5e or higher	Communication distance < 100m

6 Electrical Connection User Manual

Cable type	Specifications	Description
DI signal cable	Recommended cross- sectional area: 0.75mm²	Communication distance < 10m
DO signal cable	Recommended cross- sectional area: 0.75– 1.5mm²	Communication distance < 10m
AC power supply cable	Recommended cross- sectional area: 2.5mm²	Outdoor-type copper-core cable

### 6.4 Power Supply and CT Connection

### Requirements


You have prepared the AC cable as required by 6.3 Cable Requirements.


### **▲** DANGER

Accidentally touching the live terminals may result in fatal electric shocks.

- · Before wiring, make sure the device is completely powered off.
- · Before wiring, make sure the wiring terminals are voltage-free.

**Step 1** Use wire strippers to strip off the protective layer of the AC cable by approximately 80mm–90mm, and the insulation layer by 12mm. It is suggested to crimp cold-pressed terminals on the cable wires. Install appropriate cord end terminals on the communication cables after removing the protective layer, and use a crimping tool to securely crimp them.

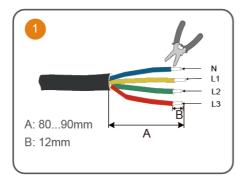

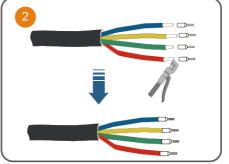


**Step 2** Connect one end of the AC cable to the iHomeManager, with its wires connected to L1, L2, L3, and LN respectively.




For a single-phase system, connect one end of the AC cable to L1 and LN on the iHomeManager.

User Manual 6 Electrical Connection

**Step 3** Connect the other end of the AC cable to the corresponding position on the household circuit breaker.

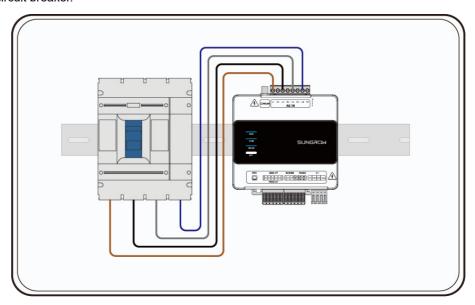

**Step 4** Connect the CT wires to the GRID.CT terminal, and clamp the CT to the AC cable with the arrow pointing in the direction of the load.

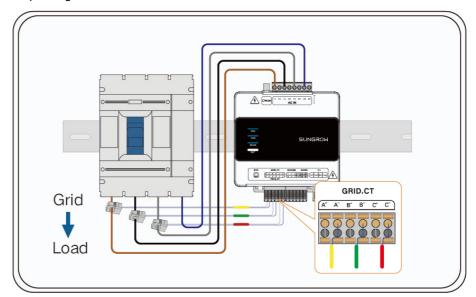

1

For a single-phase system, connect the CT wires to the phase A terminals (A+ and A-) in the GRID.CT terminal.

--End

6 Electrical Connection User Manual

### 6.5 Inverter Connection via RS485

### **Prerequisite**

The iHomeManager is connected to the inverter via RS485 connection in the scenario of Residential PV-ESS-EV Charging System (via RS485).

### Requirements

You have prepared the RS485 communication cable as required by 6.3 Cable Requirements.

### **A** DANGER

 
Accidentally touching the live terminals may result in fatal electric shocks!

- · Before wiring, make sure the device is completely powered off.
- · Before wiring, make sure the wiring terminals are voltage-free.

### **A** CAUTION


The RS485 communication cable must be a shielded twisted-pair cable and its shielding layer must be connected to the PE terminal for grounding.

- **Step 1** Lead the RS485 communication cable from the inverter to the wiring area on the iHomeManager.
- **Step 2** Use wire strippers to strip off the protective layer of the cable by approximately 15mm, and the insulation layer by 8mm–10mm.




**Step 3** Choose wiring terminals with the proper size, and crimp the terminals onto the wires of the RS485 cable. Then, connect the wires to the corresponding positions in the RS485 port of the iHomeManager.

User Manual 6 Electrical Connection

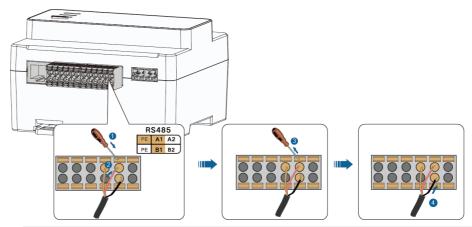


- Connect RS485A to point A and RS485B to point B.
- If a multi-core RS485 cable is used, choose European terminals with the proper size, and crimp the terminals onto the cable wires. Then, connect the wires to the corresponding positions in the RS485 port of the iHomeManager.

**Step 4** Connect the other end of the communication cable to the RS485 port on the inverter. The connection port of the inverter model shown below is taken as an example. Please refer to the actual port of the used device model.

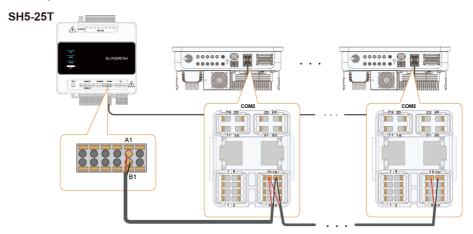


6 Electrical Connection User Manual


### SH5.0~10RT-20

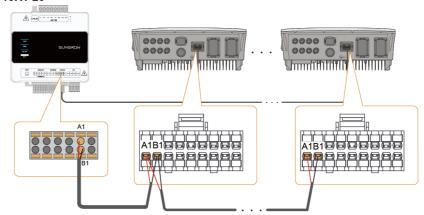

SG5.0-20RT

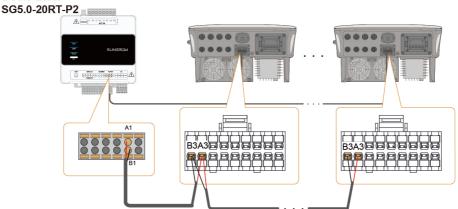

#### SH3.0~6.0RS

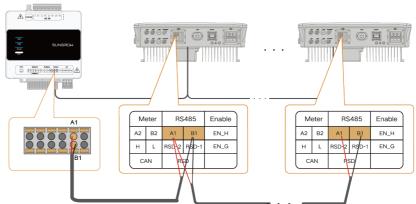

a

In a system with different models of SUNGROW inverters, the inverters can all be connected with each other through RS485 cables. Refer to the diagrams above for connection points.

### --End

User Manual 6 Electrical Connection

### 6.6 (Optional) CT Connection for Third-Party Inverter

### Prerequisite


If the third-party inverter is used at the site, add CTs at the AC output of the inverter.

### **A** DANGER

Accidentally touching the live terminals may result in fatal electric shocks.

- · Before wiring, make sure the device is completely powered off.
- · Before wiring, make sure the wiring terminals are voltage-free.

**Step 1** Connect the CT wires to the PROD.CT terminal and clamp the CT to the AC cable, with the arrow pointing in the direction of inverter.

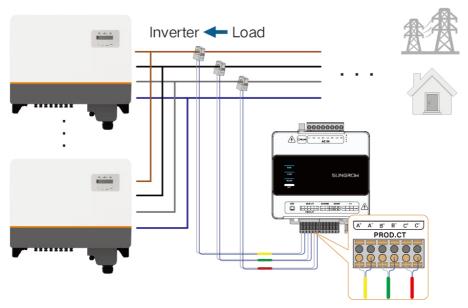

--End

### 6.7 Heat Pump Connection via DO

### **Prerequisite**

The iHomeManager controls the start and stop of the heat pump via DO signals. One heat pump can be connected.

### Requirements

You have prepared the DO signal cable as required by 6.3 Cable Requirements.

6 Electrical Connection User Manual


### **A** DANGER

Accidentally touching the live terminals may result in fatal electric shocks.

- · Before wiring, make sure the device is completely powered off.
- · Before wiring, make sure the wiring terminals are voltage-free.
  - A DC signal of max 30V/3A or an AC contactor must be installed between the inverter and the load. It is forbidden to connect the load directly to the DO port.




- The current of the DO dry contact should not be larger than 3 A.
- The DO node is not controlled once the inverter is powered off. Connect the AC contactor by the manual switch, so as to control the loads.
- Step 1 Lead the DO signal cable from the heat pump to the wiring area on the iHomeManager.
- **Step 2** Use wire strippers to strip off the protective layer of the cable by approximately 15mm, and the insulation layer by 8mm–10mm.

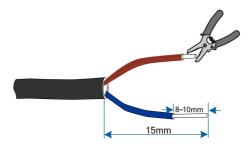

**Step 3** Connect one end of the cable to the communication port on the iHomeManager, and the other end to the communication port on the heat pump.

User Manual 6 Electrical Connection

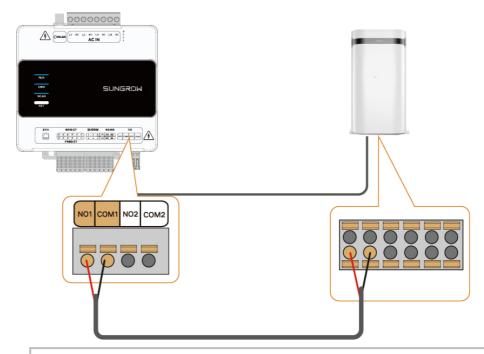

0

The heat pump and connection points shown in the above figure are for illustration only. For the connection points to be used in actual wiring, please refer to the user manual for the heat pump.

--End

### 6.8 Router Connection

### DANGER

Accidentally touching the live terminals may result in fatal electric shocks.

- · Before wiring, make sure the device is completely powered off.
- Before wiring, make sure the wiring terminals are voltage-free.



Before connection, make sure the router has connected to an external network.

#### **Network cable connection**

iHomeManager can be connected to a router with a network cable.

- 1. Prepare a network cable with an appropriate length.
- **2.** Connect the network cable to the LAN port of the router on one side, and to the ETH port of the iHomeManager on the other side.
- **3.** Complete Ethernet parameter settings. See 8.4.1 Network Configuration for details.

6 Electrical Connection User Manual

#### **WLAN** connection

iHomeManager can also be connected to a router over WLAN.

**1.** Open the iSolarCloud App, tap **Local Access** at the bottom of the login screen, and scan the QR code on the device enclosure.

- 2. Go to Identity Verification, and enter your account name and password.
- 3. On the **Home** screen, tap in the upper right corner to go to **Network Configuration**.
- **4.** Select an available WLAN, enter the correct password, and connect to the WLAN network. See 8.4.1 Network Configuration for details.

### 6.9 DI Connection

### **Prerequisite**

Users can connect an external device to the DI port on the iHomeManager for DI power regulation.


### **Prerequisites**

You have prepared the DI signal cable as per the specifications requirements in 6.3 Cable Requirements.

### **A** DANGER


Accidentally touching live terminals may result in fatal electric shocks!

- · Before wiring, make sure the device is completely powered off.
- · Before wiring, make sure the wiring terminals are voltage-free.
- **Step 1** Use wire strippers to strip off the protective layer of the DI communication cable by approximately 15 mm, and insulation layer by 8 mm–10 mm, as shown in the figure below.

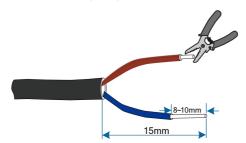


- **Step 2** Connect the external device to DI port for ripple control. The ripple control function needs to be configured on the iSolarCloud App.
  - Ripple Control: Connect the external device to points 1, 2, 3, 4, and C of the DI port for ripple control.


User Manual 6 Electrical Connection

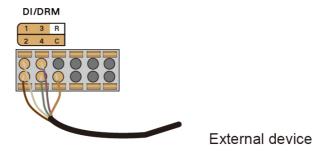

EnWG 14a: Connect the external device to points 4 and C of the DI port for EnWG 14a.

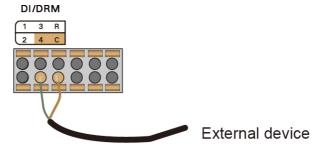


**Step 3** Connect the signal wire from the emergency stop device to the points R and C of the DI port. This is used to allow emergency stop control of the inverter.

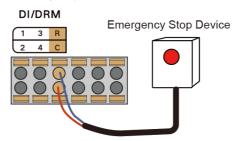

--End

### 7 Commissioning

It is recommended to complete device commissioning by following the flowchart below.

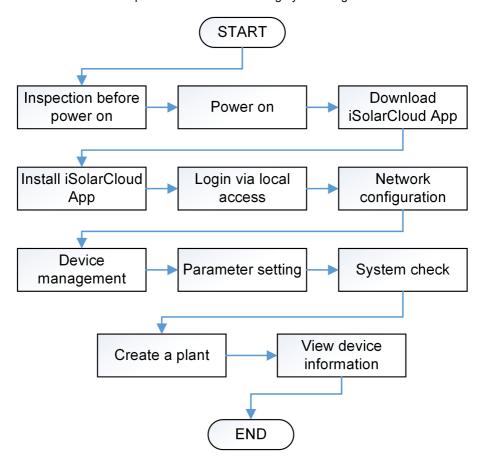

### 7.1 Inspection Before Powering on

### **A** DANGER

To power on the device, wear specialized protective equipment and use specialized insulated tools properly, so as to avoid electric shocks or short-circuits in the device.

No.	Inspection item	Result
1	The iHomeManager is installed correctly.	
2	Check that all cables are intact, well-insulated, and properly sized.	

User Manual 7 Commissioning

No.	Inspection item	Result
3	Check that all cables are properly and securely connected.	
4	The power line and signal line are laid in compliance with the requirements for strong and weak electricity wiring.	
5	The cables are organized and secured properly and neatly, with the cable ties evenly spaced, moderately tight, and oriented in the same direction.	0
6	No excess tape or ties are left on the cables.	

### 7.2 Power-on Process

No.	Steps	Result
1	Inspection before powering on.	
2	Close the battery switch.	
3	Close the inverter's DC switch.	
4	Close the switch between the inverter and the grid.	
5	Close the switch between the iHomeManager and the grid.	
6	Check the status of the indicator on the iHomeManager, by referring to Indicators.	
7	Set the operation parameters for the device on the iSolarCloud App by following the instructions in 8.4 Quick Setting.	

# 8 iHomeManager Configuration with iSolarCloud

### 8.1 About iSolarCloud App

The iSolarCloud App is a mobile application used for new energy power plant management. It is designed with functions such as plant operation data display, quick plant access, remote parameter setting, quick fault location and notification, as well as production and revenue analysis. Easy and efficient, the iSolarCloud App offers plant operation analysis service and allows intelligent end-to-end mobile O&M for users.

### 8.2 Preparation

#### 8.2.1 Install iSolarCloud

### Prerequisite

This section introduces how to download and install the iSolarCloud App.

### **Procedure**

**Step 1** Search for **iSolarCloud** in App Store, Google Play or other App stores, or scan the QR code below with a mobile phone and download the App by following the onscreen instructions.



**Step 2** Tap the downloaded installation package and follow the onscreen instructions to complete the installation. The icon of iSolarCloud will then appear on the screen.




### --End

### 8.2.2 Local Access

- **Step 1** Open the iSolarCloud App, and tap **Local Access** in the lower left corner of the login screen.
- Step 2 Scan the QR code on the enclosure of the iHomeManager.
- **Step 3** Enter the account name and password, and tap **Verification**. The default account name and password are shown in the table below:

User type	Username	Password	Permissions
General user	user	pw1111	Granted access to monitoring and general settings. For instance, Overview, Device Monitoring, and some of the History Data.
O&M user	admin	pw8888	Operations mentioned in this manual.
Developer Account	develop	Dynamic password	Login with a developer account is allowed only after authorization by an O&M user account.




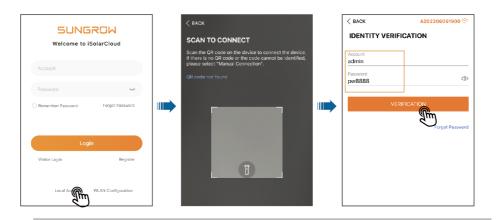

At your first login, please use the default password and change the password as soon as possible. To keep your account secure, it is recommended to update your password regularly and always make sure you remember the new one. You may see a password leak if you do not change the default password, or an increased risk of the account getting hacked or compromised if you use the default password for a long time. Besides, you may not be able to access the device if you have lost your password. All these situations may cause losses for the plant, and such losses shall be borne by users.

Functions available to the **User** and the **Installer** accounts may differ.

Step 4 A message will show on the screen asking you to change your password. Tap Go to set.
Then, enter the original password and new password, confirm the new password, and tap Confirm.

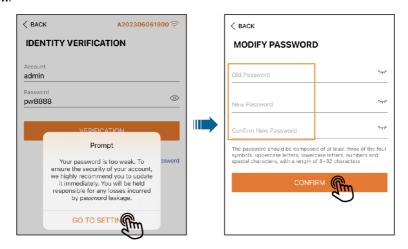

1

The password should be 8–32 characters long and contain at least three of the following four character types: uppercase letters, lowercase letters, numbers, and special characters.

**Step 5** Log in again with the new password.

--End

### 8.3 iSolarCloud App Overview

After logging in, you will go to the **Home** screen by default, as shown in the figure below.



No.	Definition	Description
1	Device name	Shows the model, S/N, and status of the current device.
2	Toolbar	Provides access to network settings, cloud server selection, and quick settings.
3	Plant operation information	Shows the key plant data, such as the total PV power, feed-in/energy purchasing power, and load power. Battery charging/discharging power will also be shown if a battery has been added to the plant.
4	Device operation information	Shows the type, number, and running status of the devices that have been added to the plant. You can tap on the device type or

No.	Definition	Description
		running status to go to the list of the corresponding devices.
5	Navigation bar	<ul> <li>Home: View the operation information of the plant and the devices.</li> <li>Device: Check and maintain the connected devices.</li> <li>EV Charger: Check and set the working mode, running status, and charging parameters for the charger. This tab is available only if an EV charger is added.</li> <li>Faults: View the fault information of the connections between iHomeManager and the connected devices.</li> <li>More: Set the energy management, power control, intelligent load, and device parameters.</li> </ul>



The navigation bar and available functions may slightly differ by account permission. In such cases, the App you actually use should take precedence. The instructions below are provided based on an Retailer/Installer account, unless otherwise specified.



After logging in for the first time, you will go to 8.4 Quick Setting by default.

 
### 8.4 Quick Setting



For the AC22E-01 firmware version lower than LE-01.1E1.001.101.34, please refer to this document https://support.sungrowpower.com/PdfDetail?id=1942479071067181058&language\_id=1, and follow the AC22E-01 firmware upgrade process to upgrade to a version compatible with iHomeManager.

"Quick Setting" offers simplified network connection settings, grid connection settings, and cloud access configuration. You can also set the device parameters here.

First login
 After logging in for the first time, you will go to "Quick Setting" automatically. You can complete device initialization by following the steps below.



· Subsequent login

If it is not your first login, tap in the upper right corner of the **Home** screen to go to **"Quick Setting"**.



 During quick setting, do not power off or restart the router or the inverter, communication module, and charger connected to the iHomeManager.



 For a retrofit system using SUNGROW inverter, the inverter and communication module will undergo a firmware update and factory reset. Please wait for device initialization to complete first before proceeding with quick setting.

### 8.4.1 Network Configuration




If multiple routers are used at the site, ensure the iHomeManager, communication module, and charger are connected to the same local area network (LAN) and can communicate with each other properly.

Connecting the iHomeManager to the home router via Ethernet cable is preferred. If using the WLAN connection, ensure that the router's WLAN gets full bars in signal strength and operates at 2.4 GHz.

You can check the WLAN signal strength in the following two ways. If the signal bars are not full, it is recommended to adopt Ethernet communication.


- Choose Network > WLAN connection to check the signal strength of the router's WLAN.
- 2. Choose **More > System Information** to check the signal strength of the router's WLAN to which the device is currently connected.

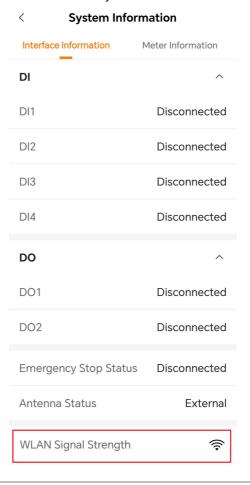



- To connect a mobile phone directly to the device, ensure the phone is within the coverage of the device's WLAN signal.
- To connect the device to the router via WLAN, ensure the device is within the coverage of the router's WLAN signal and the signal is good and stable.
- The router should support WLAN (IEEE 802.11/B/G/N, 2.4 GHz) and the WLAN signal should cover the inverter.
- 1
- WPA, WPA2, and WPA/WPA2 encryptions are recommended for the router; enterprise-level encryption (e.g., airport WLAN and other public networks that require authentication) is not supported; while WEP and WPA TKIP encryptions are not recommended because of their severe security defects. If WEP is adopted and the connection fails, go to the router configuration page and change the encryption to WPA2 or WPA/WPA2.

### WLAN Connection

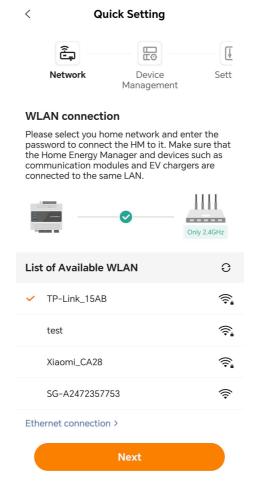

- 1. Select the target home network in the list of available WLANs.
- 2. Enter the password and tap Confirm.



- 3. Tap Next upon successful connection.
- **4.** Select **Synchronization** to synchronize the network settings for the communication module, charger, and other devices.

If the WiNet-S communication module is used, you need to configure its network settings manually before "Network Configuration". For details, see "9.1 WLAN Configuration" in the user manual for iSolarCloud App. You can scan the QR code below for the user manual.






- **5.** Go to the "Device Management" screen (see 8.4.2 Device Management). The system will initiate a device search automatically.
- · Ethernet connection
  - 0

Make sure that the network cable is properly connected to the .




- 1. On the **Network Configuration** screen, tap **Ethernet Connection** in the lower left corner
- 2. Automatically Obtain IP Settings (DHCP) is turned on by default. If it is turned off, you need to configure network settings manually based on the router to which the device is connected. The following parameters can be set:
  - IP address
  - Subnet mask
  - Gateway address
  - DNS1
  - DNS2
- 3. If there are devices connected to the router via WLAN at the site, turn on WLAN Sharing. This function allows you to share your WLAN username and password with other wirelessly connected devices and complete network settings in one click.
- 4. Select the target home network in the list of available WLANs.
- 5. Enter the password and tap Confirm.
- 6. Tap Next after a successful connection to go to 8.4.2 Device Management.

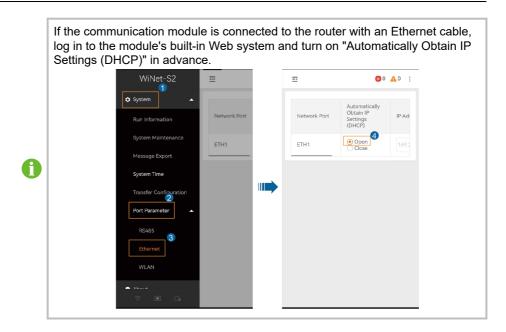

### 8.4.2 Device Management


After the network configuration is completed, go to "**Device Management**". The system will scan for nearby devices automatically. Once the scan is finished, verify that the devices in the list match the actual networked devices. This step can be temporarily skipped. For future maintenance and management, see 8.10 Device List for details.

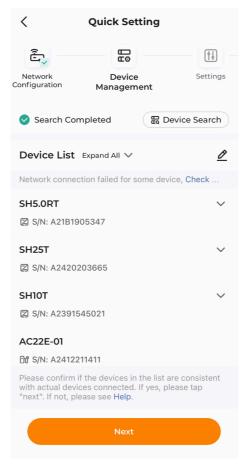

- If there are fewer devices in the list than actual networked devices, check that the
  communication is normal and then tap **Device Search** in the upper right corner or Add
  devices manually.
- If there are more devices than the actual networked devices, tap to go to the Edit
   Device List screen, then tap to delete the unnecessary ones.

### Add devices manually

On the **Device Management** screen, tap **2** to go to the **Edit Device List** screen.

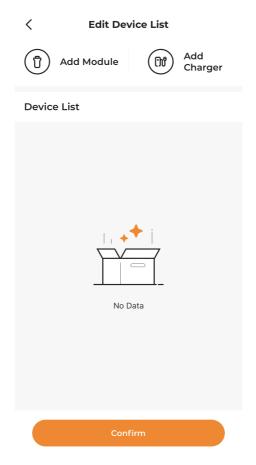

### Choose Add Module:

- 1. Option 1: Scan the QR code on the communication device and tap Confirm.
- 2. Option 2: Tap to upload a picture of the communication device's QR code and tap Confirm.
- 3. Option 3: Tap T, select the type of the communication device, enter the device S/N, and tap **Confirm**.
- Select Add Charger:

 
Enter the charger S/N, and tap Continue.

Once the device is added, tap **Confirm** to go back to "**Device Management**", and then tap **Next** to go to Device initialization.

### **Device initialization**




- 1. Tap **Country/Region**, select the country/region where the device is located or the standard for grid connection, and tap **Confirm** in the upper right corner.
- 2. Go back to "Device Management" and tap Set to apply the settings.
- 3. After all devices are set up successfully, tap **Next** to go to 8.4.3 Parameter Settings.



### 8.4.3 Parameter Settings

You can set the energy management mode and power control parameters for the device in "**Settings**". This step cannot be skipped.

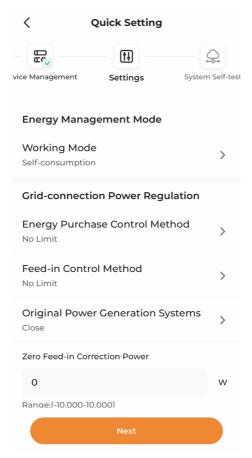

#### **Energy management mode**

The system provides various energy management modes to ensure effective energy management and maximization of energy utilization.

- 1. On the Settings screen, tap Working Mode.
- **2.** Select a working mode for the device. For details, see 8.6 Energy Management by iHomeManager.

### **Grid-connected power regulation**


Energy management mode allows users to set power limits on energy purchase and feedin.

Set the grid-connected power regulation parameters. For details, see 8.7.2 Grid-connection Power Regulation.

After completing the settings, tap Next to go to 8.4.4 System Self-test.

### 8.4.4 System Self-test

A connection check will be performed by the system automatically once you go to "System Self-test". You can then check whether the communication between devices is normal.

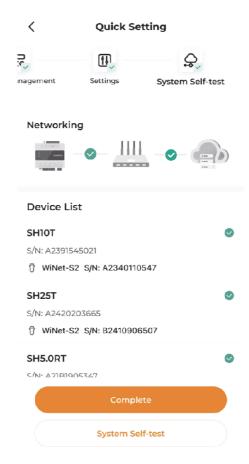

- **1.** If the communication is abnormal, perform an inspection by following the onscreen instructions.
- 2. Tap System Self-test at the bottom of the screen.
- **3.** If the system check is finished without detecting anything abnormal in the devices, tap **Complete**.
- 4. Choose whether to create a plant now.
  - Tap Continue to go to 8.4.5 Create Plant.
  - Tap Not Now to go to the Home screen.

### 8.4.5 Create Plant



To enter the **Create Plant** screen, please switch to the mobile data or connect your mobile device to a home network, and then go back to the App.

1. Fill in the Basic Plant Information:

Parameter	Description
Plant Name*	Name the plant.



Parameter	Description
Installed PV Power (kWp)*	Enter the installed power.
Plant Type*	Select the type of the plant:  Residential PV plant  Residential energy storage plant
City*	The city where the plant is located.
Postal Code	The postal code of the place where the plant is located.
Country/Region*	The country/region where the plant is located.
Time Zone*	Completed automatically according to the country/region you have selected.
Grid-connection Type*	Select the type of grid connection for the plant:  100% Feed-in  Self-consumption  Zero-export  Off-grid
Grid-connection Date	Shows the current date by default. You can tap to set the grid-connection date as needed.



\* indicates required fields.

### 2. Fill in the Retailer/Installer Information:

Enter the Retailer/Installer Email Address. You can select the Notifying the installer via email checkbox as needed. The retailer/installer can log in to the App using the email address and check the plant in the plant list.

### 3. Fill in the Owner Information:

Enter the **Owner's Address**. You can select the **Notifying the property owner via email** checkbox as needed. The owner can log in to the App using the email address and check the plant in the plant list.


### 4. Set tariffs.

- a. Set your preferred currency in Unit.
- b. Set the Feed-in Tariff and the Consumption Tariff, and select the Tariff Type:
  - **Fixed tariff**: Rate charged for electricity consumed at different times of day is the same.
  - **Time-of-Use Tariff**: You can set different rates for electricity consumed in different time windows of the day. The time windows cannot overlap.

### 5. Tap Save and Continue.

### 8.4.6 View Plant Information

After a plant is created, users can log in to the iSolarCloud App or Web system, using the previously provided retailer/installer email address or owner email address, and view the information about the plant. For detailed instructions, scan the QR code below for the user manual.

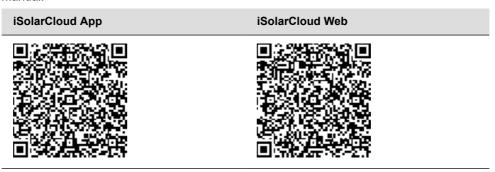

### 8.4.7 View Device Information


After completing the quick settings, go back to "**Home**". You can then tap the number of connected devices, device type, or device status to open the list of the corresponding devices. For detailed instructions, see 8.10 Device List.


### 8.5 EV Charger Settings (Optional)

If an EV charger has been added to the plant, the **EV Charger** tab will appear in the bottom navigation bar of the App.

The iHomeManager can be used in conjunction with the following SUNGROW chargers.

  AC22E-01





SUNGROW



### Start charging

- 1. Plug the charging connector into the charging port on the EV.
- 2. Set the charging mode.
- 3. Check that the charger status changes to Standby.
- 4. Tap Start Charging. Check that the charger status changes to Charging.
- 5. After charging is completed, pull out the charging connector.



If the charger status shows **Unplugged**, the charging connector may not be plugged into the EV correctly. In this case, check the connection, or pull out and plug the charging connector again.

### Stop charging


- 1. Tap Stop Charging during the charging process.
- 2. Check that the charger status changes to Completed.



You can start or stop charging on the iSolarCloud App or using a charging card. Please start or stop charging in the same way for the same charging session.

### 8.5.1 Eco Charging

"Eco Charging" is the most economical charging mode. In this mode, the system prioritizes supplying other loads with PV output and, when there is excess feed-in power, directs the charger to charge the EV. If the PV output power cannot meet the charging demand, the system uses energy stored in the battery for the EV charger. If the battery capacity is insufficient, the system purchases energy from the grid to cover the charging demand.

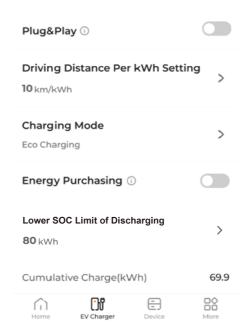

- 1. Go to the EV Charger screen.
- 2. Turn on or off Plug & Play as needed.
  - ON: Charging begins once the charging connector is plugged into the EV.
  - OFF: Charging begins when the user taps Start Charging after the charging connector is plugged into the EV.
- 3. Set the Driving Distance Per kWh. "Driving distance per kWh" indicates how far a vehicle can travel on 1kWh of energy. It depends on the actual road conditions, the vehicle model, the weight of the vehicle and its load, and the speed of the vehicle.
- 4. Tap Charging Mode, select Eco Charging, and tap Save.
- 5. Turn on or off Energy Purchasing as needed.
  - ON: When the PV output and battery energy are insufficient, the EV can be charged with energy purchased from the grid.
  - OFF: Charging EVs with energy purchased from the grid is not allowed.

### 6. Set the Lower SOC Limit of Discharging.

If the PV output power is not sufficient for the charger to work, battery energy is used to serve the charger. The rules are:

- The battery is allowed to discharge to supply the charger when the system SOC is above this threshold.
- The battery is not allowed to discharge to supply the charger when the system SOC is below this threshold.

You can start charging once the settings are completed.



If the EV supports both three-phase and single-phase charging, the iHomeManager will instruct the three-phase charger to switch between single-phase and three-phase charging modes to enhance clean energy utilization. When the charging power falls within the range of 1.38–4.14 kW, the charger switches to single-phase charging mode; when the charging power rises above 4.14 kW again, the charger switches back to three-phase mode. A temporary power drop to 0 W during this transition is normal.

### 8.5.2 Fast Charging

In the "Fast Charging" mode, the charger charges the EV at the maximum available power. Users can select this mode to get the EV ready quickly in case of an urgent travel need. In this mode, when the PV output power is not sufficient to cover the charging demand, the system supplies the energy stored in the battery to the charger. If the battery capacity is insufficient, the system purchases energy from the grid to cover the charging demand.



- 1. Go to the EV Charger screen.
- 2. Turn on or off Plug & Play as needed.
  - ON: Charging begins once the charging connector is plugged into the EV
  - OFF: Charging begins when the user taps Start Charging after the charging connector is plugged into the EV.

- 3. Set the **Driving Distance Per kWh Setting**. "Driving distance per kWh" indicates how far a vehicle can travel on 1kWh of energy. It depends on the actual road conditions, the vehicle model, the weight of the vehicle and its load, and the speed of the vehicle.
- 4. Tap Charging Mode, select Fast Charging, and tap Save.


You can start charging once the settings are completed.

### 8.5.3 Scheduled Charging

In the "Scheduled Charging" mode, based on the preset charging target and time to pick up the car, the system automatically switches between eco charging and fast charging, and completes charging at the minimum electricity cost before the user picks up the car.



"Charging Target" sets the amount of energy expected to be delivered to the EV, without considering the remaining available energy in the EV battery.

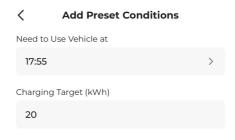



- 1. Go to the EV Charger screen.
- 2. Turn on or off Plug & Play as needed.
  - · ON: Charging begins once the charging connector is plugged into the EV.



- OFF: Charging begins when the user taps Start Charging after the charging connector is plugged into the EV.
- 3. Set the **Driving Distance Per kWh**. "Driving distance per kWh" indicates how far a vehicle can travel on 1kWh of energy. It depends on the actual road conditions, the vehicle model, the weight of the vehicle and its load, and the speed of the vehicle.
- 4. Tap Charging Mode and select Scheduled Charging.
- 5. Tap to go to the Add Preset Conditions screen.
- 6. Set the Charging Target and the time to pick up the car, and tap Save.



Charging will stop once the charging target is reached, even if the predefined pickup time has not yet arrived.

If the charger cannot meet the charging target before the pickup time, the screen will display "unable to complete the charging target before you pick up the vehicle".



- Tap Confirm to save the above settings.
- Tap Cancel to go back to "Add Preset Conditions" and set the parameters again.


You can start charging once the settings are completed.

### 8.5.4 Customized Charging

 The "Customized Charging" mode allows users to define the start time and end time for a charging task and the charging power/current. In this mode, when the PV output power is not sufficient to meet the charging demand, the system supplies energy stored in the battery to the charger. If the battery capacity is insufficient, the system purchases energy from the grid to fulfill the charging demand.

## < **Customized Charging** Start © End 05:50 23:10 Today Today 18 **Current/Power** 12A 8.28kW

- 1. Go to the EV Charger screen.
- 2. Set the Driving Distance Per kWh. "Driving distance per kWh" indicates how far a vehicle can travel on 1kWh of energy. It depends on the actual road conditions, the vehicle model, the weight of the vehicle and its load, and the speed of the vehicle.
- 3. Tap Charging Mode and select Customized Charging.
- 4. Tap to go to Customized Charging screen.
- 5. Set the start time, end time, and Current/Power, then tap Save.
  - In this mode, the charger will charge the EV automatically within the preset time period.





Outside of the custom charging window, if a charging session is initiated using Plug & Play or a card and the charger starts working accordingly, the iHomeManager will automatically cut off power to the charger to make it stop.

# 8.6 Energy Management by iHomeManager

The system provides various energy management modes to ensure effective energy management and maximization of energy utilization.

The following working modes are available for the iHomeManager.

- · Self-consumption
- Time Plan
- · Compulsory Mode
- Al Mode



iHomeManager supports third-party scheduling. When the Third-party scheduling mode is selected, the Energy management page displays a message indicating that the system is currently operating in External energy dispatch mode, the plant dispatch is controlled by a third party, and users can manually switch to other modes.


### 8.6.1 Self-Consumption

The **Self-consumption** mode maximizes the utilization of PV output and battery energy to power the loads, thus minimizing grid energy consumption. Users can configure time windows for Feed-in Peak Power and Peak Shaving Limit based on electricity rates, allowing for flexible adjustment of battery charging/discharging and energy purchase strategies to optimize energy costs.

### **Function Logic**

- When the PV output power is sufficient, the PV energy will be first supplied to the loads, with the excess stored in the battery. If, after this, there is still energy surplus, it will be fed into the grid.
- If the PV output power is insufficient to meet the load demand, the system discharges
  the battery to compensate. If the battery capacity is insufficient, the system draws power
  from the grid to meet the load demand.

### **Procedure**

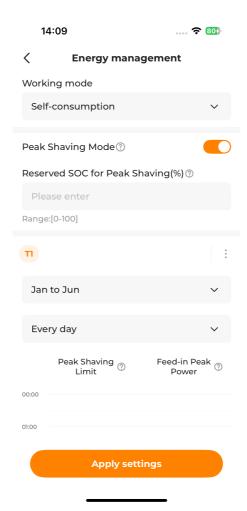

- 1. Choose More > Energy management.
- 2. Set the Working mode to Self-consumption.
- 3. Enable or disable the **Peak Shaving Mode**. The mode is disabled by default.
- If Peak Shaving Mode is enabled, enter a value in Reserved SOC for Peak Shaving (%).



The Reserved SOC for Peak Shaving must be greater than the Reserved battery SOC for off-grid. Otherwise, the setting will not take effect.

- **5.** Configure the time windows for **Feed-in Peak Power** and **Peak Shaving Limit**. See 8.6.1.2 Custom Month Span for details.
- Set the Feed-in Peak Power and Peak Shaving Limit. See 8.6.1.1 Demand Control for details.
- 7. Tap Apply settings.

### 8.6.1.1 Demand Control

Demand control allows you to set the **Feed-in Peak Power** and **Peak Shaving Limit**. In the **Self-consumption** mode, after the demand control parameters are set, the battery charging/discharging strategy will adjust automatically based on the energy purchasing and feed-in power, thus improving the economic benefits of clean energy.

### Feed-in Peak Power

After you configure this threshold, when there is sufficient sunlight, the system will meet the load demand with PV energy first and feed the excess into the grid. The battery will only be charged when the power feed-in exceeds this threshold. When the battery is fully charged, the system will limit PV generation or grid feed-in based on the configured Feed-in limit power.

### **Peak Shaving Limit**

After you configure this threshold, when there is insufficient sunlight: If the battery has sufficient charge, the system will prioritize supplying power to the load from the battery. If the battery charge is insufficient, the system will draw power from the grid to supply the load. When the energy purchase power exceeds this threshold, the system will continue to draw power from the battery for load use, helping reduce the user's electricity cost.

### **Procedure**

In the Feed-in Peak Power column, click an existing time window. In the pop-up Feed-in Peak Power dialog box, enter the demand feed-in power upper limit (range: 0–600 kW). Tap Confirm.



In the Peak Shaving Limit column, click an existing time window. In the pop-up Peak
 Shaving Limit dialog box, enter the demand purchase power upper limit (range: 0–600 kW). Tap Confirm.


# Peak Shaving Limit(kW) 100 Range:[0.00-600.00] Cancel Confirm

### Example

Given the inverter PV installed power is 10 kW, the inverter rated power is 10 kW, the maximum charging/discharging power of the battery is 5 kW, and the battery backup SOC is set to 70%.


Set the **Peak Shaving Limit** to 2 kW. Then, in case of insufficient sunlight, the energy allocation in the system is as follows:

- If the PV output power is 2 kW, the consumption of the load is 4 kW, and the battery backup SOC is 90%: The load prioritizes drawing power from the battery. At this time, the battery discharging power is 2 kW.
- If the PV output power is 2 kW, the consumption of the load is 5 kW, and the battery backup SOC is 50%: Due to the restriction of **Peak Shaving Limit**, the load imports a power of 2 kW from the grid, and the excess 1 kW is supplemented by battery discharge.

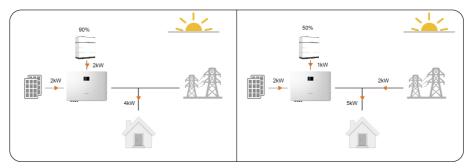

Set the **Feed-in Peak Power** to 3 kW. Then, under sufficient sunlight, the energy allocation in the system is as follows:

- If the PV output power is 4 kW, and the consumption of the load is 3 kW: As the excess
  1kW has not exceeded the Feed-in Peak Power, the excess will be fed into the grid,
  instead of being used to charge the battery.
- If the PV output power is 7 kW and the consumption of the load is 2 kW, due to the
  restriction of Feed-in Peak Power, 3 kW will be fed into the grid and the remaining 2
  kW will be used to charge the battery.

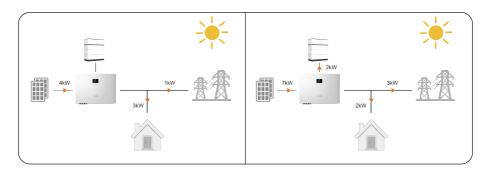

### 8.6.1.2 Custom Month Span

In the **Self-consumption** mode, users can set battery charging/discharging plans to optimize the energy usage and management. With properly set time windows for Feed-in Peak Power and Peak Shaving Limit, the system maximizes the use of PV output during on-peak hours and reduces the energy purchased from the grid during off-peak hours, thus lowering the electricity costs.

Time Window Status		Description
00:00-01:15 Power:0kW 00:45-01:45 Power:0kW	: Feed-in Peak Power	If the time window is displayed in a dark color, you can drag up and down to adjust its length, to a minimum of 15 minutes.
01:00-02:00 Power:100kW 00:00-01:00 Power:100kW	: Feed-in Peak Power	If the time window is displayed in a light color, it indicates that the <b>Feed-in Peak Power</b> or <b>Peak Shaving Limit</b> has been set for this period of time. You can tap
		and delete the window.

### **Procedure**

- 1. In the time window configuration area, set the desired month span. You can set different time windows based on seasonal energy demand patterns.
- Select the days on which the Feed-in Peak Power or Peak Shaving Limit plan applies.
  You can apply the plan to all days, or set different plans for weekdays and weekends.
  The plan applies to every day by default.
  - Every day: The set Feed-in Peak Power and Peak Shaving Limit plan applies
    on all days. This option is ideal for scenarios where the daily energy demand is
    relatively stable.
  - Weekdays & weekends: Set different Feed-in Peak Power and Peak Shaving Limit plans for weekdays and weekends.
- 3. To add more month spans, tap to the right of the default month span name and select **Add**.



You can select a month span and tap : to modify its name or delete it.

**4.** Tap the desired time period in the **Feed-in Peak Power** or **Peak Shaving Limit** column. A new Feed-in Peak Power or Peak Shaving Limit time window will be created. Then, drag up and down to adjust the length of time, and tap the window again to add it.



Feed-in Peak Power and Peak Shaving Limit time windows can overlap.

### 8.6.2 Time Plan

The **Time plan** mode is mainly used in electricity transaction scenarios. You can set the time windows and power for battery charging/discharging manually, according to the on- and off-peak electricity prices, to maximize the economic benefits.


It is recommended to allow the battery to discharge during on-peak hours (when electricity prices are higher) and charge during off-peak hours (when electricity prices are lower).

### **Function Logic**

- Discharging window: The battery discharges at the predefined discharging power within the set time period until the Battery discharge target SOC is reached.
- Charging window: The battery charges at the predefined charging power within the set time period. If PV power is sufficient, the battery charges until it is fully charged. If PV power is insufficient, it charges until the Battery charge target SOC is reached.

### **Procedure**



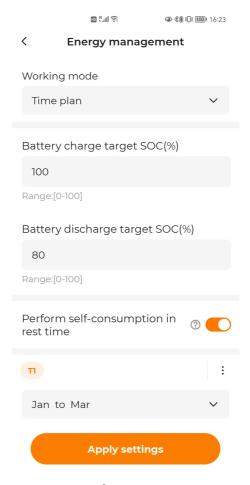

- 1. Choose More > Energy management.
- 2. Set the Working mode to Timed plan.
- 3. Set the **Battery charge target SOC** (%): Charging stops when the battery reaches the target charging SOC.
- **4.** Set the **Battery discharge target SOC (%)**: Discharging stops when the battery drops to the target discharging SOC.
- **5.** Enable **Perform self-consumption in rest time**. When enabled, the system performs self-consumption outside the defined charging/discharging time windows.
- **6.** Set the desired month span. You can set different time windows based on seasonal energy demand patterns.
- 7. Select the days on which the battery charging/discharging plan applies. You can apply the charging/discharging plan to all days, or set different charging/discharging plans for weekdays and weekends. The plan applies to every day by default.
  - **Every day**: The set charging/discharging plan applies on all days. This option is ideal for scenarios where the daily electricity price is relatively consistent.

- Weekdays & weekends: Set different charging/discharging plans for weekdays and weekends
- 8. To add more month spans, tap to the right of the default month span name and select **Add**



You can select a month span and tap to modify its name or delete it.

**9.** Tap a time period in the **Discharge** or **Charge** column, a new discharging or charging window will be created. Then, drag up and down to adjust the length of time, and tap the window again to add it.

The charging and discharging windows cannot overlap.



The battery will not discharge in a time period with no settings. If the PV output is insufficient to meet the load demand, the system purchases energy from the grid to meet the load demand, and allows the battery to charge from the excess PV energy.

- 10. Tap an added window, choose **Set power**, and set the discharging or charging power.
- 11. Tap Apply settings.


### 8.6.3 Compulsory Mode

The **Compulsory Mode** is mainly used in battery O&M to control the battery and make it operate in compliance with the preset charging/discharging mode and power. Restore the system to the previous working mode after maintenance work is completed.

### **Function Logic**

- Forced Charging: The battery charges at the preset charging power until it is fully charged.
- Forced Discharging: The battery discharges at the preset discharging power until it is fully discharged.



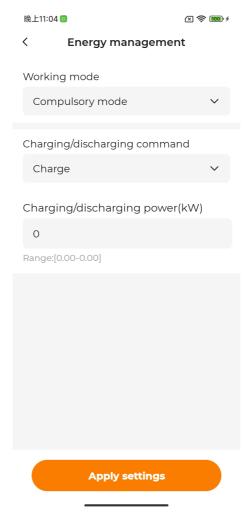

- 1. Choose More > Energy Management.
- 2. Set the Working Mode to Compulsory Mode.
- 3. Set the Charging/Discharging Command.
  - **Charge**: Force the battery to charge at the preset charging power until the battery SOC upper limit is reached.
  - **Discharge**: Force the battery to discharge at the preset discharging power until the battery SOC lower limit is reached.
  - Stop: Stop battery charging or discharging manually.
- **4.** If **Charge** or **Discharge** is selected, set the target charging or discharge power in **Charging/Discharging Power**.
- 5. Tap Apply Settings.


### 8.6.4 Al Mode

In the **Al Mode**, the system predicts future PV yield and household electricity use, based on the meteorological data and the user's consumption profile. It then decides on an optimal

strategy to control battery charging/discharging and electricity usage in the household, thus maximizing the clean energy usage or the revenue.



A certain amount of data accumulation is required for AI mode to predict future production and consumption more accurately.

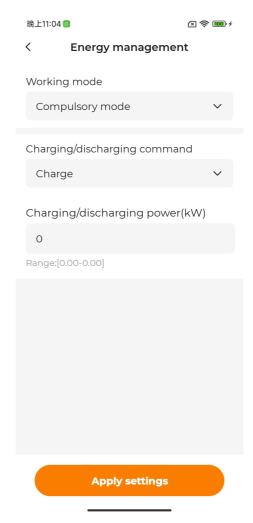

- 1. Choose More > Energy Management.
- 2. Set the Working Mode to Al Mode.
- Set Working Strategy to Maximize Revenue or Maximize Clean Energy Usage.
   See 8.6.4.1 Maximize Revenue and 8.6.4.2 Maximize Clean Energy Usage for detailed instructions.
- 4. Turn on or off Storm Protection as needed.
  - If the **Storm Protection** is enabled, upon receiving an extreme weather alert, the system charges at maximum capacity until reaching the SOC upper limit, ignoring all

the preset restrictions. When the extreme weather ends, the system will go back to the previous working mode.

- Disable: The system will work as per the set working strategy.
- 5. Tap Apply Settings.

### 8.6.4.1 Maximize Revenue

### **Function Logic**

By analyzing the meteorological data, the system controls the charging/discharging of the battery properly based on PV yield forecast, electricity price settings, and loads' energy consumption, to cover the user's energy demand and reduce the consumption of energy from the grid.



The meteorological data comes from official statistics.

### Requirements

Tariff settings have been completed. For detailed instructions, see 8.4.5 Create Plant.

### **Steps**


1. Tap Working Strategy, and select Maximize Revenue.

### 8.6.4.2 Maximize Clean Energy Usage

### **Function Logic**

After the load connected to the device is added and the rated power and work time of the load are set, the system maximizes the use of PV output and battery energy to supply the load and reduces the energy purchased from the grid.

- 1. Tap Working Strategy, and select Maximize Clean Energy Usage.
- 2. Tap to the right of **Intelligent Load**, and select the target load based on the port to which it is connected.
  - If the load is connected to the DO1 port, select DO1-Load, and tap Add. This also
    applies to DO2-Load.
  - If the load is connected to both the DO1 and DO2 ports, choose Select All in the lower left corner, and tap Add.
- 3. Set the load's power and work plan.

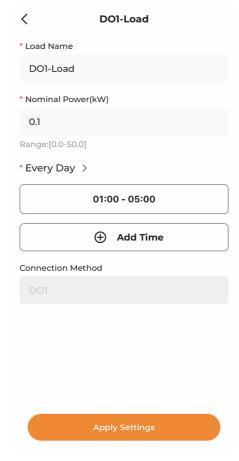

- a. Tap on the load that has been added and choose Edit.
- b. The Load Name and Nominal Power can be modified.
- c. Select the days on which the work plan applies.
  - Every Day: The work plan applies on all days.
  - Weekdays & Weekends: Set different work plans respectively for weekdays and weekends.
- **d.** Set the **Start Time** and **End Time** of work for the load. You can also tap **Add Time** to add more time windows.
- e. Tap Save.

### 8.6.4.3 View Energy Analysis Curve Results

After completing the Al mode setup, you can view the Al-driven energy analysis curve data by accessing the Overview page of the plant on the iSolarCloud App.




This function is available on iHomeManager-SV930.001.00.P008 or later.

1. Log in to the iSolarCloud App, choose a plant, and go to "Overview".



2. Tap en next to Al mode to view the Al-driven energy analysis curve data.

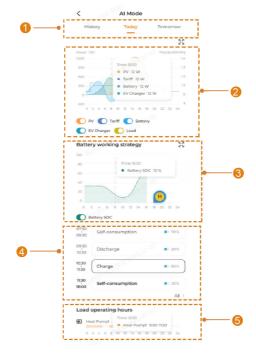

No.	Definition	Description
1	Time period switching	By default, you can view the analysis curve data for the current day. You can switch the time period to view historical curve data and tomorrow's forecast curve data.
2	Power data	View the power data of the following items based on the curve color: PV Tariff Battery Charger Load
3	Battery working strategy	You can view the battery working strategies corresponding to different time on the curve. Charge Discharge Self-consumption
4	Battery data	Display actual and predicted battery charging/discharging strategies and SOC values.
5	Load operating hours	Display the Al- recommended load operating periods.

# 8.7 Power Control

### 8.7.1 DI Power Regulation

DI power regulation supports Ripple Control and EnWG 14a control. If an emergency stop device is connected, users can also configure the emergency stop function.



If the DI power regulation is not needed, set **DI Control Method** to "OFF".


### 8.7.1.1 Ripple Control

In the "Ripple Control" mode, the system receives control signals from the grid in the form of dry contact signals, and perform power regulation as required.

If the "Ripple Control" mode is selected, the grid operator will convert the grid schedule signal into the dry contact signal and send it out. A total of 16 DI combinations are available, each with a specific power ratio. Please set the DI combination for the system so that it can receive and respond to grid signals properly.

Table 8-1 DI Interface Status

Icon	Description
0	This DI interface is in the open state.
<b>⊘</b>	This DI interface is in the closed state.
DI combinations cannot be repeated.	

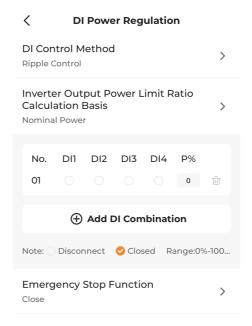

- 1. Choose More > Power Control > DI Power Regulation.
- 2. Set the DI Control Method to Ripple Control.
- 3. Set the Inverter Output Power Limit Ratio Calculation Basis.
  - **Nominal Power**: The value of the schedule command is calculated based on the rated power of the inverter that is connected.
  - Installed PV Power: The value of the schedule command is calculated based on the installed PV power of the inverter that is connected. Please enter the Total Installed Power of Modules based on the actual plant conditions.
- 4. Select DI ports, and set a power ratio in a range of 0%-100%.



Set DI combinations based on the control signals sent from the grid operator.

### Example

If the control signal received is converted into the DI combination of 1100, which indicates a power limit ratio of 80%, set as follows:



- 5. Tap Add DI Combination to add other DI combinations.
- 6. Tap Apply Settings.

### 8.7.1.2 Control via EnWG 14a

- This function is available on iHomeManager-SV930.001.00.P008 or later.
- When the EnWG 14a mode is selected, iHomeManager applies a battery charging power limit to the entire system. Even if emergency charging is triggered, the battery charging power drawn from the grid cannot exceed 4.2 kW.



- After enabling the EnWG 14a mode, the control strategies for chargers and heat pumps are automatically disabled. After disabling the EnWG 14a mode, the charger and heat pump control strategies will resume based on their previous settings.
- The Close, Ripple control, and EnWG 14a DI control methods are mutually exclusive.

### **Procedure**





- Choose More > Power control > DI power regulation.
- · Set the DI control method to EnWG 14a.
- Tap Apply settings.

### 8.7.1.3 Emergency Stop Function

The emergency stop function allows users to stop the inverter immediately in case of an emergency.



The emergency stop function is available for SUNGROW inverters only.

Table 8-2 Emergency Stop Modes

Mode	Description
OFF	Emergency stop control is disabled.
Stop Inverter	When emergency stop is triggered, the inverter enters the emergency stop state.



- 1. Choose More > Power Control > DI Power Regulation.
- Open the Emergency Stop Function drop-down list. You can decide whether to enable the emergency stop function and select the emergency stop mode based on actual needs.

- If Stop Inverter is selected, select a trigger condition in the drop-down list of "Emergency Stop Status".
  - Open: Emergency stop will be triggered when DI opens.
  - · Closed: Emergency stop will be triggered when DI closes.
- 4. Tap Apply Settings.

### 8.7.2 Grid-connection Power Regulation

The energy management mode allows users to set power limits on energy purchase and feed-in.

### Steps

- 1. Choose More > Power Control > Grid-connection Power Regulation.
- 2. In the Energy Purchasing Control Method drop-down list, select Unlimited or Purchase Energy With Limited Power.
  - Unlimited: There is no power limit for purchasing energy from the grid.
  - Purchase Energy With Limited Power: There is a power limit for purchasing energy from the grid.
- 3. If Purchase Energy With Limited Power is selected, set a proper power limit in Power Limit for Energy Purchase based on the rated current of the main power source equipment (e.g., household air circuit breaker) that is connected in the system.





The value of **Power Limit for Energy Purchase** should not be lower than the total load connected in the system.

- 4. In the Feed-in Control Method drop-down list, select Unlimited or Feed-in Limited Power.
  - · Unlimited: There is no power limit on energy feed-in.
  - Feed-in Limited Power: There is a power limit on energy feed-in.
- 5. If Feed-in Limited Power is selected, set a proper power limit in Feed-in Limitation Ratio for energy feed-in according to the local laws and regulations. The unit of the power limit is user-definable, "%" by default.





- In the Third-Party Power Generation Systems drop-down list, select Disable or Fnable
  - Disable: There is no power output from third-party power generation facilities.
  - Enable: There is power output from third-party power generation facilities.
- If Enable is selected, provide the rated power of such power generation equipment in Rated Power of Third-Party Power Generation Systems.





8. Set Swift grid dispatch mode to Open (enable) or Close (disable).



This mode is inactive by default. Enabling this mode allows faster active power regulation for the system. It is recommended to enable it in the scenario of reverse power protection or zero export.

9. Tap Apply Settings.

# 8.8 Intelligent Load

The **Intelligent Load** allows users to define the working mode for a load and control how and when the load works. The following three working modes are available.

- · Scheduled Mode
- · Instant Mode
- ECO Mode


### **Steps**

1. Choose More > Intelligent Load.

- 2. Tap on a load and select a working mode for it. For details, see 8.8.1 Scheduled Mode (Heat Pump Control), 8.8.2 Instant Mode (Heat Pump Control) and 8.8.3 ECO Mode (Heat Pump Control).
- 3. Tap = in the upper right corner of the **Intelligent Load** screen to set the priority in energy consumption for the load. For detailed instructions, see 8.8.4 Intelligent Load Consumption Priority.
- **4.** Go back to the **Intelligent Load** screen, and turn on the target load. The load will then operate in compliance with the preset working mode.

### 8.8.1 Scheduled Mode (Heat Pump Control)

The **Scheduled Mode** allows the load to work in a specific time period. You can define the time for the load to start and stop working.

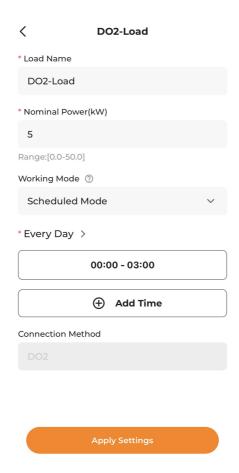

- 1. Select the target load. The Load Name and Nominal Power can be modified.
- 2. Set the Working Mode to Scheduled Mode.
- 3. Select the days on which the work plan applies.

You can apply the work plan to every day, or set different work plans respectively for weekdays and weekends. The work plan applies to every day by default.

- **Every Day**: The work plan applies on all days. This mode is suitable for scenarios where the load usage is relatively stable.
- Weekdays & Weekends: Set different work plans respectively for weekdays and weekends.
- 4. Tap Add Time and set the Start Time and End Time of each time window.
  - 1


Up to four time windows can be set, each with a minimum length of 30 minutes. The time windows cannot overlap.

5. Tap Confirm.

### 8.8.2 Instant Mode (Heat Pump Control)

The **Instant Mode** allows the load to start or stop working immediately as per the commands. In this mode, you can start or stop an intelligent load as needed on the **Intelligent Load** screen.

### **Steps**

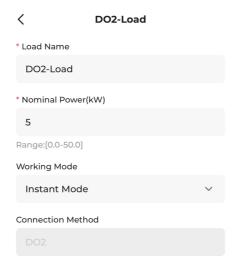


Apply Settings

- 1. Select the target load. The Load Name and Nominal Power can be modified.
- 2. Set the Working Mode to Instant Mode.
- 3. Tap Confirm.

### 8.8.3 ECO Mode (Heat Pump Control)

The **ECO Mode** allows the loads to turn on and consume PV energy when the PV output power is sufficient, thus improving the self-consumption rate. In this mode, the system prioritizes supplying PV energy to other loads and, if there is excess feed-in power, turns on the intelligent load.

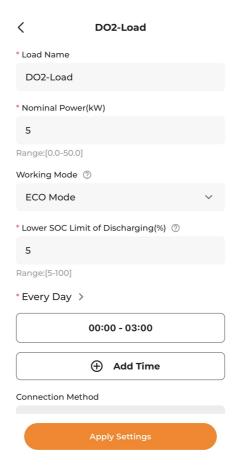

- 1. Select the target load. The Load Name and Nominal Power can be modified.
- 2. Set the Working Mode to ECO Mode.
- 3. Set a lower-limit SOC threshold for discharging in **Lower SOC Limit of Discharging**, in a range of 5 to 100.
- 4. Select the days on which the work plan applies. You can apply the work plan to every day, or set different work plans respectively for weekdays and weekends. The work plan applies to every day by default.



- **Every Day**: The work plan applies on all days. This mode is suitable for scenarios where the PV power output is rather stable.
- Weekdays & Weekends: Set different work plans respectively for weekdays and weekends.
- 5. Tap Add Time and set the Start Time and End Time of each time window.
  - 1


Up to four time windows can be set, each with a minimum length of 30 minutes. The time windows cannot overlap.

6. Tap Apply Settings.

### 8.8.4 Intelligent Load Consumption Priority

### **Steps**

< Intelligent Load Consumption P···

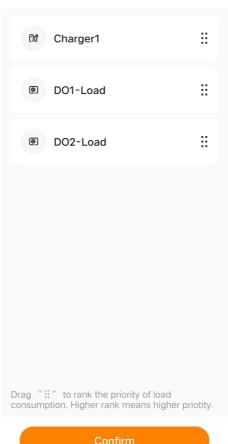

- 1. Choose More > Intelligent Load.
- 2. Tap = in the upper right corner of the Intelligent Load screen.

- 3. On the Intelligent Load Power Consumption Priority screen, drag to re-arrange the loads by priority in energy consumption. The item higher up on the list has higher priority.
- 4. Tap Complete.



When a load with higher priority is activated, if the lower-priority load is working in ECO mode and the remaining PV energy is not sufficient to meet its demand, the system will turn off the lower-priority load to ensure energy supply for the higher-priority load.

# 8.9 Device Settings

### 8.9.1 iHomeManager Settings

### **Basic Settings**

Choose **More > iHomeManager Settings**, and select **Basic Settings** to set the parameters related to the iHomeManager.



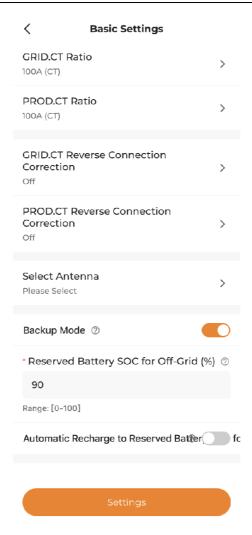


Table 8-3 Parameter Description


Parameter	Description
GRID.CT Ratio	Set the maximum current that the CT at the GRID.CT terminal can measure.
PROD.CT Ratio	Set the maximum current that the CT at the PROD.CT terminal can measure.
GRID.CT Reverse Connection Correction	his function is used to correct  the polarity for data accuracy when the signal wires of the CT are connected in reverse. Correct
PROD.CT Reverse Connection Correction	

Parameter	Description
	wiring: Connect the white signal wire to "+" and blue wire to "-".  Example  If the white wire is connected to "-" and blue wire to "+" in phase A, select the option Phase A Reverse for reverse polarity correction.
Select Antenna	<ul> <li>Built-in Antenna: No external antenna is connected.</li> <li>External Antenna: An external antenna is connected.</li> </ul>
Backup Mode	Turn on this button and set the Reserved Battery SOC for Off-Grid if the device is in the backup mode.
Reserved Battery SOC for Off-Grid	Energy reserved for the off-grid operation of the system. It sets the minimum SOC to which the system can discharge in the grid-connected mode.
Automatic Recharge to Reserved Battery SOC for Off-grid	If this function is turned on, when the battery SOC is lower than of the Reserved Battery SOC for Off-Grid, the system starts an emergency battery charging until reaching the Reserved Battery SOC for Off-Grid.

# Forwarding channel Settings

Choose **More > iHomeManager Settings**, and select **Forwarding channel Settings** to set the open status of the local port of the iHomeManager and the SSL encryption status.



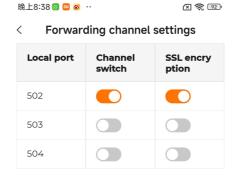

### Apply settings

The function is supported in versions iHomeManager-SV930.001.00.P006 and above.



Local ports 502, 503 and 504 are Used to connect SUNGROW devices or third-party management systems to iHomeManager via Modbus Transmission Control Protocol (Modbus TCP). Port 502 is enabled by default and SSL encryption is enabled. Ports 503 and 504 are closed by default and SSL encryption is also disabled.

### 8.9.2 Inverter Grid-connection Settings


Choose **More > Inverter Settings**. Then, select the target inverter, and tap **Settings** to set the parameters for the inverter's connection to grid.



To configure parameters beyond the grid-connection parameters for the inverter, the WiNet-S/S2 is required. Please refer to the inverter's user manual for detailed instructions, as settings may vary by model.

### 8.10 Device List

You can view the general information about and manage the devices connected to the iHomeManager on the **Device** screen.

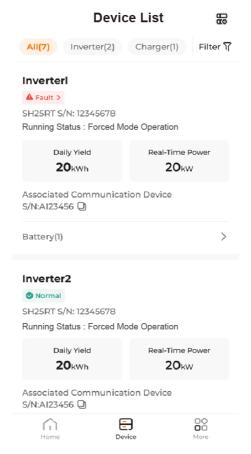

- **Device running data:** Check the inverter's power generation data, the signal strength of the communication device, the battery voltage, current, and SOC, the charger's charging power, and the energy delivered by the charger.
- Associated devices: Check the S/Ns of the communication device and battery associated with the inverter.
- Device running status: Check the running status of the inverter.
  - After the quick settings are completed and the devices can communicate with each other normally, the status of the hybrid inverter will be Energy Dispatching Operation, and that of the PV inverter will be On-grid Operation.





If the hybrid inverter operates normally, while the PV voltage is too low and there is a
fault in the battery or no battery is connected, the status of the hybrid inverter will be
Standby.



- If no battery is connected to the hybrid inverter, the status of the hybrid inverter will be **On-grid Operation**.




### 8.10.1 Add Device

In the **Device List** view, tap in the upper right to go to "**Device Management**". Automatic device search is supported. You can also add the device manually.

### Requirements

- The device is correctly connected to the RS485 port of the iHomeManager.
- The communication module and the iHomeManager are connected to the same network.

### Automatic device search

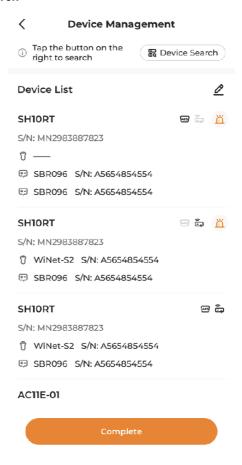

- 1. On the Device Management screen, tap Device Search.
- **2.** After the device search is finished, verify that the devices in the list match the actual networked devices.

In case any device is missing, add it by following the instructions in Add devices manually.

3. Tap Complete.




If a device has been added before but is not in the current search list, it will be deleted.

### Add devices manually

On the **Device Management** screen, tap 🙋 to go to the **Edit Device List** screen.



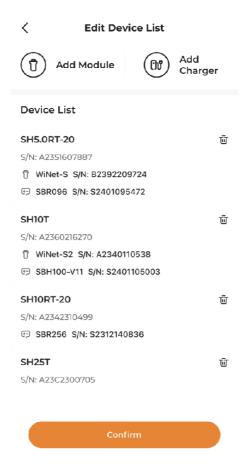

- Choose Add Module:
  - 1. Option 1: Scan the QR code on the communication device and tap Confirm.
  - 2. Option 2: Tap to upload a picture of the communication device's QR code and tap Confirm.
  - 3. Option 3: Tap T, select the type of the communication device, enter the device S/N, and tap **Confirm**.
- Choose Add Charger:
   Enter the charger S/N, and tap Continue.

### 8.10.2 Delete Device

You can delete the devices that are no longer needed on site.

- 1. Tap in the upper right corner of the **Device List** screen.
- 2. Tap 2 to go to "Edit Device List".

- 3. Tap 🗓 following the device to be deleted.
- 4. Tap Confirm in the confirmation dialog.

### 8.11 Other Functions



The following functions are the capabilities of the iHomeManager device itself.

# 8.11.1 Firmware Update

### Requirements

Log in to the App, and choose **Support > Firmware Download** to download the firmware update package. For details, see "9.2 Firmware Download" in the user manual for iSolarCloud App. You can scan the QR code below for the user manual.



### Steps




- 1. Choose More > Firmware Update.
- **2.** Tap on the update package. A confirmation dialog will then appear on the screen. Tap **Confirm** to start updating.
- **3.** Wait for the update to finish. A message will show on the screen after the update is completed successfully. Then, tap **Complete**.

### 8.11.2 Download Logs


Users can download and share system logs.

- 1. Choose More > Download Log.
- 2. Select the types of logs and tap Download.

3. Wait for the download to complete. Then, tap **Confirm** to go to the list of downloaded files

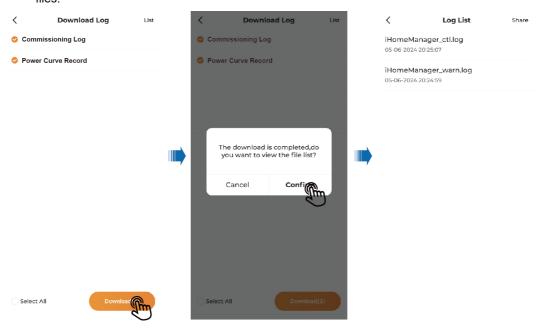

- 4. Tap **Share** in the upper right corner and select the types of logs to be shared.
- 5. Tap Share and choose how to share the logs.

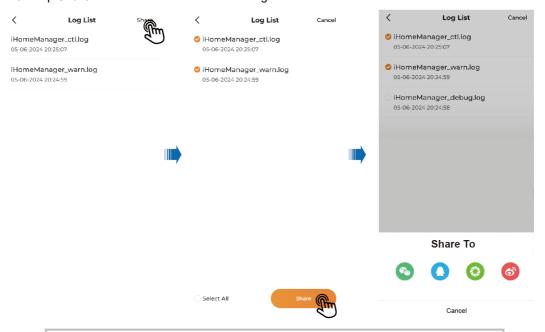

Please switch to mobile data or connect your mobile device to a home network for log sharing.

### 8.11.3 Network Configuration

After logging in, go to the **Home** screen, and tap in the upper right corner to go to **Network Configuration**.

- · Check the network status
  - The device is connected to the home network.
  - The device is not connected to any home network.
- WLAN or Ethernet connection
   For details, please refer to 8.4.1 Network Configuration.

### 8.11.4 Server Settings

After logging in, tap **Home** in the upper right corner of the screen to select a server.

- · Check the connection to cloud service
  - Connected to cloud service.
  - Not connected to any cloud service.
- · Select a server
  - **1.** Tap ...
  - 2. Select a server based on the location of the device.
    - Mainland China: Chinese Server.
    - Europe: European Server.
    - Australia: Australian Server.
    - Other countries/regions: International Server.

### 8.11.5 Certificate Management

supports the import of HTTPS certificates and Modbus TCP certificates.



The function is supported in versions iHomeManager-SV930.001.00.P006 and above.

### **Pre-configured Certificate Risk Statement**

Certificates are pre-configured on SUNGROW devices during the manufacturing process as their necessary identity credentials. Regarding the use of these pre-configured certificates, please note the following:


 Pre-configured certificates are only used to establish an initial secure channel for the device to access the customer network during the deployment process. SUNGROW does not promise or guarantee the security of the pre-configured certificates.




- SUNGROW does not promise or guarantee the security of the pre-configured certificates when used in services. It is recommended that users replace them with their own secure certificates.
- The validity period for the HTTPS and Modbus TCP certificates pre-configured by SUNGROW is 30 years. Once a pre-configured certificate expires, the related service will be interrupted.
- If users choose to use their own certificates, it is recommended that they
  properly manage the certificate lifecycle. Certificates with a short validity period are
  recommended to ensure security.

### **Steps**


After logging into the device, go to the homepage, choose More > Certificate
 Management to import user certificates.

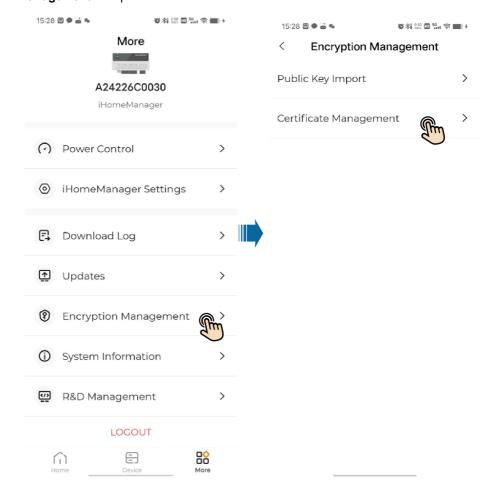

- 2. On the Certificate Management page, select the type of certificate to be imported.
  - HTTPS Certificates: On the Certificate Management page, select HTTPS
     Certificate, verify certificate details, and tap Certificate Update. Upload the
     certificate file and private key file on the Import Certificate page, then tap Confirm.

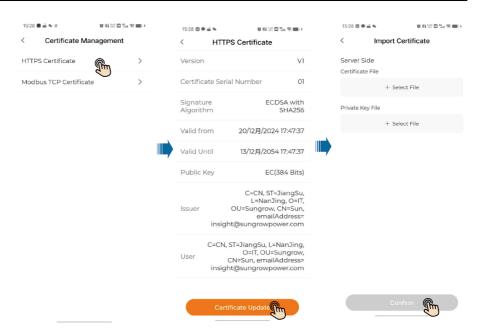

Modbus TCP Certificates: On the Certificate Management page, select Modbus
TCP Certificate, select the Server Side or Client tab, verify certificate details, and
tap Certificate Update. Upload the certificate file and private key file on the Import
Certificate page, then tap Confirm. Take the Server Side as an example:

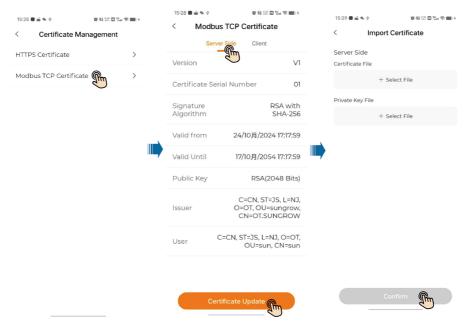

### 8.11.6 User Management

### 8.11.6.1 Change Account Password

The password can be reset in the following ways:

- 1. Press the RST key on the front of the device 5 times in a row to reset the password to the initial. For login steps, see 8.2.2 Local Access.
- Log in to iSolarCloud to reset your password. For details, see Reset password on iSolarCloud.
- **3.** Press and hold the RST key for 30 seconds to factory reset the device. The password will be reset to the initial, and the history data will all be deleted.

## **A** CAUTION

Please proceed with factory reset with caution.

### Reset password on iSolarCloud

- 1. Log in to the iSolarCloud App with the email address provided when creating a plant (see 8.4.5 Create Plant).
- 2. Select the plant where the iHomeManager is located.
- 3. Choose the **Device** tab on the top and select the target iHomeManager.
- 4. Choose Settings > System Parameters.
- 5. Set Reset Login Password to Enable, and tap Confirm.





### 8.11.6.2 Logout

- 1. Choose More.
- 2. Go to the bottom of the list and choose Logout > Confirm.
- You will then go back to the login screen of the iSolarCloud App. See 8.2.2 Local Access for how to log in to the App.

# 9 Troubleshooting

# **A** DANGER

Device damage or system fault may lead to electric shocks or fire.

- Visually inspect the device for damage or other potential hazards before operation.
- · Check that the external devices and electrical connections are in a safe state.

### 9.1 Fault List

Log in via local access to the iSolarCloud App, and go to **Home > Device**. Then, tap **Filter** in the upper right corner and select a fault status as the filter criteria. Devices with faults will then be shown on the screen.

Tap the fault status to go to the fault list and check the fault details.

# 9.2 Fault Description

Fault ID	Fault Name	Fault Cause	Suggestions
1	Device Communic ation Abnormal	The iHomeManager cannot communicate with the device connected to it because the communication link is abnormal.	<ol> <li>Go to "Device Self-Test" on the App for an automatic communication link check, and take action as per the onscreen instructions.</li> <li>If the fault occurs repeatedly after troubleshooting, contact SUNGROW Customer Service.</li> </ol>



If there is a fault in the device connected to the iHomeManager, perform troubleshooting by referring to the fault list chapter in the device's user manual.

9 Troubleshooting User Manual

### **9.3 FAQs**

# **A** DANGER

Before inspecting any terminal or wiring, first power off the device and verify that the terminals are all voltage-free. Failure to do so may result in electrical shocks.

# Question 1: WiNet/Charger goes offline

Possible cause	Suggestions
The router is rebooting.	Wait for the router to finish rebooting. The device can then connect to the router again.
(Wireless connection) The WLAN communication quality is poor.	<ol> <li>Check that the WiNet/charger is successfully connected to the router.</li> <li>Check the distance between the WiNet/charger and the router. Adjust the position of the router properly if needed.</li> </ol>
(Wired connection) The Ethernet cable is loose or disconnected.	Check that the network cable between the WiNet/ charger/iHomeManager and the router is securely connected.
Modbus local port 516 is disabled, or SSL encryption is not enabled for the port	Log in to the WiNet-S2 or the charger via local embedded Web access and enable Port 516 and SSL encryption.

### Question 2: Inverter goes offline

Possible cause	Suggestions
The RS485 cable is loose	Check that the RS485 cable between the
or disconnected.	iHomeManager and the inverter is securely connected.

# Question 3: iHomeManager cannot find the device

Possible cause	Suggestions
The connected device is offline.	Check the device connection. See Question 1: WiNet/ Charger goes offline and Question 2: Inverter goes offline.
The device is connected to the router's WAN/LAN auto-adaptation port. The network connection	<ol> <li>Check that the router is connected to an external network.</li> <li>If it is not connected to an external network, go to the router configuration page and set the WAN port number.</li> </ol>

User Manual 9 Troubleshooting

Possible cause	Suggestions
cannot be established immediately.	
The IP addresses of iHomeManager and WiNet/charger are not in the same network segment because the routers are cascaded.	<ol> <li>It is recommended to use one router for networking.</li> <li>Restart the router to which the device is connected, and initiate a device search again.</li> <li>Go to the configuration page of the router to which the device is connected and check the IP address assignment. If the IP addresses are not in the same network segment, re-configure the router.</li> </ol>

# Question 4: iHomeManager is disconnected from the cloud

Possible cause	Suggestions
The router is rebooting.	Wait for the router to finish rebooting.
The router is not connected to an external network.	<ol> <li>Check that the router is connected to an external network.</li> <li>Check whether the home network service is suspended by the operator due to overdue balance.</li> </ol>
(Wireless connection) The WLAN communication quality is poor.	<ol> <li>Check that the iHomeManager is successfully connected to the router.</li> <li>Check the distance between the iHomeManager and the router. Adjust the position of the router properly if needed.</li> </ol>

# Question 5: iHomeManager hotspot disappears

Possible cause	Suggestions
The hotspot turns off automatically if no device is connected to it for over 1 hour.	Press the RST key three times in a row to turn on the hotspot. The mobile phone can then find and connect to the WLAN hotspot.
The phone is located too far from the iHomeManager.	Make sure the phone is within the coverage of the device's WLAN signal.



# 10 Maintenance

Regular routine maintenance is the guarantee for the normal operation and long service life of the iHomeManager.

### **A** DANGER

Before maintenance, be sure to power off the device and ensure the terminals are all voltage-free. Otherwise, it may result in electric shocks!

### 10.1 Maintenance Notices

### **A** DANGER

Do not open the product in case of any peculiar smell, smoke, or anything abnormal with the product exterior during maintenance. Perform service or restart the product by following the troubleshooting suggestions only if there is no such abnormal symptom.

Risk of personal injury or device damage due to improper servicing! Be sure to use specialized insulated tools when performing high-voltage operations.

### **A** CAUTION

To prevent irrelevant personnel from operating the product by mistake or other accidents, please set up highly visible warning signages around the product or fence off a warning zone.

### NOTICE

Touching the PCB or other static-sensitive components may cause damage to the device or component.

- · Do not touch the circuit board unless it is necessary.
- Observe the provisions for protection against electrostatic discharge and wear anti-static wrist straps.

User Manual 10 Maintenance

### 10.2 Routine Maintenance

### **NOTICE**

To minimize the risk of electric shocks, do not perform maintenance operations that are not specified in this manual. If necessary, contact SUNGROW for maintenance. Losses arising from failure to observe this instruction will not be covered by warranty.

- If the product needs to be replaced during the operation and maintenance, please contact SUNGROW.
- Use only the original parts and components sold or recommended by SUNGROW when replacing any part or component of the product.

To extend the product's service life, be sure to keep a record of maintenance logs.



- Product maintenance and inspection must only be performed by qualified electrical engineers, and the maintenance work must be recorded in maintenance reports or logs.
- If, due to long-term operation, signs of aging or other hidden dangers are found on the product or its components, contact SUNGROW in time.



If the device encounters an exception and cannot function properly, contact Sungrow O&M personnel to replace the system via the USB port for restoration.

Inspection Item	Inspection Method
Operating environment	<ul> <li>Check whether any equipment that produces strong electromagnetic interference is placed around the product.</li> <li>Check whether there is any heat source around the product.</li> <li>Check whether there are corrosive materials around product.</li> </ul>
Hardware maintenance	<ul> <li>Check whether the supply voltage is normal.</li> <li>Check whether wiring terminals are securely connected.</li> <li>Check whether the ground connections are properly made.</li> </ul>
System cleanliness	<ul> <li>Check whether the product enclosure and its components and parts are clean.</li> <li>Check whether the product's heat dissipation paths are all clear without blockage. If the path is blocked by foreign objects, clean it in time.</li> </ul>

10 Maintenance User Manual

Inspection Item	Inspection Method
Connection of terminals, copper bars, and cables	<ul> <li>Check whether the screws on the terminals are loose. In case the terminal gets loose, tighten it properly using a screwdriver.</li> <li>Check whether the copper bars or screws are oxidized and discolored.</li> <li>Check the product's electrical connections and the arrangement of cables.</li> </ul>
Software maintenance	<ul> <li>Inspection after the device is powered on:</li> <li>Log in to the App and check the device communication.</li> <li>Log in to the App and check the parameter settings.</li> <li>Log in to the App and check the software version.</li> </ul>

# 11 Appendix

# 11.1 Technical Data

Technical Data	iHomeManager
Basic data	
Number of devices supported	Max. 7 (inverters: ≤5, charger: 1, heat pump: 1)
Communication	
RS485	2, communication distance ≤1000m
Ethernet port	1, 10/100Mbps auto-adaptive, communication distance ≤100m
Digital input	5 (4 for dry contact, RC for emergency stop via short-circuit)
Digital output	2, dry contact output
External CT connection	2
Accuracy of built-in meter	Class 1 (error ≤ 1%)
WLAN communication	802.11 b/g/n/ax, 2.4GHz
Antenna	Supports built-in and external antennas
Power supply	
AC input	Three-phase three-wire: 415Vac (L-L) Three-phase four-wire: 415Vac (L-L), 230Vac (L-N)
Power consumption	≤9W
Ambient conditions	
Operating temperature	-30°C to 60°C
Operating humidity	0% to 95%, non-condensing
Max. operating altitude	4000m

11 Appendix User Manual

Technical Data	iHomeManager
Ingress protection rating	IP20
Mechanical data	
Dimensions (width * height * depth)	108mm * 95mm * 65mm
Weight	□ 800g
Mounting Method	Guide rail mounting or wall mounting
Compliance	
Certification	CE

# 11.2 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

### **Evidence**

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

### **Conditions**

- · After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

### **Exclusion of Liability**

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- · The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.
- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.

User Manual 11 Appendix

• The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.



Product data such as product dimensions are subject to change without prior notice. The latest documentation from SUNGROW should take precedence in case of any deviation.

### 11.3 Contact Information

In case of questions about this product, please contact us.

We need the following information to provide you the best assistance:

- · Model of the device
- Serial number of the device
- · Fault code/name
- · Brief description of the problem

For detailed contact information, please visit: <a href="https://en.SUNGROWpower.com/contactUS">https://en.SUNGROWpower.com/contactUS</a>



Sungrow Power Supply Co., Ltd.