

User Manual

DC Charger IDC30E



WWW.SUNGROWPOWER.COM IDC30E-UEN-Ver17-202508

All Rights Reserved

All Rights Reserved

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

Trademarks

SUNGROW. and other Sungrow trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

Software Licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

Privacy Protection

- Information contained in this manual is the private property of Sungrow Power Supply Co., Ltd. Internal reproduction is allowed only for product evaluation or other appropriate purposes.
- We declare that the network account and password data stored in the equipment system are only used for remote control and monitoring of the equipment and will not be transmitted to any third-party data platform without your permission.

Disposal

After the service life of the charger ends, please dispose of it in accordance with the applicable electrical waste disposal act at the installation location. It can also be returned to Sungrow, but the relevant expenses shall be borne by your party.

About This Manual

The manual mainly contains product information, as well as guidelines for installation, operation, and maintenance.

Target Group

This manual is intended for professional technicians who are responsible for installation, operation, and maintenance of the charger, and users who need to check charger parameters.

A professional technician is required to meet the following requirements:

- Know electronic, electrical wiring, and mechanical expertise, and be familiar with electrical and mechanical circuit diagrams.
- Have received professional training related to installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- · Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

EMC

In some cases, even if the equipment is in accordance with the standard emission limits, it can have an impact in certain application areas (some sensitive equipment is placed in the same location; the equipment is installed close to a radio or TV receiver), and the operator shall take appropriate action to correct this situation.

How to Use This Manual

Please read this manual carefully before using the product and keep it properly at a place for easy access.

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from support.sungrowpower.com or sales channels.

1 Safe Instructions

1.1 Symbols

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance efficiently.

A DANGER

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

M WARNING

Indicates potential moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

A CAUTION

Indicates potential low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunction or financial losses.



"NOTE" indicates additional information, emphasized content, or tips that may help you solve problems or save time.

Please pay attention to the danger warning signs on the machine body at all times. The signs include:

table 1-1 Symbols description

audio 1 1 Cymbolo docompach		
Symbols	Description	
	Operation by qualified personnel only.	

Symbols	Description	
	The temperature here is higher than the acceptable range for the human body. Do not touch it without protection.	
i	Please read the manual before any operation.	
A C 10min	Hazardous voltage still exists after the device stops. Do not conduct any operation on the device immediately. Wait for at least 10 minutes.	

1.2 Packaging, Shipping and Storage

Packaging

NOTICE

The charger is wrapped tightly with wire drawing film and protected by foam blocks. It is packed in cardboard and underpinned by a wooden bottom base.

Shipping

NOTICE

During shipping, the charger shall be packed firmly and intact with cardboard and wooden bottom support, the loading and unloading directions are clearly marked, and the charger shall not be stored and shipped upside down.

During transport, make sure that the equipment is firmly fixed in order to avoid violent shaking and bumps that damage the packaging and its content.

After arrival of goods, check for transport damage and, if any, contact the shipping company or SUNGROW.

Check if the content inside the package matches the delivery list.

A DANGER

Non-professional personnel shall not disassemble the components.

4

Storage

NOTICE

The device shall be stored in a dry, clean, and well-ventilated place, free from harmful gases.

Storage temperature: -40°C~+70°C

Ambient temperature at startup: -35°C~+55°C

Ambient temperature at full power: -25°C~+50°C

Relative humidity: 5%~95% non-condensing

Do not store it near corrosive articles.

1.3 Operations

A DANGER

High voltages are present during operation and could cause electrical shock, resulting in death, serious personal injury, or serious property damage. Follow the safety instructions listed in this manual and other relevant documentation.

When the device is working, the temperature around the heat dissipation air outlet is high and there is a risk of burns. Please do not touch it.

When operating the device, local regulations and specifications shall be observed.

No extension cables shall be used when connecting an electric vehicle to an electric vehicle power supply device.

Only connect electric vehicles and their charging equipment. Do not connect any other loads (electric tools, etc.).

After charging, please put the charging connector back into the connector socket to prevent unnecessary exposure to contamination or moisture.

Do not bend, squeeze or roll the charging connector to avoid mechanical damage.

Do not expose the surfaces of the charger to heat, dirt, or water.

It is strictly prohibited to use the charger when the charging connector or the charging cable is defective, appears cracked, frayed, broken, or otherwise damaged. If any anomaly is found, please, refer to the seller or SUNGROW

If there is any abnormality during use, please press the emergency stop button immediately to cut off the power supply.

In case of a thunderstorm, please charge carefully.

Children shall not approach or use the charger during the charging process to avoid injury.

During a thunderstorm, please, charge carefully and be aware of the potential risks.

When charging an electric vehicle with a charger, read carefully the relevant tips and instructions of the vehicle.

1.4 Maintenance and Replacement

A DANGER

High voltages are present during operation and could cause electrical shocks, resulting in death, serious personal injury, or serious property damage. Before any maintenance work, the device must be powered off and operated in strict accordance with the safety precautions listed in this manual and other relevant documentation.

Maintain the equipment, only once you have familiarized yourself with the contents of this manual and with suitable tools and test equipment.

Before performing maintenance work, power down the device and wait at least 10 minutes before operating the device.

During maintenance, avoid the presence of unrelated persons at the maintenance site, and place temporary to warn signs or barriers to isolate them.

Do not power the device until you have confirmed that any faults affecting the safe performance of the device have been removed.

Observe the ESD protection specifications during maintenance.

Keep the charging connector clean and dry, and wipe it with a clean, dry cloth if it is dirty. Do not touch the charging connector's pins with your hands while it is on. It is necessary to regularly check whether there is damage to the connector, and check whether the enclosure and surrounding components have visible signs of damage. (Visual inspection)

2 Product Introduction

2.1 Introduction

The 30kW DC charger (hereinafter "Charger") is used for DC charging of electric vehicles (EVs) and can be wall-mounted, pole-mounted, or cart-mounted, with the following advantages:

Technology leadership

Adopting the world's leading power supply technology and design concept, the charger is designed to provide safe, reliable, and controllable DC power for electric vehicles.

Enhanced features

It is featured active power correction, high efficiency, high power density, high reliability, ultra-low standby power consumption, intelligent control, and excellent human-computer interaction experience.

Future-proofed

With ultra-wide constant power output voltage, it can support all electric vehicles in the market and meets their charging needs.

2.2 Production Introduction

2.2.1 Appearance and Dimensions

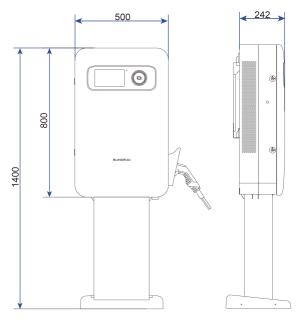


figure 2-1 Product Dimensions (in mm)

2.2.2 Internal Structure

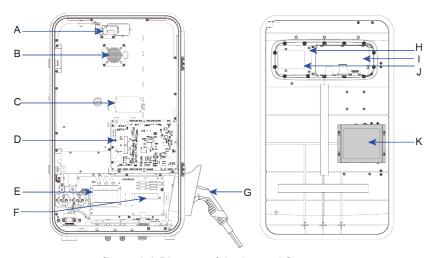


figure 2-2 Diagram of the Internal Structure

table 2-1 Internal Structure Description

No.	Name
Α	Door sensor
В	Axial flow fan
С	Insulation Monitor

No.	Name
D	CCU(Charge Control Unit) module
Е	DC Meter
F	AC input connection terminal
G	Charging connector
Н	Lamp panel
1	Display
J	Card Reader
K	TCU(Tariff and Control Unit) module

2.2.3 External Port

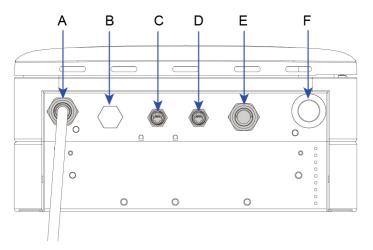


figure 2-3 Diagram of Bottom Terminals

table 2-2 Description of Bottom Terminals

No.	Name
Α	DC charger cable outlet
В	Air outlet
С	RSVD port
D	LAN port
Е	AC cable inlet
F	4G & WiFi antenna

2.2.4 LED Indicator Signals

table 2-3 Indicator status

The indicator color	Indicator Effect	Rema rks	Meaning
Blue indicator	Blue indicator is constantly on	Normal	Fully charged (include the charging connector is connected to but not charge the vehicle)
	Blue indicator flashes, on for 1s and off for 1s; circulating	Normal	Charging
Red indicator	Red indicator is constantly on	Abnor mal	Fault
Green indicator	Green indicator is constantly on	Normal	Standby

2.3 Unpacking and Storage

2.3.1 Unpacking and Inspection

Each device is thoroughly tested and carefully inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection of the device.

- Check the packaging case for any visible damage. If damage is confirmed please take pictures before unpacking the product.
- · Check to make sure that the scope of delivery matches the packing list.
- · Check the inner contents for damage after unpacking.

Contact SUNGROW or the transport company in case of any damage or mismatches and provide photos to facilitate services.

Do not dispose of the original packing case. It is recommended to store the device in original packing case when the device is decommissioned.

NOTICE

After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product.

If there are problems with the above inspection items, do not install the device and contact SUNGROW as soon as possible.

If cutters is uses for unpacking, be careful not to damage the charger.

2.3.2 Packing list

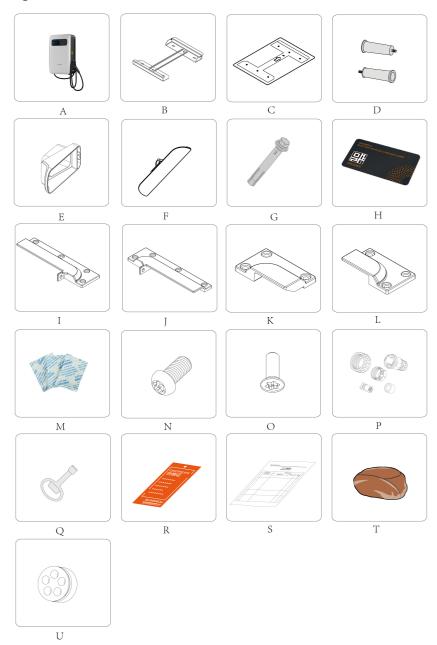


figure 2-4 Packing list

table 2-4 Packing list

No.	Name	Unit	No.
Α	Integrated single-connector DC charger IDC30E	PCS	1
В	IDC30E wall-mounted weld assembly	PCS	1

No.	Name	Unit	No.
С	Positioning plate	PCS	1
D	Handrail_M12	PCS	2
E	IDC30E socket-outlet trim	PCS	1
F	IDC30E socket-outlet trim B	PCS	1
G	Expansion bolt	PCS	6
Н	M1 card	PCS	2
I	Wall-mounted components-upper left	PCS	1
J	Wall-mounted components-upper right	PCS	1
K	Wall-mounted components-lower left	PCS	1
L	Wall-mounted components-lower right	PCS	1
М	Montmorillonite desiccant	PCS	1
N	Hexalobular socket pan head tamper proof screws M5X12, SUS304	PCS	20
0	Hexalobular socket countersunk head tamper proof screws M4X12, SUS304	PCS	1
P	Modular RJ45 plug	PCS	2
Q	Keys	PCS	2
R	Certificate of Conformity	PCS	1
S	Test report	PCS	1
Т	Fireproof mud	PCS	1
U	Five-hole waterproof ring	PCS	1

2.3.3 Storage

Proper storage is required if the charger is not to be installed immediately.

- Store the charger in the original packing case with the desiccant inside.
- The storage temperature must be always between -40°C and+70°C, and the storage relative humidity must be always between 5% and 95%, non-condensing.
- In case of stacking storage, the number of stacking layers should never exceed the limit marked on the outer side of the packing case.
- · The packing case should be upright.
- If the charger needs to be transported again, pack it tightly before loading and transporting it.
- Do not store the charger in places with items that may affect or damage the charger.
- Store the charger in a clean and dry place to prevent dust and water vapor exposure.

- Do not store the charger in places with corrosive substances or susceptible to rodents and insects.
- Carry out periodic inspections. If any insect or rodent bites are found, replace the packaging materials in due time.
- If the charger has been stored for more than a year, inspection and testing by professionals are required before it can be put into operation.

NOTICE

Please store the charger according to the storage requirements. Product damage caused by failure to meet the storage requirements is not covered by the warranty.

2.4 Installation

A WARNING

Respect all local standards and requirements during mechanical installation.

2.4.1 Safety

A DANGER

Make sure there is no electrical connection before installation.

In order to avoid electric shock or other injury, make sure that holes will not be drilled through and interrupting any electricity or plumbing installations.

MARNING

Poor installation environment will affect system performance!

Install the charger in a well-ventilated place.

Ensure that the heat dissipation system or vents are not blocked.

Do not install the charger in an environment with smoke, flammable and explosive objects.

A CAUTION

Improper handling may cause personal injury!

When moving the charger, be aware of its weight and keep the balance to prevent it from tilting or falling.

Wear proper protective equipment before performing operations on the charger.

2.4.2 Installation Tools

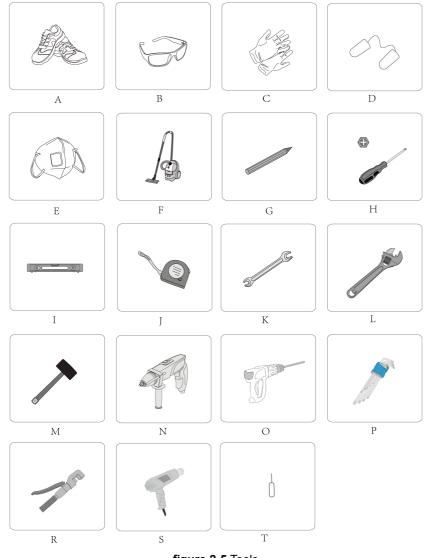


figure 2-5 Tools

table 2-5 Tools

 
Name
Working shoes
Goggles
Insulating gloves
Earplugs
Dust proof mask
Vacuum cleaner
Marker
Phillips screwdriver
Level
Measuring tape
No.13 wrench, No.19 wrench
French wrench
Rubber hammer
Electric drill
Cable drilling tool: Ø12/Ø18
Pan head tamper proof wrench set
Hydraulic clamp
Hot air blower
SIM card ejector pin

2.4.3 Installation Requirements

Installation Environment Requirements

The device should be installed in an environment that meets the following requirement:

- Please consult SUNGROW before installing the device outdoors in areas prone to salt damage, which mainly are coastal areas within 500 meters of the coast. The sedimentation amount of salt spray is correlated to the characteristics of the seawater, sea winds, precipitation, air humidity, topography, and forest coverage in the adjacent sea areas, and there are substantial differences between different coastal areas.
- Please install the device in a place with proper temperature and humidity. The allowable temperature and humidity range are shown in the figure below:





Installation Clearance Requirements

Reserve ample clearance (see the following figure for details) on all sides of the charger to ensure well heat dissipation and convenient operation and maintenance.

When multiple chargers are to be installed in the chosen location, it is recommended to consider the width of the parking space.



Top :200mm Bottom:500mm Front:300mm Left and right sides:1000mm Clearance:2500mm

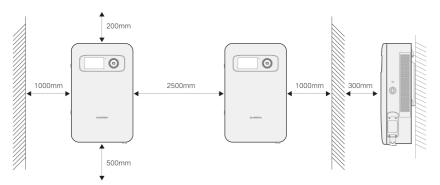


figure 2-6 Min. recommended installation clearance

⚠ DANGER

Do not block the air inlet and outlet of the charger, charger damage may occur if otherwise.

2.4.4 Pre-installation Preparation

2.4.4.1 RCD Requirements

A residual current device (RCD) should be set between the charger and the grid. Please use an RCBO or an RCCB+MCB assembly. The parameter requirements are listed as follows:

table 2-6 Requirements for RCD Parameters

Parameters	Value
Number of poles	4P
Type of pole	3P+N /4P
Thermomagnetic release characteristic	С
Rated breaking capacity Icn	6 kA
Rated current In	63


Parameters	Value
Rated voltage Ue	400V AC




All RCD installation requirements and specifications must comply with local regulations.

2.4.4.2 AC Input Cable

  The five-core copper-conductor cable is recommended.





Outdoor five-core copper wire cable

Outdoor single-core copper wire cable

The cable colors in figures in this manual are for reference only. Please select cables according to local cable standards.

table 2-7 AC Cable Requirements

Cable	Required Cable Diameter (mm)
Outdoor five-core copper wire cable	18-25
Outdoor single-core copper wire cable	≤7.5

 


The maximum input current of the charger is 52 A. It is recommended to use copper core cables with a cross-sectional area of at least 10 mm² for wiring.

2.4.4.3 OT terminal

To ensure the cable is securely connected to the wiring terminal, it is needed to crimp the corresponding terminal on the cable after leading the cable through the AC cable inlet. Poor contact may lead to overheating and even safety incidents.

OT terminals (not included in the delivery scope) are required for fixing AC cables to the terminal block. Purchase the OT terminals according to the following requirements.



2.4.4.4 Ethernet Cable Requirements

Please use the 8-core Cat5e or Cat6 Ethernet cable.

2.4.4.5 SIM Card Requirements

- If you choose to connect to the internet via 4G, you will need to install a SIM card in the device. Please purchase the SIM card yourself.
- It is recommended to use a SIM card with a data plan of 150MB per month. Once the
 monthly data is exhausted, the device's internet connection will be disconnected. Please
 purchase additional data in a timely manner to restore the network connection.

2.4.5 Wall-Mounted Installation



To close or open the door on site, press the front door panel firmly and then turn the key.

2.4.5.1 Install the Wall-Mounting Bracket

- **step 1** Place the positioning plate horizontally on the wall surface, and use a marker to mark the corresponding hole position;
- **step 2** Use an electric drilling tool to drill 12 mm diameter holes at the marked position with a hole depth of 70mm;
- step 3 Put the expansion pipe with specification of M8*60mm into the hole;
- step 4 Use expansion bolts to fix the bracket on the wall and tighten it with a French wrench;

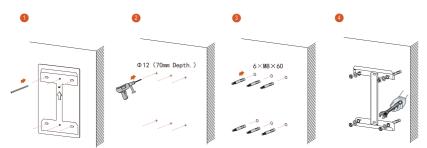


figure 2-7 Steps to drill holes

2.4.5.2 Install Charger Brackets

- step 1 Place the charger back-up on a foam or soft cloth to prevent damage to its casing;
- **step 2** Attach the upper and lower brackets (4 in total) on the back of the charger with 14*M5*12 hexalobular socket pan head tamper proof screws;



figure 2-8 Charger brackets installation

- - End

2.4.5.3 Install the Handles

- step 1 Place the charger flat on the ground and keep it steady;
- **step 2** Remove the keyhole plug on both sides of the charger to expose the installation holes of the handles;
- **step 3** Align the handles with the handles' installation hole and tighten them clockwise to secure them to the charger.

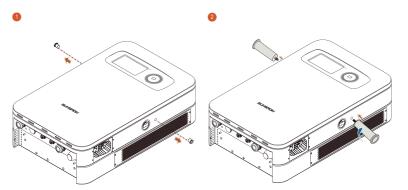


figure 2-9 Handrail installation

2.4.5.4 Charger Installation

- step 1 Hold each handle with both hands and put the charger gently close to the wall bracket;
- **step 2** Align the bracket on the back of the charger with the position of the wall bracket and hang this accordingly from top to bottom.

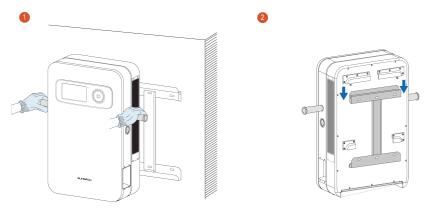


figure 2-10 Charger installation

- - End

2.4.5.5 Remove the Handles

- **step 1** Turn the handles counterclockwise out of the charger to expose the handles' installation hole on the charger;
- step 2 Align the keyhole plugs with the handles' installation holes and plug them back into the charger.



figure 2-11 Installation of the keyhole plug

2.4.5.6 Secure the Charger

Refer to the figure below, attach the charger to the wall bracket with M5*12 hexalobular socket pan head tamper proof screws, recommended torque ≤1.2N•m.



figure 2-12 Secure the charger

2.4.5.7 Install the Charging Connector Socket

- step 1 Place the connector socket horizontally at the mounting position;
- step 2 Use M5*12 hexalobular socket pan head tamper proof screws to attach the connector socket to the charger , recommended torque ≤1.5N•m;
- **step 3** Put an orange plug on the bottom of the connector socket and secure it with M4*12 hexalobular socket countersunk head screws;
- **step 4** Confirm that the connector socket is mounted firmly and then holster the charging connector into the charger's socket.

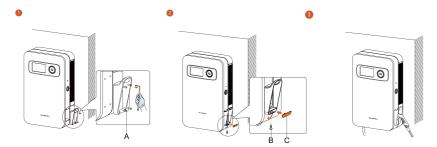


figure 2-13 Installation of the connector socket

table 2-8 Accessories to install the connector socket

No.	Name	Quantity
Α	M5*12 hexalobular socket pan head tamper proof screws	4
В	M4*12 hexalobular socket countersunk head screws	1

No.	Name	Quantity
С	Orange plug	1



The hexagon socket screws mentioned in this manual are all fastened or removed by flower-shaped tamper proof wrench specified in "figure 2-5 Tools"

- - End

2.4.5.8 Connect the Cable Connection Terminal

- **step 1** Remove the AC waterproof connector from the charger. Select the appropriate waterproof ring for the connector based on the AC cable type.
 - i. If the multi-core cable is adopted, use the single-hole waterproof ring that comes with the AC waterproof connector.

 


figure 2-14 Single-hole Waterproof Ring

ii. If the single-core cable is adopted, use the five-hole waterproof ring included in the packing list.


 


figure 2-15 Five-hole Waterproof Ring

step 2 Lead the cable wires through the AC waterproof connector in the proper order one by one.

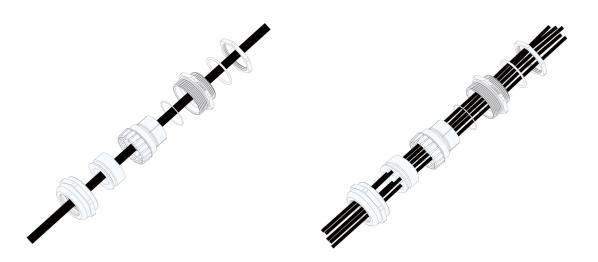


Recommended strip length for the multi-core cable

Recommended strip length for the single-core cable



If the charger is mounted on a pole, you can use a bracket to secure the connector to prevent it from falling down to the bottom of the pole.

step 3 Strip the protection layer and insulation layer by specific length, as described in the figure below;

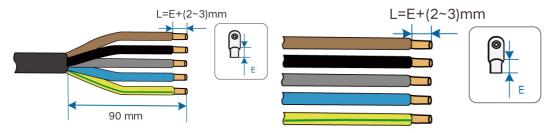

Recommended strip length for the multi-core cable Rec

Recommended strip length for the single-core cable

NOTICE


Please strip the wire by the recommended strip length; otherwise, the sealing performance of the waterproof connector may get affected.

- **step 4** Insert the copper core of the stripped end of the wire into the copper lug of OT terminal and press it with a terminal crimping machine;
- **step 5** Select a heat-shrink tubing that matches the diameter of the wire, insert it to the terminal crimping position, and then tighten the heat-shrink tubing with a hot air blower;




figure 2-16 Terminal crimping

step 6 Remove the cable clamp.

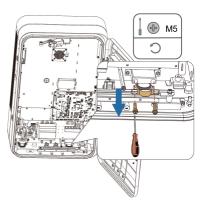

step 7 Lead the crimped AC cable into the AC cable inlet. Then, fit back the waterproof connector, and slightly tighten the swivel nut. Please make sure the insulation layer of the cable, where it is fastened by the waterproof connector, is intact.

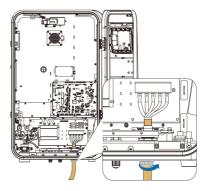

step 8 Refer to the figure below, use M5 screws to attach the terminal to the specified position with a tightening torque of $3\pm0.2~N\cdot m$.


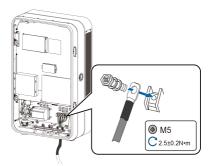


figure 2-17 Connect the cable connection terminal




When transmission distance within 400m: 10mm² copper core cable is recommended.

step 9 Use an open-end wrench with an opening of over 40mm to tighten the swivel nut on the AC waterproof connector. Then, seal off the cable outlet of the waterproof connector with fireproof mud.

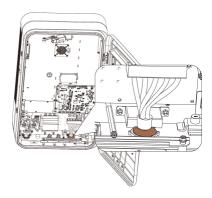

step 10 Re-install the cable clamp.

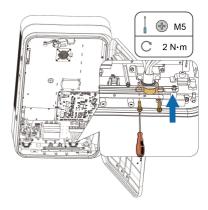


- - End


2.4.5.9 Ethernet Cable Connection

If an Ethernet cable is used for accessing IDC30E to the network, proceed with the following steps.


step 1 Unscrew the sealing nut from the communication connector, and remove the sealing rubber washer inside.

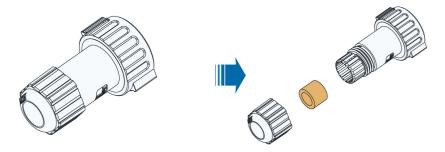


step 2 Push the cable through the parts in order, and strip it by 10-15mm.

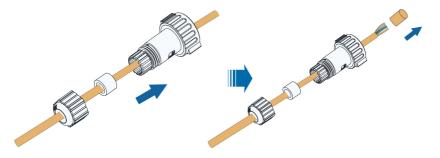


step 3 Crimp the RJ45 plug on the cable.

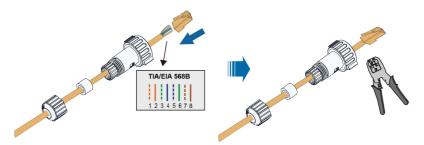

step 4 Fit back the rubber washer, and tighten the nut.

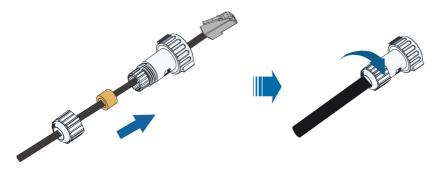

step 5 Remove the waterproof plug from the LAN port on the bottom of the charger. Insert the communication connector into the LAN port and make sure it "clicks" in place.

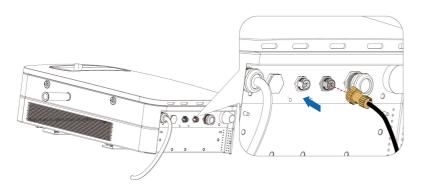

- - End

2.4.5.10 SIM Card Installation

If a SIM card is used for accessing IDC30E to the network, proceed with the following steps.

- **step 1** Take out the SIM card tray from the TCU module using an ejector pin (needs to be prepared separately).
- step 2 Put the SIM card in the tray, and push the tray back into the SIM card slot.



2.4.6 Pole-mounted Installation (Optional)

2.4.6.1 Pole Components

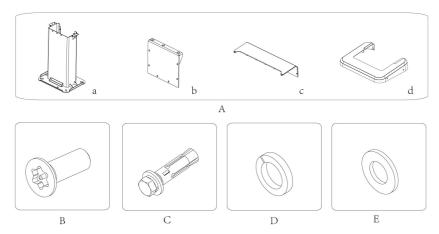


figure 2-18 Pole Components

table 2-9 Description of pole components

Name			Unit	Quantify
IDC30E pole components	а	Pole weld assembly	pcs	1
	b	Pole back cover	pcs	1
	С	Pole top cover	pcs	1
	d	Pole top cover	pcs	1
Hexalobular socket cheese head tamper proof screws		pcs	10	
Expansion bolt M12*110		pcs	10	
Standard spring washer		pcs	10	
Flat washer of Class A		pcs	6	
	IDC30E pole components Hexalobular soc screws Expansion bolt I Standard spring	IDC30E pole b components c d Hexalobular socket ch screws Expansion bolt M12*1 Standard spring washe	IDC30E pole book cover components c Pole top cover d Pole top cover Hexalobular socket cheese head tamper proof screws Expansion bolt M12*110 Standard spring washer	A

2.4.6.2 Recommended Construction Scheme for Charger Foundation

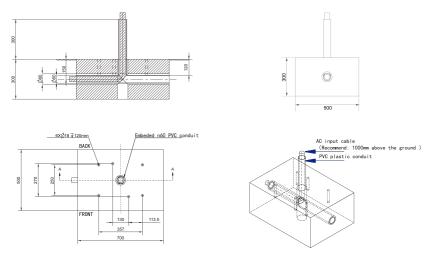


figure 2-19 Charger foundation diagram



The n60 PVC conduit is embedded in the foundation, and the AC input cable passes through the PVC plastic conduit for subsequent connection with the internal circuit of the charger.

It is recommended that the AC input cable be 1000mm above the ground.

2.4.6.3 Remove the Cover Plate

- **step 1** Remove the set screws of the base cover plate of the charger;
- step 2 Pull the base cover plates out;
- step 3 Remove the set screws of the cover plate on the back of the charger and remove the back cover.



figure 2-20 Remove the back-cover plate

table 2-10 Accessories to remove the back-cover

No.	Name	Quantity
Α	M5*14 hexalobular socket countersunk head screws	6
В	M5*12 hexalobular socket pan head tamper proof screws	6

- - End

2.4.6.4 Install the Mounting Pole

- **step 1** Place the pole on the foundation and mark the drilling hole locations;
- **step 2** Use cable drilling tool to drill holes in the locations you marked with a hole diameter of 18mm and depth of 120mm;
- step 3 Insert the expansion bushing M12*110 into the hole;
- step 4 Use No.19 wrench to attach the pole to the foundation.

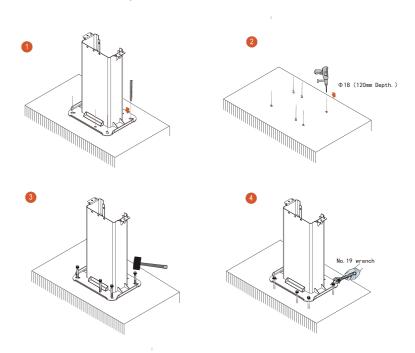


figure 2-21 Pole installation

- - End

2.4.6.5 Install the Handles

For detailed installation information, please refer to 2.4.5 Wall-Mounted Installation.

2.4.6.6 Charger Installation

- step 1 Hold the handles with both hands and lift the charger to the upper end of the pole;
- step 2 Align the charger with the positioning pin of the pole;
- **step 3** Use M8*16 hexalobular socket pan head tamper proof screws to lock the charger with the pole and confirm that they are correct before use.

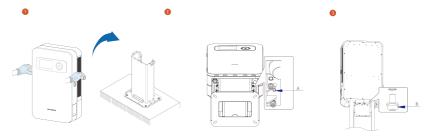


figure 2-22 Charger installation

table 2-11 Accessories to install the charger

No.	Name	Quantity
Α	Positioning pin	2
В	M8*16 hexalobular socket pan head tamper proof screws	10
	Spring	10
	Flat washer	10

- - End

2.4.6.7 Detach the Handles

For detailed installation information, please refer to 2.4.5 Wall-Mounted Installation Remove the handles.

2.4.6.8 Install the Charger Connector Socket

- step 1 Place the connector socket horizontally at the mounting position;
- step 2 Use M5*12 hexalobular socket pan head tamper proof screws to attach the connector socket to the charger,recommended torque ≤1.5N•m;

- step 3 Put an orange plug on the bottom of the connector socket;
- **step 4** Secure the orange plug with M4*12 hexalobular socket pan head screws.



figure 2-23 Install the connector socket

- - End

2.4.6.9 Connect the AC Cable

- step 1 Open the charger cabinet door;
- **step 2** Lead the AC cable through the PVC plastic conduit embedded in the foundation and pole, and then connect to the charger.

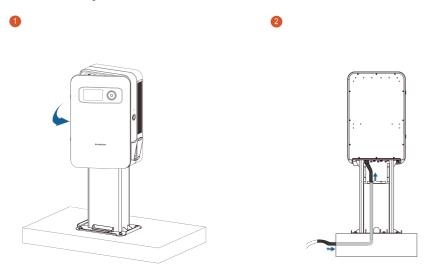


figure 2-24 AC Cable connection

- **step 3** For detailed information of AC terminal connection, please refer to 2.4.5.8 Connect the Cable Connection Terminal
- **step 4** For detailed information of network connection, please refer to 2.4.5.6 Secure the Charger and 2.4.5.6 Secure the Charger

2.4.6.10 Install the Cover Plate

- **step 1** Connect the back-cover plate of the charger and secure it with M5*12 hexalobular socket countersunk head screws;
- **step 2** Close the base-cover plate and attach it to the pole with M5*14 hexalobular socket pan head tamper proof screws.

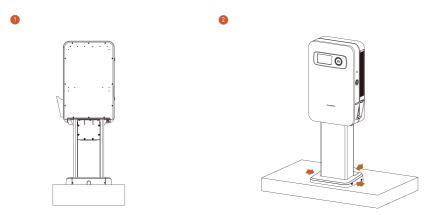


figure 2-25 Back-cover plate installation

- - End

2.4.6.11 Charger Connector Installation

Confirm that the charger connector socket is mounted firmly and then holster the charging connector into the charger.



figure 2-26 The charger connector installation

2.4.7 Movable Charger Installation (Optional)

step 1 Fix the wall-mounting bracket to the cart with M8*16 bolt assemblies.




step 2 Place the charger on a flat surface covered with protective materials such as foam or a sponge mat.

step 3 Attach the upper and lower brackets to the back of the charger with M5*12 screws.



step 4 Remove the keyhole plugs on the left and right sides of the charger, and keep them properly for later use. Fit the handles in the corresponding holes on both sides of the charger, and tighten them.

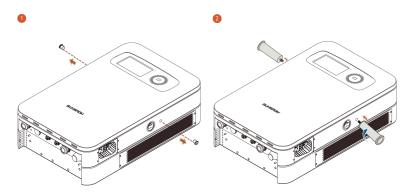


step 5 Lift the charger by the handles, and hook it on to the wall-mounting bracket.



step 6 Disassemble the handles, and fit back the plugs removed in Step 4.

step 7 Fix the upper brackets on the back of the charger to the wall-mounting bracket with M5*12 screws.

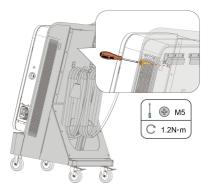

NOTICE

The upper brackets on both sides of the charger should be fixed to the wall-mounting bracket with screws, otherwise, the charger may not be secure.

- **step 8** For detailed information of AC terminal connection, please refer to 2.4.5.8 Connect the Cable Connection Terminal
- **step 9** For detailed information of network connection, please refer to 2.4.5.6 Secure the Charger and 2.4.5.6 Secure the Charger
 - - End

3 Interface Function Description

3.1 Page Introduction

3.1.1 System Check

When the charger is powered on for the first time, the program starts automatically.

step 1 Start the program to run a system check;

step 2 After 30 seconds, the touch screen enters the Start page.

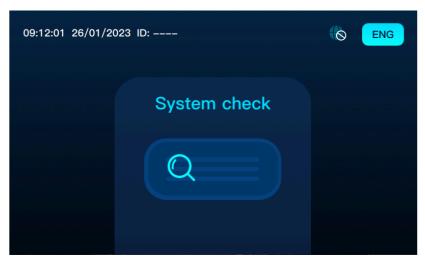


figure 3-1 System check page

- - End

3.1.2 Start Page

The Start page displays the availability of the charger.

- · Upper left corner: time, date and ID.
- · Upper right corner: network status and language.

Please plug the connector into your vehicle.

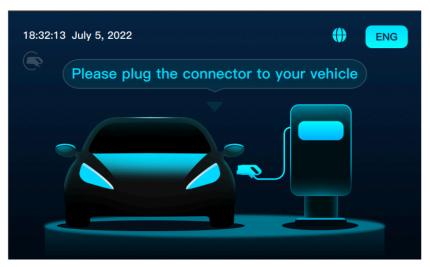


figure 3-2 The start page

If the charger is inactive for 5 minutes, the touch screen automatically enters into screensaver mode and the backlight will be dimmed. You can touch the screen to unlock.



figure 3-3 The Screen-saver Page

3.1.3 Other Pages

In addition to the Start page, five other pages indicate different states of the charger: unavailable, emergency stop, firmware updating, offline, and abnormal.

3.1.3.1 Unavailable

When the charger is unavailable, the touch screen enters the Unavailable page. A warning icon and a prompt message are shown as below:

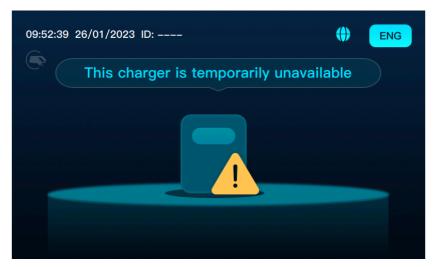


figure 3-4 Unavailable

If you plug the charging connector when the charger is unavailable, you cannot start the charging session and are prompted with a message that says the charging point is disabled.

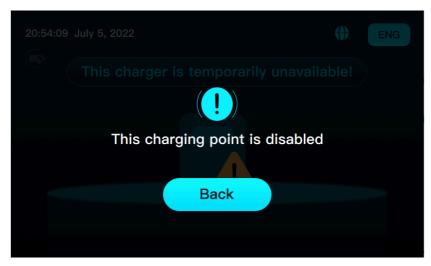


figure 3-5 Charging Point is Disabled

When the charger is available again and there are no other errors, plug the charging connector into your car and the touch screen enters the Card Swiping page according to your setting (scan to charge or Plug&Play).

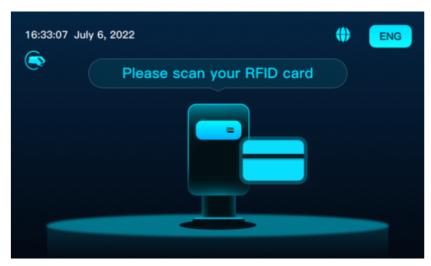


figure 3-6 Card Swiping

3.1.3.2 Emergency Stop

Press the emergency stop button to enter the Emergency Stop page. A stop icon and a prompt message are shown as below.



figure 3-7 Emergency Stop

If you plug the charging connector during an emergency stop, you cannot start the charging session.



figure 3-8 Emergency Stop Button Has Been Pressed

When the charger is available again and there are no other errors, plug the charging connector into your car and the touch screen enters the Card Swiping page according to your setting (scan to charge or Plug&Play).



figure 3-9 Card Swiping Page or Plug & Play

3.1.3.3 Firmware Update

When the firmware is updating, the touch screen enters the Firmware Update page. An updating icon and a prompt message are shown as below.



During updating, do not turn off the power or enter the operating mode. The updating progress is indicated by the progress bar.



figure 3-10 Firmware Update

- The progress bar shows the present updating progress. The updating cannot be canceled once it starts.
- During updating, if you plug the charging connector into your car, the charger does not respond, and the charging connector icon is not displayed.
- Updating is not allowed during charging and does not affect your operation. The firmware only automatically updates when the charger is available.
- After the updating completes, the system reboots in 10 seconds.



figure 3-11 Rebooting

3.1.3.4 Offline

When the charger is offline, an icon is displayed on the upper right side of the page.

The charger is offline because,

1. the network is connected, but the OCPP platform cannot be connected (!);



figure 3-12 Icon Displayed When There is a Network Connection

2. the network is disconcerted, and the OCPP platform cannot be connected (\).



figure 3-13 Icon Displayed When There is No Network Connection

3.1.3.5 Abnormal

When the charger runs abnormally, a message that says a technical issue occurred appears in the touch screen.

step 1 Click Back.

step 2 The touch screen enters the Unavailable page.

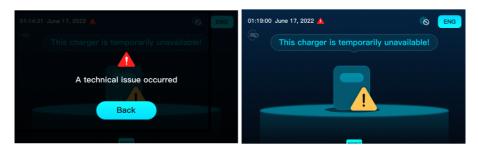


figure 3-14 A technical issue occurred



step 3 Click or plug the charging connector directly. A warning message appears.

step 4 Click Back, and the Unavailable page appears.

- - End

3.1.3.6 Language Settings

- **step 1** Click in the upper right corner to enter the Language Settings page.
- step 2 Click the flag icon to choose the corresponding language.
- step 3 Click the Confirm button to exit the Language Settings page.



figure 3-15 Language Settings



After switching languages, the language setting icon becomes the abbreviation of the first three letters of the corresponding language.

The language of the page will be switched to the selected language.

The Language Setting page appears whenever you clicked the button in the upper right corner.

- - End

3.2 Charging

3.2.1 Plug the Charging Connector

- step 1 Touch any position on the screen.
- step 2 Activate the touch screen to enter the Start page.
- step 3 Plug the charging connector into your vehicle.



figure 3-16 Your Vehicle Has Been Connected

- - End

3.2.2 Charging Method

3.2.2.1 Charging via RFID Card

Swipe Card

- 1. When the charging connector is plugged into your car, the plugging icon is lit, and the touch screen enters the Card Swiping page.
- 2. After swiping card, the touch screen enters the Authentication page, and the progress bar changes from small to large.
- 3. According to the feedback of the OCPP platform, the card-swiping result is displayed.



figure 3-17 Card Swiping

Authorization success: You can see a check and a message says that the authentication is successful.

Authorization failure: If the card cannot be used or recognized, the OCPP platform returns a different message:

- The card cannot be recognized.
- · The card is banned.
- The card is expired.
- · The card is occupied.
- Unknown error.
- The card is not in the local list (only for offline mode).



figure 3-18 Authentication /Authentication Successful

In Preparation

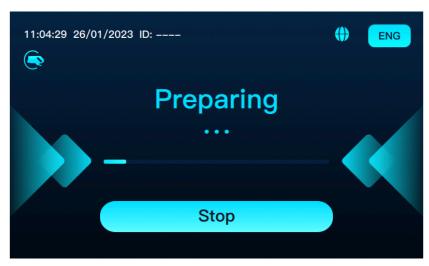


figure 3-19 Preparing

- When the charger is preparing, use the charge card or the stop button to terminate the charging session. For more information, see "Stop Charging".
- If you unplug the charging connector when the charger is preparing, the touch screen returns to the Start page.
- When the charging is interrupted or the emergency stop button is pressed, the touch screen enters the Charging Finished page. If the charging is interrupted due to errors, the touch screen enters the corresponding page after you unplug the charging connector.

NOTICE

- When the charging is interrupted during the preparation stage (such as unplugging the charging connector, malfunctioning, pressing the emergency button), the touch screen enters the Charging Finished page.
- If the charging connector is unplugged in other situations, the touch screen enters the Start page.

During Charging

During charging, information is displayed on the following two screens. Click and to switch.



figure 3-20 The First Screen/The Second Screen

The First screen: Key information includes

- Charging progress (SOC)
- Battery level
- · Time used
- · Charging power
- · The Stop button
- · Message of stopping charging via RFID charge card

The Second screen: Secondary information includes

- · Real-time charging voltage
- · Real-time charging current
- Remaining charging time (displayed as "-" if not provided by the vehicle)
- · Energy delivered
- Actual power (the output power of the charger)
- Demanding power (the output power of the vehicle)



On the second screen, select on the right will display the status of the charger:

- · Charging power is limited by the charger
- · Charging power is limited by the vehicle
- · Charge at the maximum power



If the charger is inactive for 5 minutes, the touch screen automatically enters screen-saver mode and the backlight will be dimmed. You can touch the screen to exit the screen-saver mode.

Stop Charging

There are two ways to stop charging: 1. Swipe the RFID charge card; 2. Press the Stop button.

- · RFID charge card to stop
 - 1. During preparation or charging, swipe the RFID charge at any time.
 - 2. If successful, you are prompted to confirm the end of the charging session.
 - 3. Click Confirm to stop charging and the touch screen returns to the Charging Finished page.
 - 4. Click Cancel and the prompt message disappears.



If you swipe a different RFID card to stop charging, you will be prompted to use the previous RFID card.

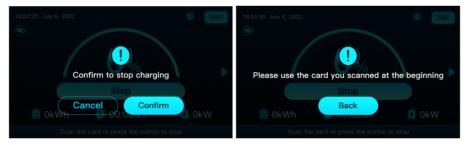


figure 3-21 Confirm to Stop Charging/Use the previous RFID Card

Press to Stop

- 1. During charging, click ———————and you are prompted to swipe RFID card to stop.
- 2. After swiping the card, the charging immediately stops and the Charging Finished page appears.
- 3. Click and the touch screen returns to the Start page.



If you swipe a different RFID card to stop charging, you will be prompted to use the previous RFID card.



figure 3-22 Scan your card to stop charging/Use the previous RFID Card



There is no stop button on the second screen, you can either return to the first screen or swipe the card to stop charging.

Charging Finished

When the vehicle is fully charged, you stop the charging session manually, or an abnormality occurs, the Stopping page appears.

After the charging session is completed, the Charging Finished page appears. Related information including total battery level and time used appears, and you are prompted to unplug the charging connector.



figure 3-23 The Stopping Page/The Charging Finished Page

During charging, if you unplug the charging connector, the touch screen enters the Charging Finished page.

Follow the prompt message and press the home button to start charging.



figure 3-24 The Charging Finished Page

3.2.2.2 Plug&Play

The overall charging process is different from that of Charging via RFID card in :

- · No RFID charge card.
- When the charging connector is plugged into the vehicle, the touch screen enters the Preparing page
- The charging starts after the preparation is completed.



figure 3-25 Preparing

Stop charging: Stop the the charging session from the vehicle or the touch screen. Press the button to stop.

Complete charging: Unplug the connector to complete the charging.



figure 3-26 Confirm to Stop Charging/ The Charging is Completed

4 Operation and Maintenance Mode

4.1 Login and Logout

4.1.1 Login

step 1 Press the date and time zone in the upper left corner of any page for 1.5 seconds.

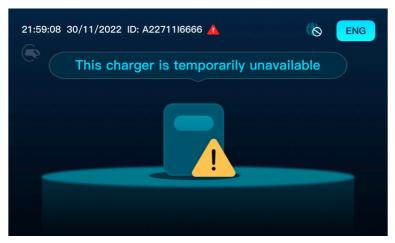


figure 4-1 Client

step 2 In the pop-up dialog box, enter the password 202207 and click Enter

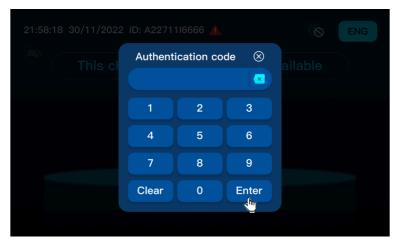


figure 4-2 Password input box



The password 202207 is for **Read-only** . If you need other authorities, please refer to "Operation and Maintenance Mode" or contact SUNGROW customer service.

- - End

4.1.2 Logout

Click __hide_ to return to the initial page.

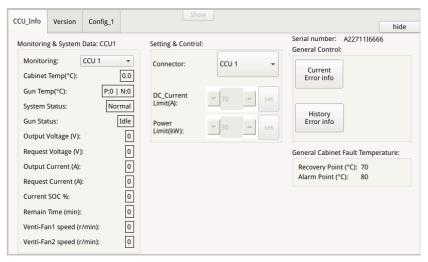


figure 4-3 Operation & Maintenance Page

4.2 Function Description

4.2.1 CCU Info

Select "CCU_Info" from the navigation bar to turn to the CCU_Info page. The CCU_Info page contains two pages: user page and administrator page.

The following description takes the administrator page for example.

- 1. Setting&Control-> Connector, drop the menu down;
- 2. Select the CCU number (connector number). CCU number determines the data displayed on the CCU_Info page.

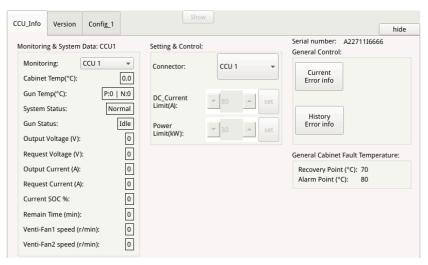


figure 4-4 Administrator page

The CCU_Info page mainly contains:

- · System status display column "System Data"
- · Real-time error information "Current Error info"
- · History error information "History Error info"
- General Control "Setting&Control"
- · Cabinet fault temperature "Cabinet Fault Temperature"

Monitoring&System Data:CCU1

Monitoring, cabin temperature, connector temperature, system status, connector status, output voltage, requested voltage, output current, requested current, Current SOC, remain time, venti-fan1 speed, venti-fan2 speed.

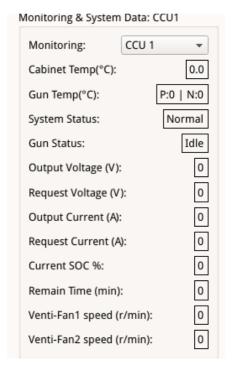


figure 4-5 Monitoring&System Data:CCU1

Setting&Control

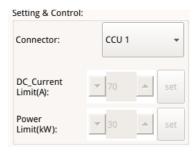


figure 4-6 Setting&Control

- 1. Click or to adjust the maximum current/power of the CCU;
- 2. Click "Set" to set the CCU local charging current/voltage, and each CCU corresponds to the maximum current/power output by a connector;

General Control



figure 4-7 General Control

Current Error Info.

- 1. Click "Current Error info" to display the real-time error information in the pop-up dialog box;
- 2. Click "Close" to close the dialog box.

History Error Info

- 1. Click "History Error info" to display history error information in the pop-up dialog box;
- 2. Click "Earlier Page", "Newer Page" and "Newest Page" to switch the pages;
- 3. Click "Close" to close the dialog box.

General Cabinet Fault Temperature

 


figure 4-8 General Cabinet Fault Temperature

Alarm Temperature: When the cabinet temperature exceeds Alarm temperature, the charger derates or stops.

Recovery temperature: When the cabinet temperature is lower than the Recovery temperature, the original output capacity is restored.

4.2.2 Version

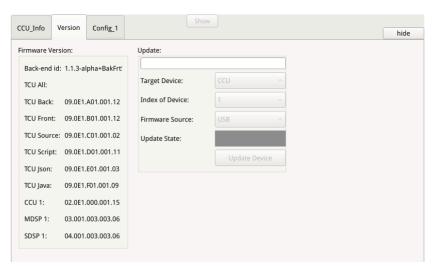


figure 4-9 Administrator page

The Version page mainly contains:

- "Firmware Version"
- "Update"

Firmware Version

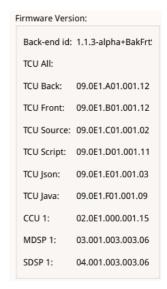


figure 4-10 Firmware version

Update



Local update via USB drive is available in case that the Internet is unavailable.

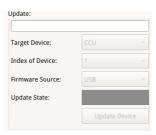


figure 4-11 Update

- 1. Insert the USB drive and store the description file of the new firmware and the corresponding firmware in the root directory;
- 2. Click the "Target Device" drop-down menu to select target CCU/MDSP/SDSP/TCU ALL to be upgraded;
- Click the "Index of Device" drop-down menu. Select the number of the corresponding module (Note: Select 1 for single connector model; Select 1 for double connector model when upgrading TCU and select the corresponding module number when upgrading other modules.);
- 4. Click the "Firmware Source" drop-down menu and select "USB";
- 5. Click "Update Device" to complete the updating;
- 6. After automatic restart, pull out the USB drive;
- 7. If you need to update multiple modules, repeat the above steps.

4.2.3 Config_1

Select "Config_1" from the navigation bar to enter the Config_1 page. The Config_1 page contains two types: user page and administrator page.

The following description takes the administrator page for example.

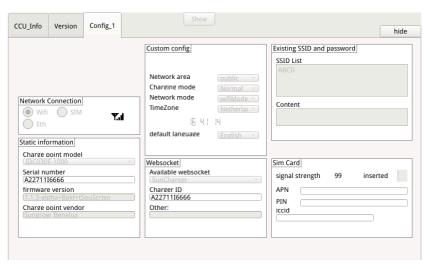


figure 4-12 Administrator page

The Config_1 page mainly contains:

- "Network Connection"
- · "Static information"
- · Custom configuration "Custom config"
- · Cloud Access Point "Websocket"
- · WIFI Name and Password "Existing SSID and password"
- · SIM information configuration "Sim Card"

Network Connection



figure 4-13 Network Connection

TCU provides three network connection modes: "WIFI mode", "SIM mode" and "Eth mode".

Static Information

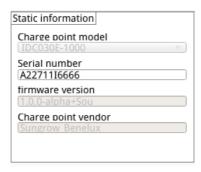


figure 4-14 Static Information

Displays charge point model, serial number, firmware version and charge point vendor.

Custom Config



figure 4-15 Custom config

Displays network area charge mode, network mode, time zone and default language.



Network Area: Public and Private.

- · Public: The DC Charger can connect to the Internet.
- Private: The DC Charger can connect to the CPO platform only.

Websocket



figure 4-16 Websocket

Displays available websocket, charger ID and other.

Existing SSID and Password

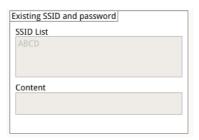


figure 4-17 Existing SSID and password

Displays SSID list and content.

Sim Card

 


figure 4-18 Sim card

Displays APN, PIN and iccid.

5 iEnergyCharge App

iEnergyCharge App is a tool that allows users to operate and manage their EV chargers. Users can complete account settings and charger configuration, manage charge cards, operate the charger, and reach customer service on the App.



- iEnergyCharge needed for commissioning only if the charger is used standalone, otherwise need to use iSolarCloud.
- In Australia, only the EMS model is supported.
- Depending on the version of iEnergyCharge you are using, the user interface might be slightly different.

5.1 Install iEnergyCharge App

Requirements

- Mobile OS: Android 6.0 or later, iOS 11.0 or later;
- The phone can connect to WLAN or 2G/3G/4G/5G network;
- The phone has sufficient storage space to install the App;
- · The phone has sufficient battery power.

Steps

step 1 Search for **iEnergyCharge** in Google Play Store or App Store (iOS), or scan the QR code below with a mobile phone, and download the App following the onscreen instructions.



iEnergyCharge

step 2 Tap the downloaded installation package and follow the onscreen instructions to complete the installation.


- - End

5.2 Create an Account

Two types of account are available, Owner and Retailer/Installer.



- Retailer/Installer: Users who provides services for owners. Installer users
 can use the iEnergyCharge App for guided commissioning and site setup,
 global monitoring of the operation of charging pools and equipment, and can
 perform operational and maintenance repairs via the App when equipment
 fails. Retailer/Installer accounts do not support starting or stopping charging.
- Owner: Users who will own or already own charging pools. Owner users can
 use the iEnergyCharge App for charging, card management, and configuring
 chargers.
- After logging into the App, the content displayed varies depending on the user role and device type.

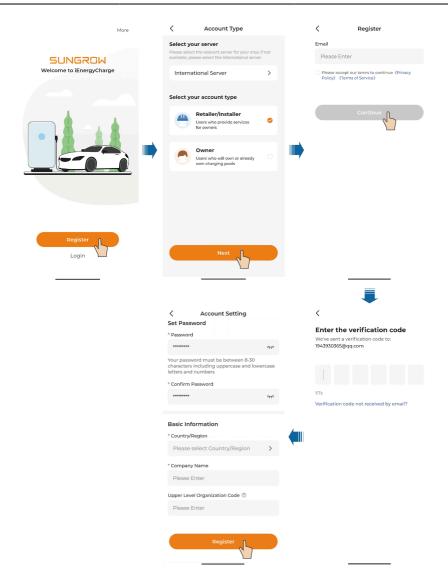

step 1 Tap Register.

- step 2 Select a Server, then choose to create an Retailer/Installer or Owner account.
- step 3 Enter an email address, agree to the privacy policy and terms of service, and tap Continue.

step 4 Enter the verification code you have received through email. If you do not receive a code by e-mail, please check your spam folder or ask customer service or the installer for the e-mail address that can be added to the safe senders.




- Users in mainland China may choose Chinese Server. Users in Europe may choose European Server and those in Australia may choose Australian Server.
 Users in other countries/regions may choose International Server.
- You can reach your upper-level retailer/installer for the "Code of Upper Level Installer/Retailer". Entering this code indicates that your organization is subordinate to an upper-level retailer/installer. If there is no upper-level retailer/installer organization, it is not necessary to fill in.
- step 5 Enter a password, which should be 8–32 characters long and contain uppercase letters, lowercase letters, and numbers. Then, select the country/region, and tap Register. An account is now created.
 - - End

5.3 Log in to an Account

Requirements

- · You have installed the iEnergyCharge App;
- You have created an iEnergyCharge account, or obtained an account and password from the retailer/installer or SUNGROW.

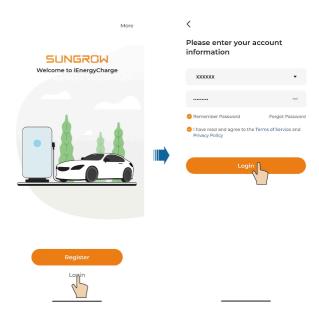

- step 1 Open the iEnergyCharge App, and tap Login.
- **step 2** Enter your account name and password on the login screen, and tap **Login**. You will then go to the **Home** screen of the App.
 - - End

5.4 Device Operation and Maintenance

For more detailed information regarding the use of iEnergyCharge App, see **iEnergyCharge User Manual**. You can also open the App and choose **Account > Support > User Manual** to view the manual.

Alternatively, you can scan the QR code below to view the manual.



6 Faults and Troubleshooting



All fault codes are displayed in operation and maintenance mode. If the fault still persists after troubleshooting, please contact SUNGROW customer service.

6.1 TCU

table 6-1 TCU faults and troubleshooting

Displaying text	Fault cause	Solutions
0Err_TCU_CCUComm_ Error	The communication between the CCU and TCU is lost	1. Check the ethernet cable connection, make sure that the ethernet cable is properly connected between RJ45 of the CCU and the "eth0" of the TCU 2. If the problem persists, turn off the charger's main power switch, wait for 20 seconds, and turn on again 3. If the problem persists, please contact SUNGROW Customer service
1Err_TCU_CardReader_ Comm_Error	The communication between the RFID card reader and TCU is lost	1. Check the connection terminal of the RFID reader. Make sure the red led light is alive on the RFID reader. If it is not, check if the cable connections on the "Reader" terminal block of TCU are still tight 2. If the problem persists, turn off the charger's main power switch, wait for 20 seconds, and turn it on again 3. If the problem persists, please contact SUNGROW Customer service

Displaying text	Fault cause	Solutions
2Err_TCU_DCMeter0_C omm_Error	The communication between the DC meter and TCU is lost	1. Check the connection terminal of the DC meter. Make sure the display and led is alive on the DC meter. If it is not, check if the cable connections on the DC meter's terminal blocks are still tight 2. If the problem persists, check if the cable connections on "RS485-1" terminal block of TCU are tight 3. If the problem persists, turn off the charger's main power switch, wait for 20 seconds, and turn it on again 4. If the problem persists, please contact SUNGROW Customer service
The network is unreacheable	The internet connection between the charger and the public network is lost	1. Charger is connected to the internet via wifi: a. check if the wifi router is working properly. b. If the wifi is available for the other device, long press the top left area of the screen, enter the password in the keyboard panel (default code 202207). In the pop out maintenance page, click Config_1, and check if the network mode is set to Wifi, and check if the ssid and the password is correct c. If the problem persists, please contact SUNGROW Customer service 2. Charger is connected to the internet via SIM card: a. check if the SIM card is inserted properly. Enter the maintenance page, click Config_1, check the "Inserted" checkbox is checked in "Sim config" area. If it is not, plug out and re-insert the SIM card into the TCU, turn off the main switch, wait for 20 seconds, and turn on. b. Check if the 4g attenet is connected properly with the 4g(M) header c. If the problem persists, please contact SUNGROW Customer service

Displaying text	Fault cause	Solutions
		Restart the charger
		2. If the problem persists, go to the
		maintenance page, click Config_1 page,
		check if the websocket on the websocket
		area is correct. If it is not, input or select the
	The internet	correct websocket address
	connection	2.If the problem persists, on the
The OCPP backend is	between the	maintenance page, check the charger id and
unreachable	charger and	serial number on the Config_1 page. If the
	the OCPP	charger id does not match the one which
	backend is lost	was registered in the OCPP backend, input
		the correct one. If the serial number does
		not match the one on the name plate, please
		contact SUNGROW Customer service
		3. If the problem persists, please contact
		SUNGROW Customer service
	The RFID card	Contact with the OCPP back-end server
	is registered	provider, check if your RFID card is blocked
Your card has been	in the OCPP	by the back end
blocked	back-end, but	2. If the server provider cannot provide
	it is currently	the solutions, please contact SUNGROW
	blocked	Customer service
	The RFID card	1. Contact with the OCPP back-end server
	is registered	provider, check if your RFID card is already
Your card has expired	in the OCPP	expired in the back-end server
. our our a mad on pri ou	backend, but	2. If the server provider cannot provide
	it is currently	the solutions, please contact SUNGROW
	expired	Customer service
	The RFID	1. Contact with the OCPP back-end server
	card is not	provider, check if your RFID card is properly
Unable to identify your	registered in	registered in the back-end server
card	the OCPP	2. If the server provider cannot provide
	back-end	the solutions, please contact SUNGROW
	server	Customer service

Displaying text	Fault cause	Solutions
This card is being used, please use another card	The RFID card is currently occupied by one another transaction	1. Check if the RFID has already been used for one another charging process. If it is, this RFID card will be unavailable until the corresponding charging session is ended 2. Contact with the OCPP back-end server provider, check if there is an invalid transaction linked to your RFID card. Ask the backend provider to manually end the invalid transaction 3. If the problem persists, please contact SUNGROW Customer service
Please use the card you scanned at the beginning	The RFID card that is used for ending the charging session, is not the one which started it	 Check if the RFID that you used is the one which started the charging session. Try the card that you used for starting this charging session If the problem persists, please contact SUNGROW Customer service
This charging point is unavailable	The charger has some technical issues, or the charger is blocked by the OCPP back-end service	1. Contact with the OCPP back-end server provider, check if the charger is set as unavailable in the back end. If so, set the charger back to available status 2. If the problem persists, go to the maintenance page, click CCU_Info, click ""Current error info"" button, check the error strings and follows the instructions of the other errors in this table, please contact SUNGROW Customer service
Unable to initiate charging, replug and try again	Reserved	-
Sorry, this charger is temporarily out of service	Reserved	-
Emergency stop button has been pressed	The emergency button has been pressed	Check if the emergency button has been pressed. If it is, release the button If the problem persists, please contact SUNGROW Customer service

Displaying text	Fault cause	Solutions
Charging request timeout, please retry	The charging process handshake is timeout	 Plug out the charging connector, re-plug it in the vehicle, and try to start a charging session again If the problem persists, restart the charger, and repeat step 1 again If the problem still persists, please contact SUNGROW Customer service

6.2 CCU

table 6-2 CCU Faults and troubleshooting

Displaying text	Fault cause	Solutions
0Err_Sys_System_Fan_1_Failed_Warn ing	Fan Failure	Replace the fan.
1Err_Sys_System_Fan_2_Failed_Warn ing	Fan Failure	Replace the fan.
2Err_Sys_CCU_Motherboard_Volatge_A bnomal_Alarm	The system voltage Abnormal.	Restart, if invalid, replace the control board.
3Err_Sys_AC_Contactor_not_Drop_out_ Alarm	The AC contactor is faulty.	Replace the AC contactor.
4Err_Sys_AC_Contactor_not_Pick_up_A larm	The AC contactor is faulty.	Replace the AC contactor.
5Err_Sys_Door_Open_Alarm	The door is opened.	Close the door.
6Err_Sys_Emergency_Stop_Alarm	Emergency stop is pressed.	Release the emergency stop button.
9Err_Sys_All_Power_Unit_Communication_Failed_Alarm	All power unit communication fault.	Check the communication cable.
10Err_Sys_Charging_Station_Over_Tem p_Warning	reserved error	-
11Err_Sys_Charging_Station_Over_Tem p_Alarm	The Air-Cooling Fan Failure.	Check the Air-Cooling Fan.
0Err_Connector1_Connector_Over_Tem p_Warning	The Charging connector Failure.	Replace the Charging connector.
1Err_Connector1_Connector_Over_Tem p_Alarm	Excessive charging current.	charging is not affected, keep attention

Displaying text	Fault cause	Solutions
2Err_Connector1_Insulation_Monitor_Communication_Failed_Alarm	Communication Failed.	Check the communication cable.
3Err_Connector1_Insulation_Monitor_Sel fcheck_Device_Abnormal_Alarm	The insulation monitor selfcheck abnormal.	Please contact SUNGROW Customer service.
4Err_Connector1_Insulation_Monitor_Sel fcheck_Wiring_Abnormal_Alarm	The insulation monitor selfcheck wiring Abnormal.	Please contact SUNGROW Customer service
5Err_Connector1_Insulation_Monitor_Selfcheck_DCp_to_GND_Abnormal_Alarm	The insulation monitor selfcheck DC_P to GND Abnormal.	Please contact SUNGROW Customer service
6Err_Connector1_Insulation_Monitor_Selfcheck_DCn_to_GND_Abnormal_Alarm	The insulation monitor selfcheck DC_N to GND Abnormal.	Please contact SUNGROW Customer service
7Err_Connector1_DC_Bus_Insulation_A bnormal_Level_1_Alarm	The DC bus insulation abnormal.	Please contact SUNGROW Customer service
8Err_Connector1_DC_Bus_Insulation_A bnormal_Level_2_Alarm	The DC bus insulation Warning.	Please contact SUNGROW Customer service
9Err_Connector1_PLC_Module_Commu nication_Failed_Alarm	The PLC module communication failed.	Replace the control board.
10Err_Connector1_Group_of_Power_Units_Failed_Alarm	The group of power units Failure.	Check the power units state.
11Err_Connector1_DCp_Output_Contact or_not_Drop_out_Alarm	The DC contactor is faulty.	Replace the DC contactor.
12Err_Connector1_DCp_Output_Contact or_not_Pick_up_Alarm	The DC contactor is faulty.	Replace the DC contactor.
13Err_Connector1_DCn_Output_Contact or_not_Drop_out_Alarm	The DC contactor is faulty.	Replace the DC contactor.
14Err_Connector1_DCn_Output_Contact or_not_Pick_up_Alarm	The DC contactor is faulty.	Replace the DC contactor.
15Err_Connector1_Reserve15	-	-

6.3 LLC

table 6-3 LLC Faults and troubleshooting

Error names	Faults cause	Solutions
EVT_LLC_A_OUTPUT_OV	Output voltage exceeds the maximum voltage 1000V	Check the battery voltage of the vehicle Restart the charger and try again. Please contact SUNGROW customer service.
EVT_LLC_A_OUTPUT_UV	Output voltage falls below the minimum voltage 200V	1. Check the battery voltage of the vehicle 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.
EVT_LLC_A_OUTPUT_OC	_	Check the battery voltage of the
EVT_LLC_A_OUTPUT_SH ORT	-	vehicle 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.
EVT_LLC_B_ OUTPUT_OV		1. Check the battery voltage of the
EVT_LLC_B_OUTPUT_OV _FAST	Output voltage exceeds the maximum voltage 1000V	vehicle 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.
EVT_LLC_B_ OUTPUT_UV	Output voltage falls below the minimum voltage 200V	 Check the battery voltage of the vehicle Restart charger and try again. Please contact SUNGROW customer service.
EVT_LLC_B_OUTPUT_OC		1. Check the wiring of DC+ and
EVT_LLC_B_OUTPUT_SH ORT	-	DC- 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.

Error names	Faults cause	Solutions
EVT_LLC_TOTAL_OV	Output voltage exceeds the maximum voltage 1000V	1. Check the battery voltage of the vehicle 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.
EVT_LLC_TOTAL_OC	Overcurrent	1. Check the wiring of DC+ and DC- 2. Restart the charger and try again. 3. Please contact SUNGROW customer service.
EVT_DISCHARGE_CIRCUI T_INVALID	Internal fault	Please contact SUNGROW customer service.
EVT_RELAY_ADHESION	Internal fault	Please contact SUNGROW customer service.
EVT_RELAY1_TEMP_SEN SOR_INVALID	Internal fault	Please contact SUNGROW customer service.
EVT_RELAY2_TEMP_SEN SOR_INVALID	Internal fault	Please contact SUNGROW customer service.
EVT_RELAY3_TEMP_SEN SOR_INVALD	Internal fault	Please contact SUNGROW customer service.
EVT_AMBIENT_TEMP_SE NSOR_INVALID	Internal fault	Please contact SUNGROW customer service.
EVT_HS2_TEMP_SENSOR _INVALID	Internal fault	Please contact SUNGROW customer service.
EVT_HARD_OCP	Inrush current	 Check the wiring of DC+ and DC Restart the charger and try again. Please contact SUNGROW customer service.
EVT_SCI_TIMEOUT	Internal communication fault Internal circuit fault	Restart the charger and try again. Please contact SUNGROW customer service.

Error names	Faults cause	Solutions
EVT_CAN_TIMEOUT	Internal communication fault Internal wiring fault Internal circuit fault"	Restart the charger and try again. Please contact SUNGROW customer service.
EVT_RELAY1_OTP	Internal overflow temperature Internal circuit fault"	 Turn off, waiting for 10 minutes and then restart the charger and try again. Please contact SUNGROW customer service.
EVT_RELAY2_OTP	Internal overflow temperature Internal circuit fault"	 Turn off, waiting for 10 minutes and then restart charger and try again. Please contact SUNGROW customer service.
EVT_RELAY3_OTP	Internal overflow temperature Internal circuit fault"	Turn off, waiting for 10 minutes and then restart the charger and try again. Please contact SUNGROW customer service.
EVT_AMBIENT_OTP	Internal overflow temperature Internal circuit fault"	Turn off, waiting for 10 minutes and then restart the charger and try again. Please contact SUNGROW customer service.
EVT_HS2_OTP	Internal overflow temperature Internal circuit fault"	 Turn off, waiting for 10 minutes and then restart charger and try again. Please contact SUNGROW customer service.
EVT_3V_OV	Internal system voltage exceed normal range Internal circuit fault	 Check the input voltage whether between normal range Restart the charger and try again. Please contact SUNGROW customer service.

Error names	Faults cause	Solutions
EVT_3V_UV	Internal system voltage falls below normal range Internal circuit fault	 Check the input voltage whether between normal range Restart the charger and try again. Please contact SUNGROW customer service.
EVT_12V_OV	Internal system voltage exceed normal range Internal circuit fault	 Check the input voltage whether between normal range Restart charger and try again. Please contact SUNGROW customer service.
EVT_12V_UV	Internal system voltage falls below normal range Internal circuit fault	 Check the input voltage whether between normal range Restart the charger and try again. Please contact SUNGROW customer service.
EVT_AMBIENT_LOW_TEM P_FAULT	Internal ambient temperature is too cold Internal circuit fault	Please contact SUNGROW customer service.
EVT_HS2_LOW_TEMP_FA ULT	 Internal ambient temperature is too cold Internal circuit fault 	Please contact SUNGROW customer service.
EVT_HARD_OUTPUT_SH ORT	Overcurrent	 Check the wiring of DC+ and DC- Restart the charger and try again. Please contact SUNGROW customer service.
EVT_HARD_VERSION_ER ROR	Software version is not compatible	Please contact SUNGROW customer service.

6.4 PFC

table 6-4 PFC Faults and troubleshooting

Errors names	Fault cause	Solutions
BUSVoltageHigh		1. Restart the charger and try
PBUSVoltageHigh	Internal fault	again.
NBUSVoltageHigh		2. Please contact SUNGROW customer service.
IAPeakHigh	_	1. Restart the charger and try
IBPeakHigh	_ Input over current	again.
ICPeakHigh		Please contact SUNGROW customer service.
PhaseSeqWrong	Input voltage phase fault	 Check the wiring of input voltage Restart the charger and try again. Please contact SUNGROW customer service.
PhaseLoss	Input voltage phase lost	 Check the wiring of input voltage and the value of input voltage Restart the charger and try again. Please contact SUNGROW customer service.
AmbientTempHgih		1. Turn off, waiting for 10
RadiatorATempHgih	_ _ High internal	minutes and then Restart the
RadiatorBTempHgih	temperature	charger and try again. 2. Please contact SUNGROW
RadiatorCTempHgih		customer service.
BUSPreChargeVolLow	_	Restart the charger and try
PBUSPreChargeVolLow	- Internal fault	again.
NBUSPreChargeVolLow	-	2. Please contact SUNGROW
BUSVoltageLow		customer service.
AmbientTempLow		Restart the charger and try
RadiatorATempLow	Low internal	again.
RadiatorBTempLow	temperature	2. Please contact SUNGROW
RadiatorCTempLow		customer service.

Errors names	Fault cause	Solutions
PhaseACurrenRmsHigh	_	Restart the charger and try
PhaseBCurrenRmsHigh	_ High input current	again. 2. Please contact SUNGROW
PhaseCCurrenRmsHigh		customer service.
InputRelayFail	Internal AC relay fault	 Restart the charger and try again. Please contact SUNGROW customer service.
PowerSupplyAbnorma	Internal system voltage fault	 Check the input voltage whether between normal range Restart the charger and try again. Please contact SUNGROW customer service.
SClfault	Internal communication fault Internal circuit fault	 Restart the charger and try again. Please contact SUNGROW customer service.
HardWearOCPFault	Input over current	 Restart the charger and try again. Please contact SUNGROW customer service.
SWUVPFault	Internal fault	Restart the charger and try again. Please contact SUNGROW customer service.
LLCVersionNotMatch	Software version is not compatible	Please contact SUNGROW customer service.
GridAVolHigh	_	Check the AC input voltage
GridBVolHigh	High AC input grid	2. Restart the charger and try
GridCVolHigh	voltage, normal range AC 360~440V	again. 3. Please contact SUNGROW customer service.
GridAVolLow	_	1. Check the AC input voltage
GridBVolLow	Low AC input grid	2. Restart the charger and try
GridCVolLow	voltage, normal range AC 360~440V	again. 3. Please contact SUNGROW customer service.

Errors names	Fault cause	Solutions
FreqHigh	AC input frequency over normal range	Check the AC input voltage Restart the charger and try again.
FreqLow	45HZ~55HZ	3. Please contact SUNGROW customer service.
GridCutFastProtect	AC input voltage lost	 Check the AC input voltage Restart charger and try again. Please contact SUNGROW customer service.
SpllFault	Internal fault	 Restart the charger and try again. Please contact SUNGROW customer service.
InPutVoltageDroop	AC input voltage fault	 Restart the charger and try again. Please contact SUNGROW customer service.
BUSVoltageContinueHigh	-	
PBUSVoltageContinueHigh	-	
NBUSVoltageContinueHigh	-	
BUSVoltageDiscreteHigh	-	 Restart the charger and try again. Please contact SUNGROW customer service.
PBUSVoltageDiscreteHigh	- Internal fault	
NBUSVoltageDiscreteHigh	-	
BusRippleOver	-	
PBusRippleOver	-	
NBusRippleOver	-	
InPutCurrUnbal		
Fan1Speedabnormal	-	Restart the charger and try
Fan2Speedabnormal	-	again.
Fan3Speedabnormal	Internal fan fault	2. Please contact SUNGROW
Fan4Speedabnormal	-	customer service.
Fan5Speedabnormal		4. Deatast the all
InputVoltUnbal	Internal fault	 Restart the charger and try again. Please contact SUNGROW customer service.

6.5 Charging Stop Code

table 6-5 Charging stop code

Fault name	Displaying text	Fault cause	Solutions
EV emergency stop	EV_E_Stop	An error has occurred, the charging session is terminated by the vehicle forcefully	 Plug out the charging connector, re-plug it into the vehicle, and try to restarting the charging session again. If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service
PWM failure	PWM_Failure	The PWM is invalid on the CP-PE interface	Please contact SUNGROW customer service
EV reports a fault and stops	EV_Reported_ Error	An error has occurred in the vehicle side, the charging session terminates	 Plug out the charging connector, re-plug it into the vehicle, and try to restarting the charging session again. If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service.
SLAC match failure	SLAC_Match_ Failure	The charging session handshake - SLAC process failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service"

Fault name	Displaying text	Fault cause	Solutions
SDP handshake failure	SDP_ Handshake_ Failure	The charging session handshake - SDP process failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service"
UDP server fault	UDPv6_ Server_Fault	The charging session handshake - UDP server during SDP process is invalid	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service"
TCP server fault	TCPIPv6_ Server_Fault	The charging session handshake - TCP server during charging process is invalid	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again. 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service"
Protocol handshake failure	Protocol_ Handshake_ Failure	The charging session handshake - protocol handshake (DIN/ISO15118) failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service.

Fault name	Displaying text	Fault cause	Solutions
Service parameter incompatibility	Service_ Incompatibility	The charging session - service parameter exchange failed	 Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service
Communicat ion parameter incompatibility	Charge_ Parameter_ Incompatibility	The charging session - service parameter exchange failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service.
Cable check fault	Cable_Check_F ault	The charging session - cableCheck process failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service.
Precharge fault	Precharge_ Fault	The charging session - precharge process failed	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service.

Fault name	Displaying text	Fault cause	Solutions
Current demand fault	Current_ Demand_Fault	The charging session - current demand process failed	 Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service.
CP voltage abnormal	CP_Voltage_ Abnormal	The CP-PE terminal voltage is abnormal	1. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 2. If the problem persists, restart the charger, and repeat step 1. 3. If the problem still persists, please contact SUNGROW customer service.
DC output overvoltage protection	DC_Output_ Overvoltage_ Protection	DC output voltage is over 1020V, the charger over-voltage protection is triggered	1. Check the output voltage on the vehicle or the charger during the charging session, if the voltage is over 1020V, the charging will not be successful. In this case, please contact the SUNGROW customer service and do not proceed the next steps 2. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 3. If the problem persists, restart the charger, and repeat step 1. 4. If the problem still persists, please contact SUNGROW customer service"

Fault name	Displaying text	Fault cause	Solutions
DC output undervoltage protection	DC_Output_ Undervoltage_P rotection	DC output voltage is under 195V, the charger undervoltage protection is triggered	1. Check the output voltage on the vehicle or the charger during the charging session, if the voltage is under 195V, the charging will not be successful. In this case, plese contact SUNGROW customer service and do not proceed the next steps 2. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 3. If the problem persists, restart the charger, and repeat step 1. 4. If the problem still persists, please contact SUNGROW customer service.
DC output overcurrent protection	DC_Output_ Overcurrent_ Protection	DC output current is over 82A, the charger over-current protection is triggered	1. Check the output current on the vehicle or the charger during the charging session, if the current is over 82 A, the charging will not be successful. In this case, please contact SUNGROW customer service and do not proceed the next steps 2. Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again 3. If the problem persists, restart the charger, and repeat step 1. 4. If the problem still persists, please contact SUNGROW customer service.

Fault name	Displaying text	Fault cause	Solutions
Frame communicat ion timeout	Frame_ Communication _Timeout	The communication between the charger and the vehicle is not stable, or the charger/vehicle failed to send message	 Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service.
Communicat ion sequence fault	Communication _Sequence_ Fault	The communication frame sent by the vehicle does not follow the sequence defined in the DIN SPEC 70121/ISO 15118 norm	 Plug out the charging connector, re-plug it in the vehicle, and try to restarting a charging session again If the problem persists, restart the charger, and repeat step 1. If the problem still persists, please contact SUNGROW customer service.

7 System Maintenance

7.1 Inspection Instructions

It is suggested to perform regular inspections on the charger, so as to extend its service life. The inspection interval should be determined with on-site conditions taken into consideration. In case the product works in extreme weather conditions, be sure to shorten the inspection interval and increase inspection frequency.

- Before inspection, switch off the AC opening, and wait 10 minutes until no voltage is present. Then, you may open the cover plate for inspection.
- In case of a fault with the device, contact your local service provider or manufacturer immediately. Do not open the device without permission.
- If some devices need to be replaced during the inspection, please contact SUNGROW.
- Losses caused by failing to perform inspections in compliance with the instructions specified in this manual will not be covered by the warranty.
- Do not perform inspections on the product on rainy, humid, or windy days. SUNGROW shall not be held liable for any possible outcome resulted from inspections in such weather conditions.
- To reduce the risk of electric shocks, do not perform inspections that are not specified
 in this manual. If needed, please contact SUNGROW for inspection and repair services.
 Otherwise, damages caused therefrom will not be covered by the warranty.

7.2 Routine Inspection

It is recommended to perform routine inspections on the product once every 6 months. However, the actual inspection interval is subject to the charger's operating environment.

Inspection Item	Inspection Method	Recommended Inspection Interval
Charger exterior	 Check if there is any deformation with the charger enclosure. Check if there is paint peeling on the charger's exterior. Check if the nameplate and marks on the charger are all legible. Check if there is anything abnormal with the exterior of peripheral components such as the charging connector holder 	Once every 6 months
Charger structure	 Check if the parts and components of the charger are secure and reliable. Check if there is any damage to the internal power units, main control board, auxiliary low-voltage power supply, charging interface, and power supply interface. Clean the dust-proof fabric and dirts and dust inside the charger, and check if there is any wet spot. 	Once every 6 months

Inspection Item	Inspection Method	Recommended Inspection Interval
	 Check the charging connector for any foreign matters. Ensure the pins inside the connector are clean without dirt. Clean off the foreign matters, if any, in time. Check the charging connector and 	
Charging	charging cable for deficiency, crack, abrasion, damage, wire exposure, etc.	
connector and charging cable	• If the charging connector freezes to the charger, it is recommended to carefully remove the ice with a cordless heat gun and a plastic scraper. During the heating process, please ensure that the temperature does not exceed 60°C and continuously move the heat gun back and forth to prevent damage to the charging connector or cable due to overheating.	Once every 6 months
	 Check if the electrical line is burnt or has aged and if the fixing screws are loose. 	
Electrical connections	 Check whether the grounding cable is properly connected to allow for reliable grounding. 	Once every 6 months
connections	 Check the cables for deficiency, crack, abrasion, damage, wire exposure, etc. 	
	Other inspection items can be arranged based on the actual situation on the site.	
LCD screen	 Check the display of the screen for broken or cracks. 	
	 Check the brightness of the screen and whether the display definition is normal. 	Once every & menths
	 Click the screen to operate and check whether the touch function is normal. 	Once every 6 months
	Check the waterproof performance around the screen and the plastic panel.	

Inspection Item	Inspection Method	Recommended Inspection Interval
Fan	 Check whether there is foreign object inside the fan and the fan openings. Clean the dust with water to prevent the accumulation dust from affecting the heat dissipation. The water flow should be less than 6L/min. Check whether the fan is running normally during operation. 	Once every 6 months
	 In device standby status, select factory mode operation to operate the fan at full speed, and check whether the fan speed is normal. 	

8 Appendix

8.1 System Parameters

table 8-1 System parameters

Technical parameters	IDC30E (Global)	IDC30E (For Australia)
Charging connector		
Connector type	CCS2	
EVSE-vehicle protocol	DIN SPEC 70121, ISO 15118	DIN SPEC 70121
Number of EV served	1	
Cable length	5 m	
DC Output		
DC output power	30 kW	
DC output voltage	200 Vdc - 1000 Vdc	
DC output current	80 A	
AC Input		
Grid voltage	3 / N / PE, 380 Vac / 400 Vac (± 10 %)	3 / N / PE, 400 Vac (± 10 %)
Nominal grid f requency	50 Hz / 60 Hz	50 Hz
Grid f requency range	45 Hz - 65 Hz	45 Hz - 55 Hz
Earthing system	TN-C, TN-S, TN-C-S, TT	
Nominal input current	46 A	
Max. input current	52 A	
Power factor	≥ 0.99	
Total harmonic distortion (THDi)	< 5 % at full output power	
Overvoltage category	III	
Efficiency		
Max. efficiency	96.5%	
Protection		
Over / under voltage protection	Yes	

Technical parameters	IDC30E (Global)	IDC30E (For Australia)
Over-current protection	Yes	
Short-circuit protection	Yes	
Over-temperature protection	Yes	
Surge protection	Yes	
User interface		
Display	7-inch color touch screen	
Language	English (default) Other languages available by firmv	vare upgrade
Authentication	RFID-card, Plug & Play, Auto-charge (default) Plug & Charge, Payment terminal (optional)	RFID-card, Plug & Play, Auto-charge
Firmware update	Over-the-air (OTA) by iEnergyCh	arge
RFID system	ISO / IEC 14443 A / B, ISO / IEC 1	5693
Energy metering	MID metering (CE compliant) Eichrecht / PTB compliant (optional)	DC metering (CE compliant)
Communication interface	4G, Ethernet, WLAN	
Communication protocol (charger-to-CSMS)	OCPP 1.6 J Ready for OCPP 2.0.1	
Emergency stop	Yes, integrated	
Mechanical data		
Dimensions (W*H*D)	500 mm * 800 mm * 288 mm	500 mm * 800 mm * 242 mm
Weight	55 kg	53 kg
Installation method	Wall-mounting (default) Stand column, trolley (optional)	
Mechanical impact protection	IK10 *	
Environmental data		
Degree of protection	IP65	
Anti-corrosion degree	C5	

Technical parameters	IDC30E (Global)	IDC30E (For Australia)
Operating ambient temperature range	-35 °C ~ 55 °C	
Allowable relative humidity range	5 % ~ 95 % (non-condensing)	
Max. operating altitude	≤ 2000 m	
Cooling method	Smart forced air cooling	
Noise (typical)	≤ 50 dB (A)	
EMC	Class B	
General data		
Certifications	CE, CB, UKCA, RCM, ADQCC, MoIAT, PEA	
Compliance	EN IEC 62311, EN IEC 61851-1 / 21, EN IEC 61000-6-1 / 2 / 3 / 4, EN 61851-23 / 24, EN 301 908-1 / 2 / 13, EN 301 511, EN 301 489 -1 / 3 / 17 / 52, ESTI / EN 300 330, ESTI / EN 300 328, IEC 61851-1 / 23 / 24, DIN SPEC 70121, DIN SPEC 70122	EN IEC 61851- 1, EN 61851-24, IEC 61851-1 / 23 / 24
Warranty	3 years (standard)	
Country of manufacture	-	Made in China

^{*}The mechanical impact protection degree of HMI is IK08.

8.2 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

Condition

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

Exclusion of Liability

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The voltage ratings used by the customers must meet the requirements of the charger. SUNGROW shall not liable for the loss caused by mismatching.
- Be sure to use the charger reasonably and correctly in strict accordance with the
 parameters described in this manual (such as voltage, etc.). Otherwise, you shall be
 responsible for the consequences arising therefrom.
- Be sure to waterproof the empty terminals in strict accordance with the requirements specified in this manual. If the protection level of the charger is reduced due to improper handling, SUNGROW will not be responsible.
- The free warranty period for the whole machine and components has expired.
- Equipment damage during transportation.
- · Incorrect installation, refitted, or use of the product
- Operation in a harsh environment is not described in this manual.
- Machine failure or damage caused by installation, repair, alteration, or disassembly not conducted by the service agencies or personnel of SUNGROW.
- Machine failure or damage caused by installation, repair, alteration, or disassembly not conducted by qualified service personnel or SUNGROW staff.
- Damage caused by abnormal natural environment or man-made damage.

If the product fault arises due to any of the above causes and the customer requires repair services, such a service may be provided at a cost, following the assessment of SUNGROW.

Software Authorization

The company is not liable for any loss caused by the software products provided with the products.

- It is prohibited to use some or all of the data in the firmware or software developed by SUNGROW for commercial purposes in any way.
- It is forbidden to decompile, decrypt, or other operations that destroy the original program design of the software developed by SUNGROW.

8.3 Contact Information

In case of questions about this product, please contact us.

We need the following information to provide you the best assistance:

- · Model of the device
- · Serial number of the device
- Fault code/name
- · Brief description of the problem

For detailed contact information, please visit: https://en.sungrowpower.com/contactUS

