

User Manual

AC Charger

AC007UK-01 / AC007UK-01 L1



All Rights Reserved

All Rights Reserved

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

Trademarks

SUNGROW and other Sungrow trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

Software Licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

Privacy Protection

- Information contained in this manual is the private property of Sungrow Power Supply Co., Ltd. No part of this manual may be transmitted in any form without the prior written permission of Sunlight Power Co., Ltd. Internal reproduction is allowed only for product evaluation or other appropriate purposes.
- We declare that the network account and password data stored in the equipment system are only used for remote control and monitoring of the equipment and will not be transmitted to any third-party data platform without the user's permission.
- At our EV charger, we take the privacy of our customers seriously. We only collect charging information in accordance with applicable privacy laws and regulations.

Disposal

After the service life of the charger ends, please dispose of it in accordance with the applicable electrical waste disposal act at the installation location. It can also be returned to Sungrow Power Supply Co., Ltd., but the relevant expenses shall be borne by your party.

About This Manual

The manual mainly contains product information, as well as guidelines for installation, operation, and maintenance.

Target Group

This manual is intended for qualified technicians who are responsible for the installation, operation, and maintenance of the charger, and end users who need to check charger parameters.

A qualified technician is required to meet the following requirements:

- Knowledge of electronics, electricity, and machinery, and be familiar with electrical and mechanical schematic diagrams.
- Training in the installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

EMC

In some cases, even if the equipment is in accordance with the standard emission limits, it can have an impact in certain application areas (some sensitive equipment is placed in the same location; the equipment is installed close to a radio or TV receiver), and the operator is obliged to take appropriate action to correct this situation.

How to Use This Manual

Please read this manual carefully before using the product and keep it properly in a place for easy access.

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from support.sungrowpower.com or sales channels.

Symbols

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance efficiently.

 **DANGER**

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

 **WARNING**

Indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

 **CAUTION**

Indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.



“NOTE” indicates additional information, emphasized contents, or tips that may be helpful, e.g., to help you solve problems or save time.

Contents

All Rights Reserved	I
About This Manual	II
1 Safe Introductions	1
2 Introduction	3
2.1 Introduction	3
2.2 Model and Nameplate	3
2.3 Appearance and Dimensions	4
2.4 LED Signals	4
2.5 Electrical Connection Ports	5
2.6 System Topology	5
3 Installation	7
3.1 Installation Requirements	7
3.2 Unpacking and Inspection	8
3.3 Installation Tools	10
3.4 Electrical Connection	11
3.4.1 Circuit Diagram	11
3.4.2 AC Cable Connection	11
3.4.3 RS485 Communication Connection	14
3.5 Wall-Mounted Installation	16
3.6 Pole-Mounted Installation	20
3.6.1 Foundation Installation	20
3.6.2 Pole Installation	21
4 Inspection before Commissioning	25
5 Troubleshooting	26
6 iEnergyCharge App	31
6.1 Install iEnergyCharge App	31
6.2 Create an Account	31
6.3 Log in to an Account	33
6.4 Device Operation and Maintenance	34
7 Commissioning via iSolarCloud	35

8 Appendix	36
8.1 Technical Data	36
8.2 Quality Assurance	38
8.3 Declaration of Conformity	38
8.4 Firmware Update	38
8.5 Contact Information	39

1 Safe Introductions

This manual contains important instructions for SUNGROW charger that shall be followed during installation, operation, and maintenance. Please review all warnings and notices before installing and using the charger.

WARNING

Do not install or use the charger near flammable, explosive, harsh or combustible materials, chemicals, or vapors.

WARNING

Turn off the power supply at the circuit breaker before installing or cleaning the charger.

NOTICE

Use the charger only within the operation steps and parameters specified in this manual.

NOTICE

Never spray water or any other liquid directly onto the charger body or the charging connector. Store the charger in the connector socket to prevent unnecessary damage.

NOTICE

Do not attempt to disassemble, repair, tamper with or modify the charger. Contact SUNGROW for any repair or modification.

NOTICE

Do not use the charger if it is defective, appears cracked, frayed, broken or otherwise damaged, or fails to operate. Please contact SUNGROW in time.

NOTICE

Be careful when transporting the charger. Do not subject it to strong force or impact or pull, twist, tangle, drag, or step on the charger to prevent damage to it or any components.

NOTICE

Do not touch the end terminal of the charger with any part of your body or metal objects.

NOTICE

Use of charger may affect or impair the operation of any medical or implantable electronic devices, such as implantable cardiac pacemakers or implantable cardioverter defibrillator. Please check with your electronic device manufacturer concerning the effects of the charger on such electronic devices before using the charger.

2 Introduction

2.1 Introduction

The **AC007UK-01 / AC007UK-01 L1** charger (hereinafter "charger") is used for AC charging of electric vehicles (EV/PHEV) and can be either wall-mounted or pole-mounted, with the following advantages:

Ease of Use

EV drivers can start and stop charging via RFID card or App. When the vehicle is fully charged, the charging will stop. The charger also supports plug&play charging, which means the charging starts automatically as soon as the charging connector is plugged into the vehicle.

Smart and Easy Management

In addition to the LED lights on the charger that indicate charging status, EV drivers can visualize and control the charging session remotely via iEnergyCharge or iSolarCloud.

Sustainability

With an IP65 rating, the charger is water and dust proof, allowing for outdoor use and maintenance.

2.2 Model and Nameplate



The charger comes in two versions for different use cases:

- AC007UK-01 (hereinafter referred as "the advanced version")
- AC007UK-01 L1 (hereinafter referred as "the standard version")

2.3 Appearance and Dimensions

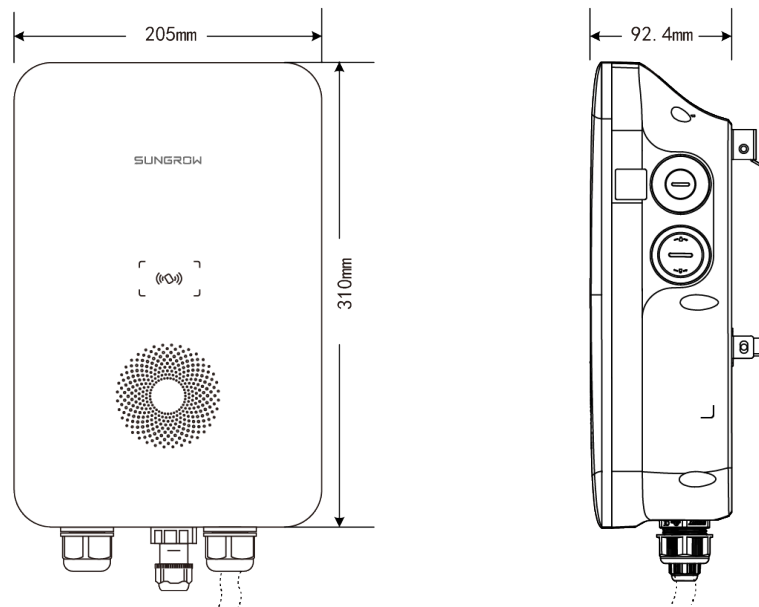


figure 2-1 Appearance and dimensions

2.4 LED Signals

table 2-1 LED Signals

Indicator	Indicator
Standby	Blue indicator flashes slowly, on for 1 s and off for 4s ; circulating
Charging	Blue indicator breathes, on for 1s and off for 1s; circulating
Charging stops	Blue indicator is steady on
Ready to charge	Blue indicator flashes quickly, on for 0.5s and off for 0.5s; circulating
Charging reservation	Blue indicator is on for 3s and red indicator is on for 3s
Power-on self-test	Blue indicator is on for 1s and red indicator is on for 1s
Charger software upgrading	Blue indicator flashes quickly
Swiping Card	Blue light is on for 5 times with an interval of 0.2s

2.5 Electrical Connection Ports

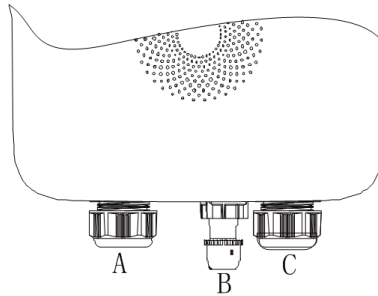


figure 2-2 Port Diagram

table 2-2 Label Explanation

Label	Explanation
A	AC input (AC connection)
B	RS485 external communication
C	Charging cable output (Charging cable connection)

2.6 System Topology

Stand-alone EV Charger

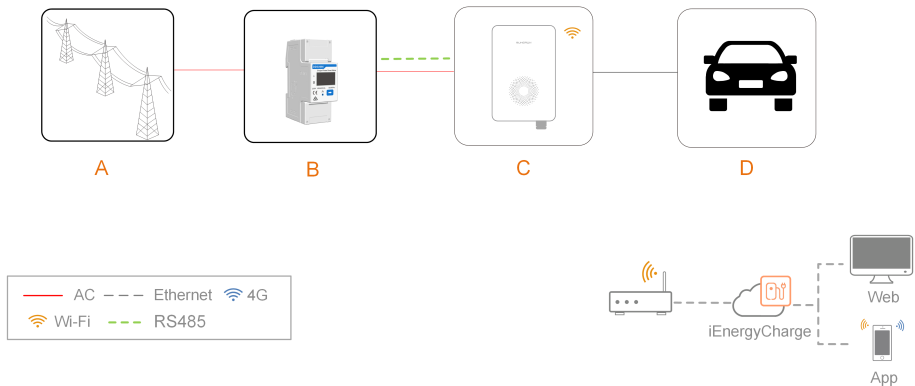


figure 2-3 System topology diagram of EV charger

Position	Description	Note
A	Utility grid	TT, TN-C, TN-S, TN-C-S.
B	Smart Energy Meter	Optional (DDSU666).
C	Charger	AC007UK-01 L1
D	Electric vehicle	-

3 Installation

⚠ WARNING

Respect all local standards and requirements during mechanical installation.

⚠ CAUTION


Any damage or malfunction with the charger caused by negligence or improper use will not be eligible for service and replacement under the warranty.

3.1 Installation Requirements

Location Requirements


Select an optimal mounting location for safe operation, long service life and expected performance.

- The charger with protection rating IP65 can be installed both indoors and outdoors.
- The charger should be installed at a place where the LED signals can be easily seen, and is convenient for electrical connection, operation, and maintenance.

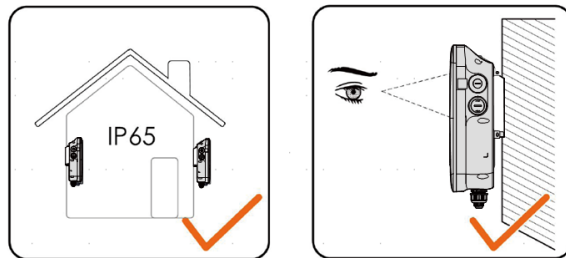

Environment Requirements

- There must be no flammable hazards or ignition risks.
- The mounting location must be inaccessible to children.
- The ambient temperature and relative humidity must meet the following requirements.

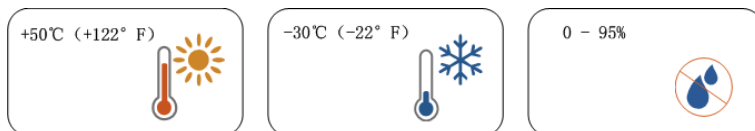


- Avoid exposure to direct sunlight, rainwater and snow.
- The charger should be well-ventilated for good air circulation.
- The mounting location must be away from living area. The charger will emit noises during operation that might be perceived as disturbing.

- It is suggested to install the device in a place with shelter, so as to prevent it from getting impacted by direct sunlight or severe weather (e.g., snow, rain, and lightning). The device will derate in high temperatures for self-protection. If installed in a place directly exposed to sunlight, as the temperature rises, the device may witness power reduction.

Carrier Requirements


The mounting structure where the charger is installed must comply with local/national standards and guidelines.

Ensure that the installation surface is solid enough to bear 4.5 times the weight of the charger and is suitable for the dimensions of the inverter.

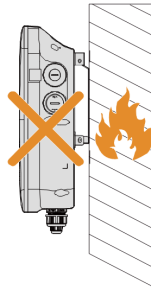

Angle Requirements

- Install the charger vertically.
- Do not install the charger horizontally, tilted or upside down.
- Do not install the charger on a tilted surface.

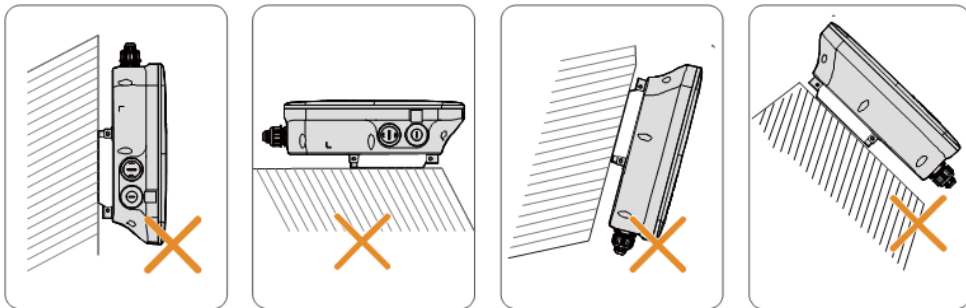

3.2 Unpacking and Inspection



After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.



table 3-1 Label Descriptions

Item	Name	Quantity
A	AC-Charger	1
B	Charging cable bracket	1
C	Backplate	1
D	Upper mounting plate	1
E	Lower mounting plate	2
F	Mounting pole (optional)	1 (not included in scope of delivery)
G	Combination screw and expansion screw	4, 7 (wall-mounted); 11, 0 (pole-mounted)
H	L-shaped spanner	1
I	Wire end ferrule	1~2
J	Countersunk screw	6

Item	Name	Quantity
K	RFID card	2
L	Quick Installation Guide, Warranty Card, and Certificate of Conformity	1, 1, 1
M	RJ45 screw connector	1
N	DDSU666 Smart Energy Meter (optional)	1



The scope of delivery does not include the optional mounting pole (F), this item must be ordered separately.

3.3 Installation Tools

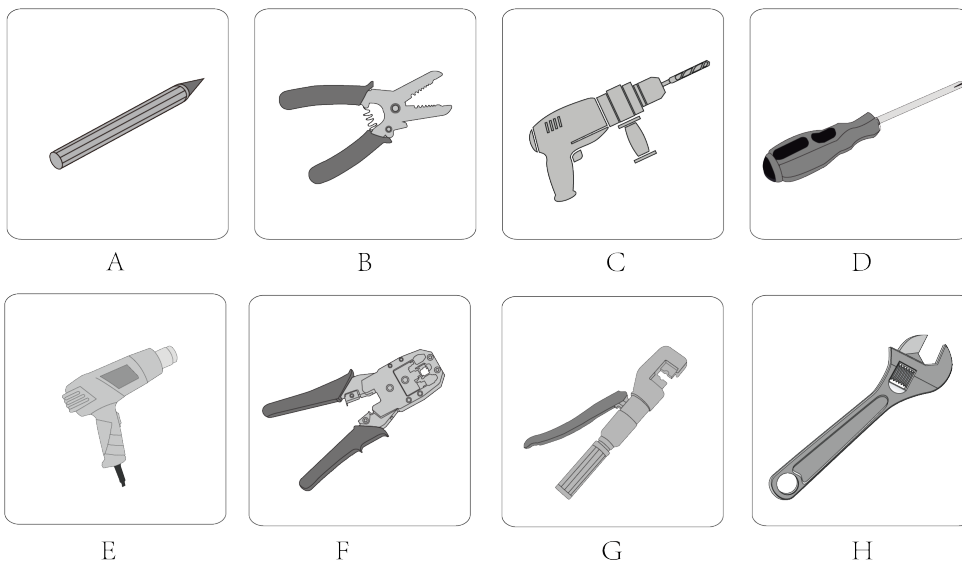


table 3-2 Label Descriptions

Item	Name	Specification
A	Marker	-
B	Wire stripper	-
C	Hammer drill	Ø6, Ø12
D	Phillips screwdriver	M3, M4, M5
E	Heat gun	-
F	RJ45 crimping tool	-
G	Hydraulic plier	2.5-6 mm ²
H	Adjustable spanner	-

3.4 Electrical Connection

3.4.1 Circuit Diagram

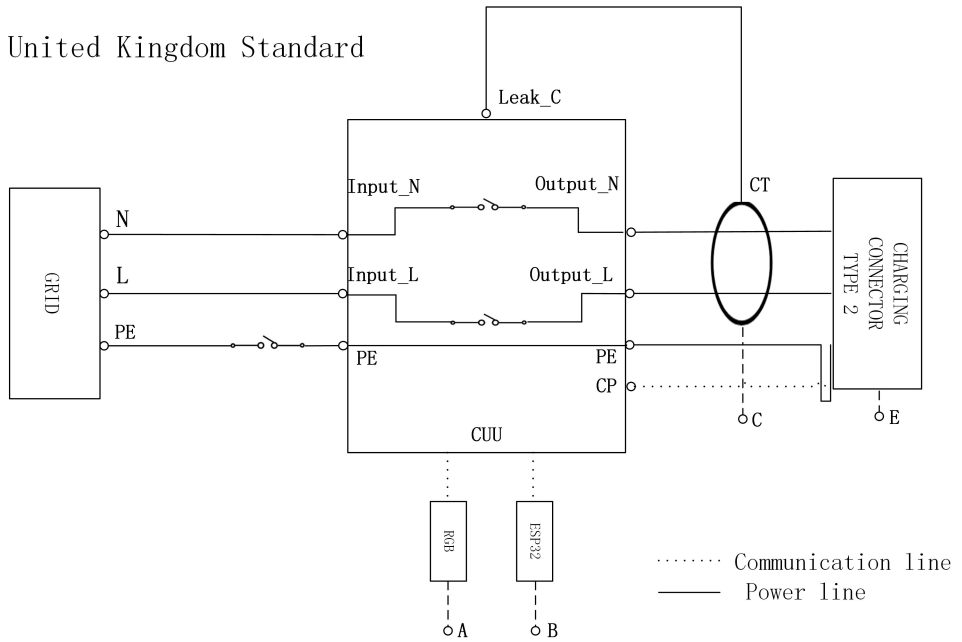


figure 3-1 Circuit diagram(United Kingdom)

table 3-3 Label Descriptions

Label	Description
A	The LED lights that indicates the status of the charger
B	ESP32 module for Wi-Fi communication
C	CT for leakage current detection
E	Charging connector Type 2

NOTICE

The charger already integrates a DC residual-current device (RCD) with a rated residual current of 6 mA. However, the charger also requires a type A RCD of 30 mA to operate. Each charger in the system must be individually connected to the utility grid through an RCD and a miniature circuit breaker.


3.4.2 AC Cable Connection

AC Cable Requirement


Cable cross-section: 3× 6 mm²

Step 1 Place the charger face-down on a clean and flat surface.

Step 2 Loosen the screws that secure the back cover plate. (M3 screws, torque: $0.5 \pm 0.1 \text{ N}\cdot\text{m}$)

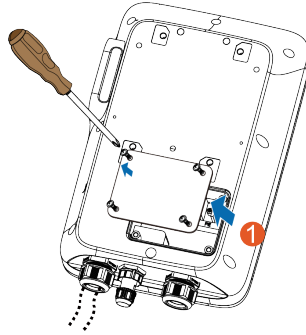

Step 3 Plug the cable into the port of the power supply which is at the leftmost.

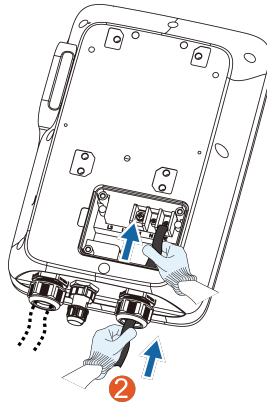


Step 4 Adjust the cable to a suitable length, and strip off the insulation of the cable to prepare for cable connection terminals.

- 1 Strip off the insulation from the end of each wire.
- 2 Insert the copper core of the stripped end of the wire into the copper lug.
- 3 Tighten the copper lug using a hydraulic plier.
- 4 Select a heat-shrink tubing that matches the diameter of the wire.


The length of the tubing should be about 2 mm longer than the length of the copper lug's wire tube.

- 5 Place the heat-shrink tubing on the copper lug until it completely covers the copper lug's wire hole.
- 6 Activate heat-shrink tubing using a heat gun.

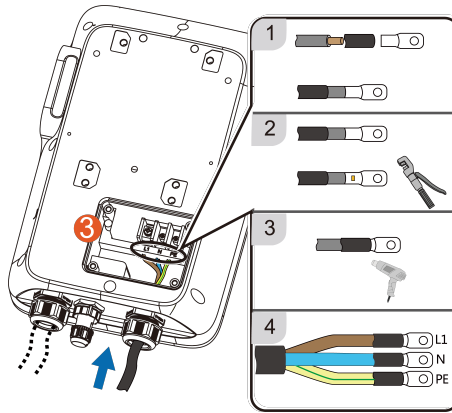


Color	Terminal
Brown	L1
Blue	N
Yellow-green	PE

Step 5 Connect each crimped terminal (OT2.5-5) and tighten them using a screwdriver. (Torque: 3 ± 0.2 N·m)

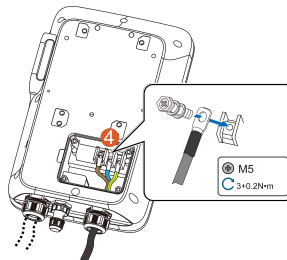

Step 6 Put the back cover plate back in place and tighten the screws to secure it.

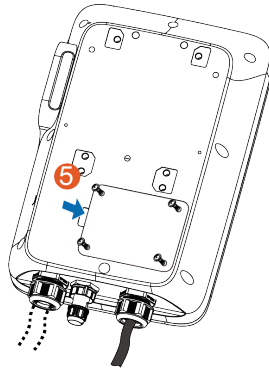

-- End

3.4.3 RS485 Communication Connection



In the stand-alone usage application scenario, you may connect an RS485 cable to the meter to enable ALM function.



For the Residential Hybrid + AC Charging Solution, the RS485 communication connection is needed to connect the AC Charger to SUNGROW's 1-phase inverter (SHRS).

Step 1 Crimp both ends of the Ethernet cable using a crimping tool.



You will receive one of the following two RJ45 terminal components, please refer to the actual product you receive.

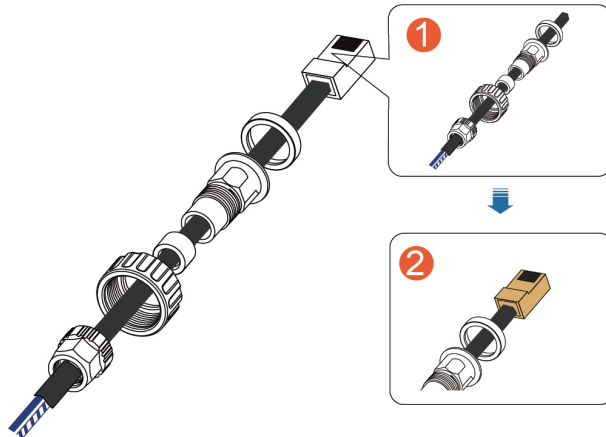


figure 3-2 RJ45 screw connector(A)


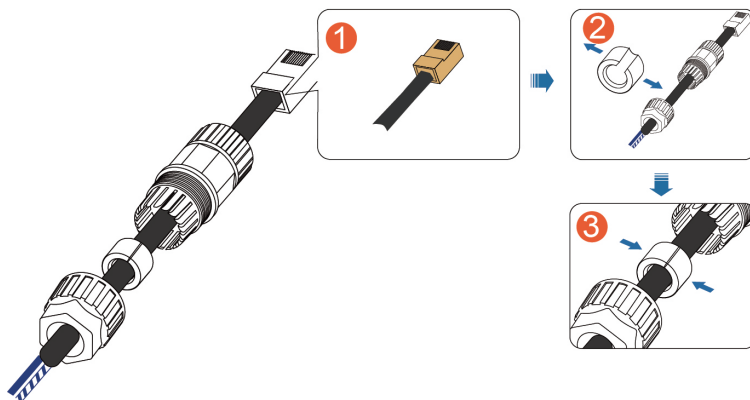


figure 3-3 RJ45 screw connector(B)




Ensure that the blue wire and the blue-white wire is correctly crimped.
The blue wire (PIN 4) connects to 485B, and the blue-white wire (PIN 5) connects to 485A.

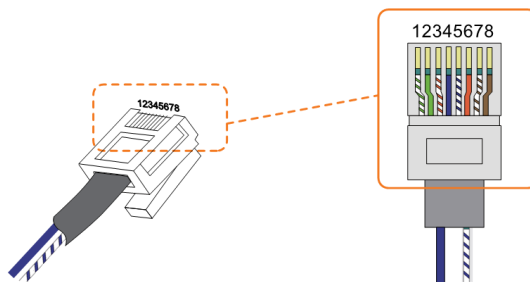

Step 2 Insert the RJ45 connector to the RJ45 jack.

Step 3 Install seals for the Ethernet cable in sequence.

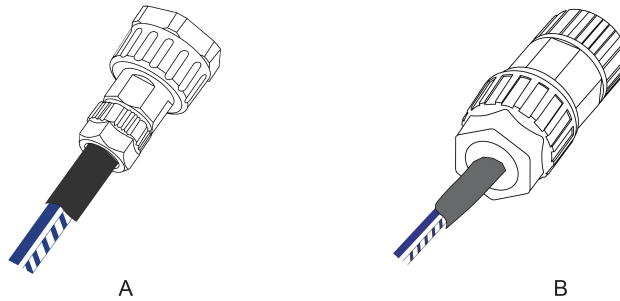

Ensure that the cable is secured.

Step 4 Connect the charger to a Smart Energy Meter or a SUNGROW Hybrid inverter.

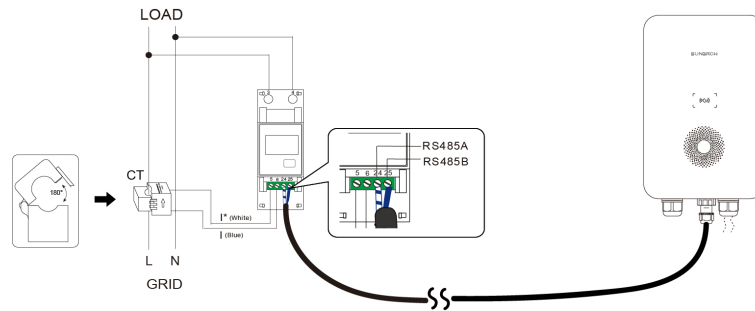


figure 3-4 Connect to a Smart Energy Meter

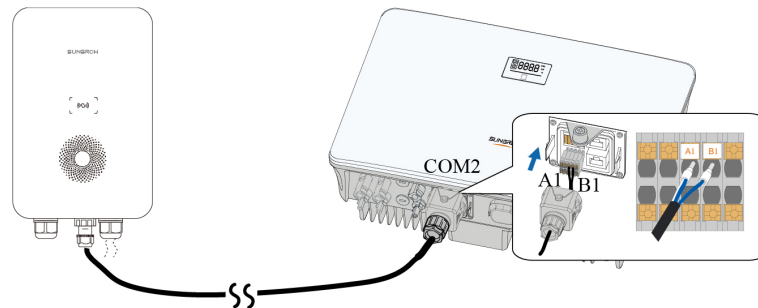


figure 3-5 Connect to an inverter(SHRS)

-- End

3.5 Wall-Mounted Installation

Install the charger on the wall using the provided wall-mounting bracket and expansion screw sets.



- Installation height of the charger from ground: 1.1m recommended
- The load-bearing capacity of the installation carrier must be at least 4.5 times the weight of the charger.


Step 1 Install the backplate.

- 1 Hold the backplate in the desired position on the wall and mark the positions of the drill holes.

NOTICE


Before drilling the hole for the backplate, locate and avoid water pipes and electrical wires in the wall.

- 2 Drill holes at the marked positions using a hammer drill. (Diameter: 6 mm; depth: 45 mm)
- 3 Insert the dowel into the holes.
- 4 Place the backplate on the wall and tighten the screws using a screwdriver to secure the backplate.

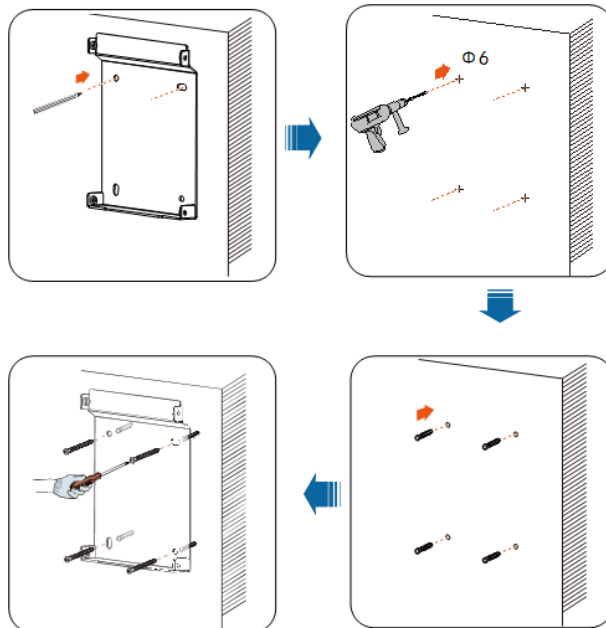

Step 2 Install the charging cable bracket.


- 1 Hold the charging cable bracket in the desired position on the wall and mark the positions of the drill holes.
- 2 Drill holes at the marked positions using a hammer drill.
- 3 Insert the dowel into the hole.
- 4 Place the charging cable bracket on the wall, and tighten the screws to secure the charging cable bracket using a screwdriver.

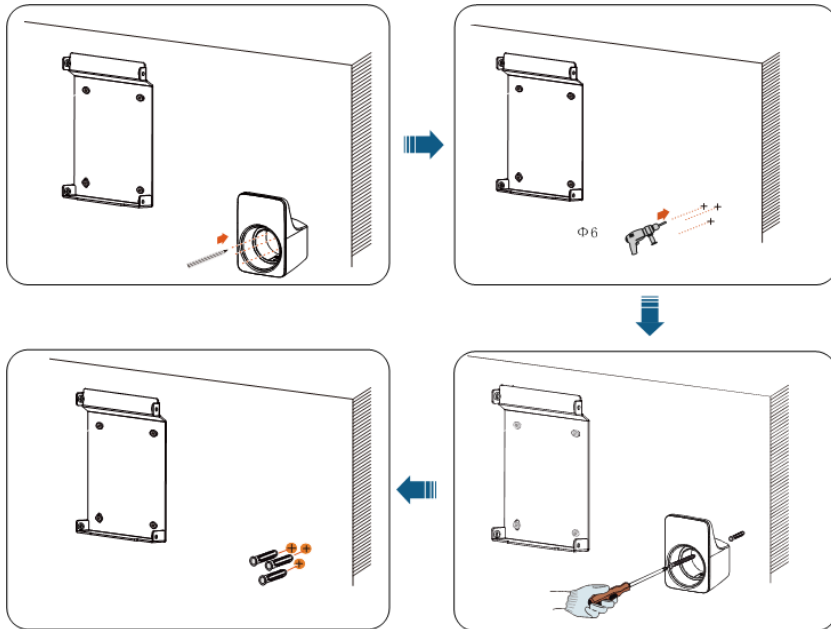


It is recommended that the charging cable bracket be positioned at the lower right side of the charger, about 20 cm away from the charger. The distance shall be adjusted according to the actual situation.

Step 3 Mount the charger.


- 1 Secure the upper mounting plate and the lower mounting plate on the back of the charger using a screwdriver. (Torque: $1.2 \pm 0.1 \text{ N}\cdot\text{m}$)

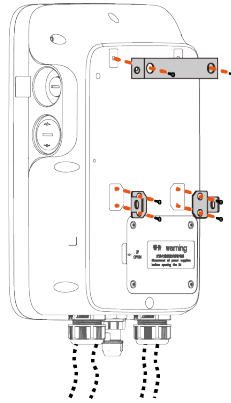

- 2 Hang the charger onto the backplate.

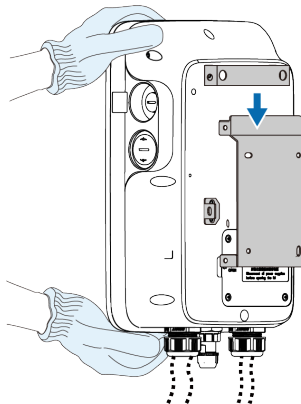

- 3 Secure the upper and lower mounting plates to the backplate with screws. (Torque: $1.2 \pm 0.1 \text{ N}\cdot\text{m}$).

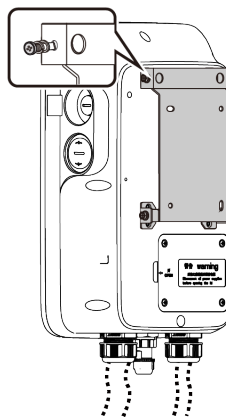

-- End



Installation height of the connector socket from ground: 1.1m recommended, from charger: 0.5m recommended

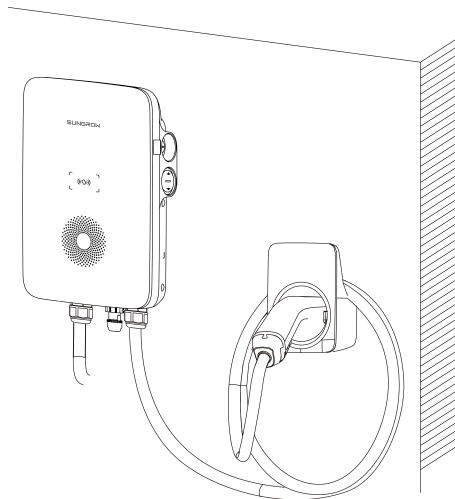


figure 3-6 Wall-mounted charger

3.6 Pole-Mounted Installation



It is recommended to install the pole on a solid support surface (such as concrete or tarmac). If conditions do not permit, please install the foundation first, and then install the mounting pole.

3.6.1 Foundation Installation

The base should be 100 mm above the ground, and the exterior dimensions of the front, back, left, and right side columns should be greater than 100 mm. Ensure that there are openings for cables.


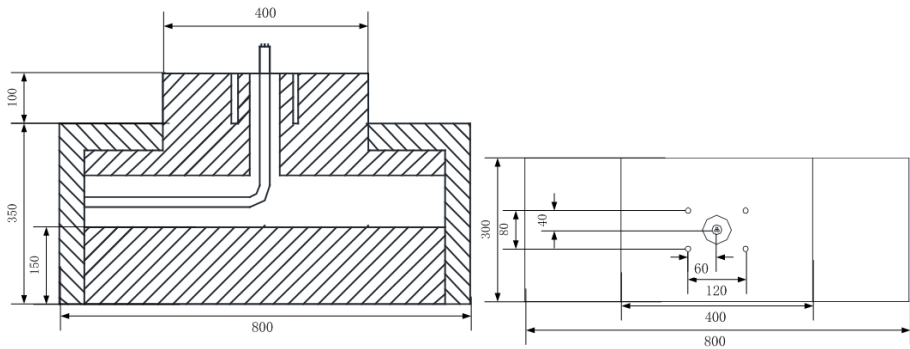


figure 3-7 Front view and top view (unit: mm)

3.6.2 Pole Installation


Step 1 Connect the AC cable.

- 1 Remove the cover plate on the back of the pole using a cross screwdriver.
- 2 Lead the AC cable through the bottom into the pole.
- 3 Grab the AC cable when it reaches the cover plate and take out the end of the cable from the AC cable outlet.
- 4 Pull the cable out to an appropriate length and close the cover plate.

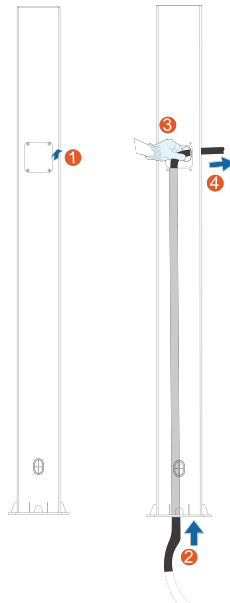

Step 2 Mount the charger.

- 1 Place the pole on a solid and flat surface, and mark the positions of the drill holes.
- 2 Drill holes at the marked positions using a hammer drill. (Diameter: 12 mm; depth: 70 mm)
- 3 Insert the dowel into the holes.
- 4 Tighten the expansion screw using a screwdriver.

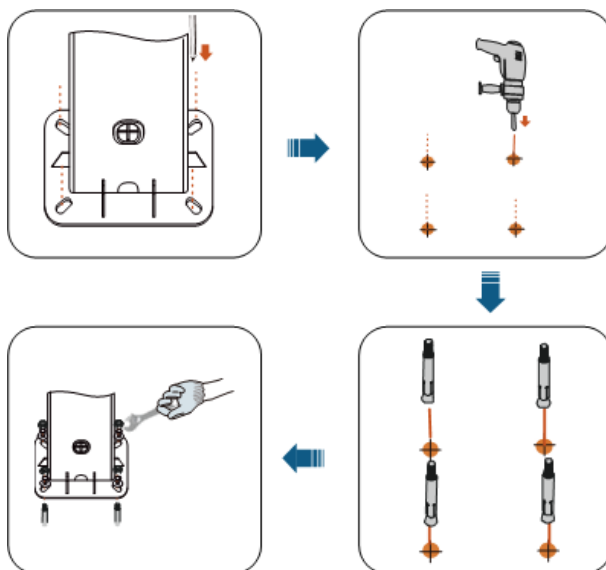


- 5 Check whether the pole is firmly installed.

Step 3 Install the backplate and the charging cable bracket.

- 1 Align the holes in the backplate with the holes drilled in the pole, and secure the backplate to the pole with screws.
- 2 Align the holes in the bracket with the holes drilled in the pole, and secure the bracket to the pole with screws.
- 3 Check whether the backplate and the charging cable bracket are firmly installed.

Step 4 Install the upper mounting plate and lower mounting plate.

- 1 Place the charger face-down on a clean and flat surface, and secure the upper and lower mounting plates to the pole using a screwdriver.
- 2 Ensure that the upper mounting plate and the lower mounting plate are firmly installed.
- 3 Hang the charger onto the backplate.
- 4 Secure the upper and lower mounting plates to the backplate.
- 5 Check whether the charger is correctly installed on the pole.

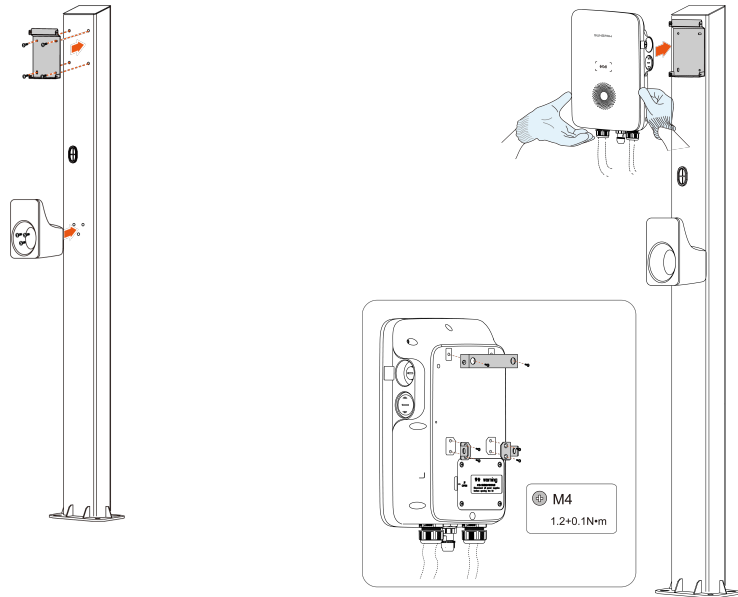

-- End

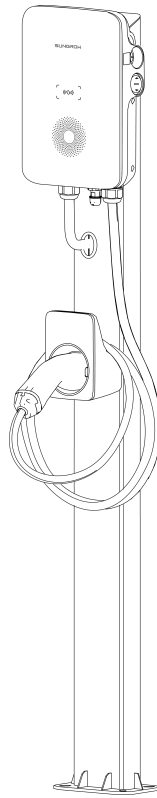


figure 3-8 Pole-mounted charger

4 Inspection before Commissioning

table 4-1 Requirements before commissioning

Item	Description
Location	The charger is correctly mounted at a place that is convenient for operation and maintenance.
Charger	The charger is firmly and securely installed.
Cable	Cables are correctly and firmly connected, and are adequately protected from damage.
Current leakage protection	The AC input's current leakage protection switch is reasonable.
Clearance	The charger has sufficient cooling space and there is no other stuff or components are left on the top of the charger.

Step 1 Ensure that all requirements are met before commissioning.

Step 2 Turn on the current leakage protection switch of the AC input.

Step 3 Power on the charger.

The blue LED blinks slowly which indicates the charger is in standby mode.

- - End

5 Troubleshooting

table 5-1 Fault Resolution

Problem	Possible Cause	Solution
Overvoltage	1 The grid voltage at the input end of the charger exceeds .	<p>Usually, the charger will be re-connected to the grid once the voltage falls inside the range of 251V~209V for 2 minutes. If the problem occurs repeatedly:</p> <ol style="list-style-type: none"> 1 Measure the actual grid voltage, and contact local power company for solutions if the grid voltage is above . 2 Contact Sungrow Customer Service if the problem persists.
	2 The grid voltage is still above after overvoltage.	
Undervoltage	1 The grid voltage at the input end of the charger is below .	<p>Usually, the charger will be re-connected to the grid once the voltage falls inside the range of 251V~209V for 2 minutes. If the problem occurs repeatedly:</p> <ol style="list-style-type: none"> 1 Measure the actual grid voltage, and contact the local power company for solutions if the grid voltage is below . 2 Check if the AC cables are firmly connected. 3 Contact Sungrow Customer Service if the problem persists.
	2 The grid voltage is still below after undervoltage.	

Problem	Possible Cause	Solution
Overfrequency	<ol style="list-style-type: none"> 1 The mains AC frequency exceeds 63 Hz. 2 The grid frequency is still above 61 Hz after overfrequency. 	<p>Usually, the charger will be re-connected to the grid once the grid returns to normal. If the problem occurs repeatedly:</p> <ol style="list-style-type: none"> 1 Measure the actual grid frequency, and contact the local power company for solutions if the grid frequency is above 61 Hz. 2 Contact Sungrow Customer Service if the problem persists.
Underfrequency	<ol style="list-style-type: none"> 1 The mains AC frequency is below 47 Hz. 2 The grid frequency is still below 49 Hz after underfrequency. 	<p>Usually, the charger will be re-connected to the grid once the grid returns to normal. If the problem occurs repeatedly:</p> <ol style="list-style-type: none"> 1 Measure the actual grid frequency, and contact the local power company for solutions if the grid frequency is below 49 Hz. 2 Contact Sungrow Customer Service if the problem persists.
Leakage current	The DC leakage current is above 6 mA	
EV Overcurrent	<p>Output current is above over-current point.</p> <p>Mark : Adjust the over-current value following the actual current, below 20 A, over-current value is actual current + 2 A; Above 20 A, over-current value is 1.1 times the actual current; If there is no define current, which is 1.1 time the max. current.</p>	<ol style="list-style-type: none"> 1 Stop charging and pull out the charging connector. When the charger returns to normal, try charge again. If the problem occurs repeatedly, contact the EV manufacturer's customer service. 2 Stop charging and pull out the charging connector. Contact Sungrow Customer Service if the problem persists.

Problem	Possible Cause	Solution	
Charger	Relay adhesion	The relay is stuck and cannot be disconnected.	Restart the charger and try again. If the problem occurs repeatedly, contact Sungrow Customer Service.
	Leakage current detection circuit failure	<ol style="list-style-type: none"> 1 The CT terminal has bad connection or the CT is malfunctioning. 2 The RCD circuit is abnormal. 	
	Relay overtemperature	The temperature of the main relay is too high. It might be a hardware problem.	
	CP failure	Abnormal CP circuit on the main board	
Wiring	Input terminal overtemperature	<ol style="list-style-type: none"> 1 The input terminal is loosely connected which causes bad connection. 2 The cable's current-carrying capacity does not meet the requirements. 	<ol style="list-style-type: none"> 1 Ensure that the AC cable is tightly connected, that the cable used meets requirements, and L and N wires are correctly connected. 2 Contact Sungrow Customer Service if the problem persists.
	Reverse polarity	L and N wires are connected reversely.	
	Meter communication abnormal	No communication between the meter and the charger for 1 minute.	
CT fault	The bus current measured by the CT is smaller than the actual output current of the charger. Something abnormal with the CT.	Replace the CT, or turn off the load balancing function.	

table 5-2 LED Signals that indicates abnormal conditions

Charger Status	LED Signals
Leakage current	Red light is on for 0.5s, off for 0.5s, and flashes 4 times, and then off for 3s. Cyclic
CP failure	Red light is on for 0.5s, off for 0.5s, and flashes 5 times, and then off for 3s. Cyclic
Overcurrent	Red light is on for 0.5s, off for 0.5s, and flashes 6 times, and then off for 3s. Cyclic
Relay adhesion	Red light is on for 0.5s, off for 0.5s, and flashes 7 times, and then off for 3s. Cyclic
Leakage current circuit abnormal	Red light is on for 0.5s, off for 0.5s, and flashes 8 times, and then off for 3s. Cyclic
Input terminal over-temperature	Red light is on for 0.5s, off for 0.5s, and flashes 9 times, and then off for 3s. Cyclic
Relay over-heat	Red light is on for 0.5s, off for 0.5s, and flashes 10 times, and then off for 3s. Cyclic
Undervoltage	Red light is on for 0.5s, off for 0.5s, and flashes 11 times, and then off for 3s. Cyclic
Overvoltage	Red light is on for 0.5s, off for 0.5s, and flashes 12 times, and then off for 3s. Cyclic
Over-frequency	Red light is on for 0.5s, off for 0.5s, and flashes 13 times, and then off for 3s. Cyclic
Under-frequency	Red light is on for 0.5s, off for 0.5s, and flashes 14 times, and then off for 3s. Cyclic
Security chip failure	Red light is on for 0.5s, off for 0.5s, and flashes 16 times, and then off for 3s. Cyclic
CT abnormal	Red light is on for 0.5s, off for 0.5s, and flashes 17 times, and then off for 3s. Cyclic
ALM Meter communication abnormal	Red light is on for 0.5s, off for 0.5s, and flashes 18 times, and then off for 3s. Cyclic
Alarms (ground alarm, disassembly alarm, reverse phase alarm and etc.)	Red light is on



If the above faults cannot be removed, please contact Sungrow.

6 iEnergyCharge App

iEnergyCharge App is a tool that allows users to operate and manage their EV chargers. Users can complete account settings and charger configuration, manage charge cards, operate the charger, and reach customer service on the App.



- iEnergyCharge needed for commissioning only if the charger is used stand-alone, otherwise need to use iSolarCloud.
- Depending on the version of iEnergyCharge you are using, the user interface might be slightly different.

6.1 Install iEnergyCharge App

Requirements

- Mobile OS: Android 6.0 or later, iOS 11.0 or later;
- The phone can connect to WLAN or 2G/3G/4G/5G network;
- The phone has sufficient storage space to install the App;
- The phone has sufficient battery power.

Steps

Step 1 Search for **iEnergyCharge** in Google Play Store or App Store (iOS), or scan the QR code below with a mobile phone, and download the App following the onscreen instructions.



iEnergyCharge

Step 2 Tap the downloaded installation package and follow the onscreen instructions to complete the installation.


-- End

6.2 Create an Account

Two types of account are available, Owner and Retailer/Installer.



- **Retailer/Installer:** Users who provides services for owners. Installer users can use the iEnergyCharge App for guided commissioning and site setup, global monitoring of the operation of charging pools and equipment, and can perform operational and maintenance repairs via the App when equipment fails. Retailer/Installer accounts do not support starting or stopping charging.
- **Owner:** Users who will own or already own charging pools. Owner users can use the iEnergyCharge App for charging, card management, and configuring chargers.
- After logging into the App, the content displayed varies depending on the user role and device type.

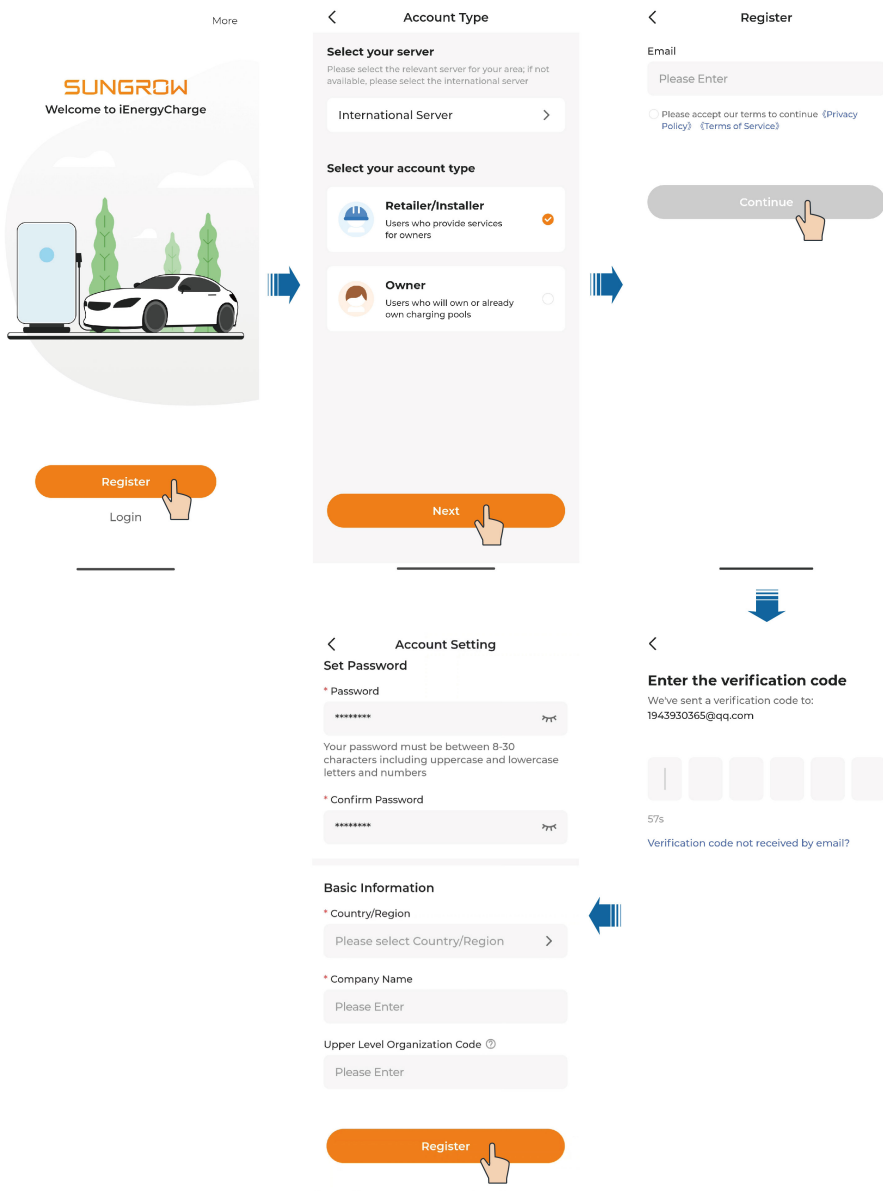

Step 1 Tap **Register**.

Step 2 Select a **Server**, then choose to create an **Retailer/Installer** or **Owner** account.

Step 3 Enter an email address, agree to the privacy policy and terms of service, and tap **Continue**.

Step 4 Enter the verification code you have received through email. If you do not receive a code by e-mail, please check your spam folder or ask customer service or the installer for the e-mail address that can be added to the safe senders.



- Users in mainland China may choose **Chinese Server**. Users in Europe may choose **European Server** and those in Australia may choose **Australian Server**. Users in other countries/regions may choose **International Server**.
- You can reach your upper-level retailer/installer for the "Code of Upper Level Installer/Retailer". Entering this code indicates that your organization is subordinate to an upper-level retailer/installer. If there is no upper-level retailer/installer organization, it is not necessary to fill in.


Step 5 Enter a password, which should be 8–32 characters long and contain uppercase letters, lowercase letters, and numbers. Then, select the country/region, and tap **Register**. An account is now created.

-- End

6.3 Log in to an Account

Requirements

- You have installed the iEnergyCharge App;
- You have created an iEnergyCharge account, or obtained an account and password from the retailer/installer or SUNGROW.

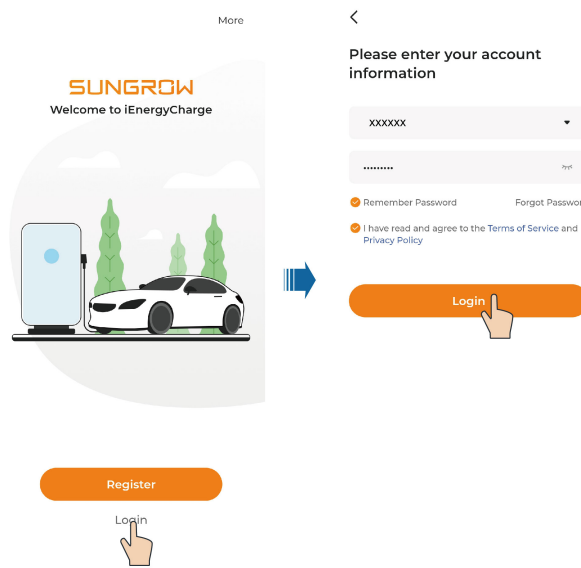

Step 1 Open the iEnergyCharge App, and tap **Login**.

Step 2 Enter your account name and password on the login screen, and tap **Login**. You will then go to the **Home** screen of the App.

-- End

6.4 Device Operation and Maintenance

For more detailed information regarding the use of iEnergyCharge App, see [iEnergyCharge User Manual](#). You can also open the App and choose “**Account**→**Support**→**User Manual**” to view the manual.

Alternatively, you can scan the QR code below to view the manual.



7 Commissioning via iSolarCloud



- If the charger works under EMS mode, proceed with commissioning on the iSolarCloud App.
- If the charger works under EMS mode, make sure it is connected to the inverter via the RS485 cable. For details on the RS485 cable connection, see "[3.4.3 RS485 Communication Connection](#)".

Download the iSolarCloud App

Option 1

Search for "iSolarCloud" in an application store, and download and install the App on your device.

- Google Play (Android)
- App Store (iOS)

Option 2

Scan the following QR code to download and install the App according to the prompt information.



Commissioning on the iSolarCloud App

For detailed instructions for commissioning, please refer to the user manual of the inverter:

[1-Phase Hybrid Inverter User Manual](#)

8 Appendix

8.1 Technical Data

table 8-1 Technical Data

Technical parameters	AC007UK-01 L1	AC007UK-01
AC Input		
Nominal grid voltage	230 Vac (± 10 %)	
Nominal grid frequency	50 Hz / 60 Hz	
AC Output		
Max. charging power	7.4 kW	
Max. charging current	32 A	
Protection & Function		
Integrated DC fault current detection	Yes, 6 mA	
Overload protection	Yes	
Over-temperature protection	Yes	
Surge protection	AC Type II	
PEN protection	Yes	
Mechanical impact protection	IK08	
ALM (Adaptative load management)	Yes	
User interface & Communication		
Display	LED indicator and App	
Authentication	RFID-card / iEnergyCharge App	RFID-card / iSolarCloud App

Technical parameters	AC007UK-01 L1	AC007UK-01
Charging mode	-	Eco charging / Fast Charging / Scheduled Charging / Customized charging
Communication interface	WLAN, RS485 (to external meter)	WLAN, RS485 (to Sungrow inverter)
Communication protocol	OCPP 1.6 J	
General data		
Dimensions (W * H * D)	205 mm * 310 mm * 92 mm	
Weight	4.2 kg	
Installation method	Wall-mounting (default) Stand column (optional)	
Degree of protection	IP65	
Operating ambient temperature range	-30 °C - 50 °C	
Allowable relative humidity range	5 % - 95 % (non-condensing)	
Cooling method	Natural convection	
Max. operating altitude	≤ 2000 m	
AC cable specification	Cross-section 6 mm ² * 3	
Charging connector	AC Type 2	
Charging cable length	7 m	
Standby self-consumption	< 5 W	
Warranty	3 years (standard)	5 years (standard)
Compliance	UKCA, No.1467, EN / IEC 61851-1, EN / IEC 61851-21-2	

8.2 Quality Assurance

In the event of a defect during the warranty period, SUNGROW will provide free of charge service or replace the product with a new one.

Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

Conditions

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

Exclusion of Liability

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.
- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel, not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond the stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of the above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.

8.3 Declaration of Conformity

Within the scope of the EU directives:
Radio Equipment Directive (RED) 2014/53/EU

8.4 Firmware Update

The charger actively maintains security updates within 3 years after its first launch. The operation and maintenance personnel will check for firmware updates at least every six months and record them in the corresponding firmware version checklist.

In addition, any updates to the charging station will be pushed to you through the iEnergy-Charge application.

8.5 Contact Information

In case of questions about this product, please contact us.

We need the following information to provide you with the best assistance:

- Model of the device
- Serial number of the device
- Fault code/name
- Brief description of the problem

For detailed contact information, please visit <https://en.sungrowpower.com/contactUS>.

SUNGROW

Sungrow Power Supply Co., Ltd.
www.sungrowpower.com